plugin 848










DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON USE this connection for the ECU READING ONLY

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
	ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
	NERO BLACK	MASSA GND	
	GIALLO YELLOW	KLINE	
	VERDE GREEN	CAN LOW	
	BIANCO WHITE	CAN HIGH	
	GRIGIO GREY	POL4 BOOT	
	BLU BLUE	POL5 CNF1	
	VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	
	MARRONE BROWN	RESET [®]	



ECU CONNECTOR

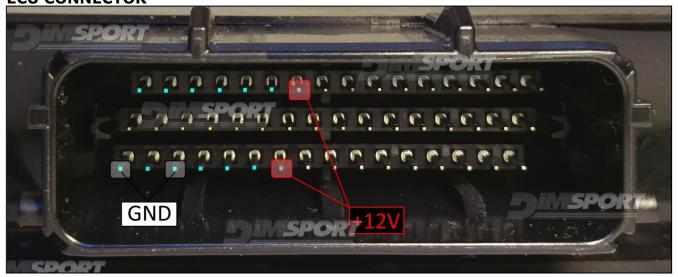

WARNING:

on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.

DIRECT CONNECTION - ECU READING:

For the READING procedure use the FLAT cable F34NTF53

For the READING procedure us	1 25 2 26	
Pin	Colore	
FIII	Colour	
11	Non usato	
57/Au	Not used	-
1.2	Non usato Not used	
4.0	Non usato	
13	Not used	
14	Non usato	
2.1	Not used	
15	Non usato Not used	
4.0	Non usato	
16	Not used	
17	Non usato	
(42-44)	Not used	
18	Grigio Grey	
10	Bianco	
19	White	
20	Nero	
	Black	
21	Marrone	
5.5	Brown	
2/2	Rosso	
2.00	Red Arancio	
23	Orange	
24	Giallo	
24	Yellow	
25	Verde Croop	(Contract)
200	Green Non usato	
26	Not used	

To get access to the communication pads for the reading procedure you must remove part of the silicon that covers the ECU board. After properly removing the silicon and before connecting the wirings please check that the vehicle starts fine and that there are no fault codes or warning lights on the dashboard.





DIRECT CONNECTION - ECU WRITING:

For the WRITING procedure use the cable F34NTA13 directly connected to the ECU. Make sure that the POWER led (red) on Trasdata is ON.

COLORE F		DESCRIZIONE DESCRIPTION
MARRONE BROWN		воот
BLU BLUE		CNF
GI	GIALLO YELLOW OR ALLO LLOW	RXD
GRIGIO GREY	VERDE GREEN	TXD
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	OSSO RED	POSITIVO DIRETTO POWER BATTERY
NERO BLACK		MASSA GND

