
# plugin 1607

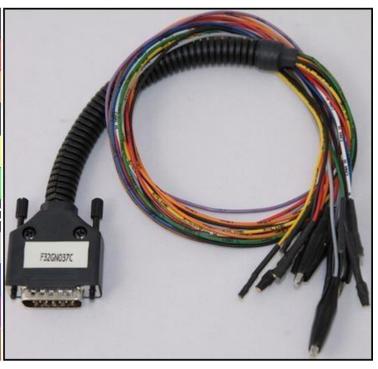

### **DIRECT CONNECTION**

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON USE this connection for the ECU READING ONLY

COLORE FILO	DESCRIZIONE	
WIRE COLOUR	DESCRIPTION	
ROSSO	POSITIVO DIRETTO	
RED	POWER BATTERY	
ARANCIO	POSITIVO SOTTO QUADRO	
ORANGE	POWER SWITCH ON	
NERO	MASSA	
BLACK	GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	ICAN HIGH	
GRIGIO	POL4	
GREY	BOOT	
BLU	POL5	
BLUE	CNF1	
VIOLA/GRIGIO	TENSIONE PROG.	
PURPLE/GREY	PROG. VOLTAGE	
MARRONE BROWN	RESET	



### **ECU CONNECTOR**



#### WARNING:


on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.

### **DIRECT CONNECTION - ECU READING:**

For the READING procedure use the FLAT cable F34NTF53

Pin         Colore Colour           11         Non usato Not used           12         Non usato Not used           13         Non usato Not used           14         Non usato Not used           15         Non usato Not used           16         Blu Blue           17         Viola Violet           Violet         Grigio Grey           19         White           Nero Black         Nero Black           21         Marrone Brown Rosso Red Arancio Orange Giallo Yellow           23         Orange Giallo Yellow           24         Yellow	1 11 25 26 26			
12	Pin	HARACTE CONTINUE TO		
12	11			
12	THE COLUMN TO TH			
14	12	AND DOMESTICATED TO THE PROPERTY OF THE PROPER		
14	13	V 9007 CUSC 50 00 CUSC 50 CUSC 50 CUSC		
Not used   Non usato   Not used				
15	14	***************************************		
16	15	Non usato		
17				
17  Viola Violet  18  Grigio Grey  19  Bianco White  20  Nero Black  21  Marrone Brown Rosso Red Arancio Orange Giallo Yellow  Vordo	16	10.5000		
18 Grigio Grey  19 Bianco White  20 Nero Black  21 Marrone Brown Rosso Red Arancio Orange Giallo Yellow Wardo	17			
19 Bianco White  20 Rero Black  21 Marrone Brown Rosso Red Arancio Orange Giallo Yellow Vorde	17_			
19	18			
20  Nero Black  21  Marrone Brown Rosso Red Arancio Orange Giallo Yellow Vorde		Grey Bianco		
21 Marrone Brown Rosso Red Arancio Orange Giallo Yellow Vorde	19			
21 Marrone Brown Rosso Red Arancio Orange Giallo Yellow Vorde	20	SECULA COL		
Brown Rosso Red Arancio Orange Giallo Yellow		Black		
Brown Rosso Red Arancio Orange Giallo Yellow	21	Marrone		
23 Red Arancio Orange Giallo Yellow		Brown		
23 Arancio Orange Giallo Yellow	22	DA 850 M PMD D		
23 Orange Giallo Yellow				
24 Yellow	23	Orange		
Vordo	24			
velue		Verde		
Green Green	25	Green		
Non usato Not used	26		-	

To get access to the communication pads For the reading procedure you must remove part of the silicon that covers the ECU board. After properly removing the silicon and before connecting the wirings please check that the vehicle starts fine and that there are no fault codes or warning lights on the dashboard.

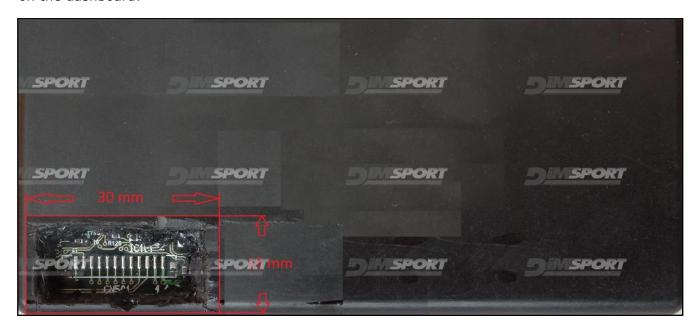



### **DIRECT CONNECTION - ECU WRITING:**

For the WRITING procedure use the cable F34NTA13 directly connected to the ECU. Make sure that the POWER led (red) on Trasdata is ON.

COLORE F		DESCRIZIONE DESCRIPTION	F34NTA13
	RRONE OWN	воот	SPORT www.dimepot.com
	BLU LUE	CNF	
GI	GIALLO YELLOW OR ALLO LLOW	RXD	
GRIGIO GREY	VERDE GREEN	TXD	
100	OSSO RED	POSITIVO DIRETTO POWER BATTERY	
	ERO _ACK	MASSA GND	

