
plugin 1702

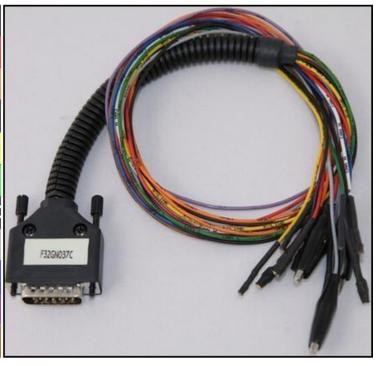

DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON USE this connection for the ECU READING ONLY.

COLORE FILO	DESCRIZIONE
WIRE COLOUR	DESCRIPTION
ROSSO	POSITIVO DIRETTO
RED	POWER BATTERY
ARANCIO	POSITIVO SOTTO QUADRO
ORANGE	POWER SWITCH ON
NERO	MASSA
BLACK	GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO	POL4
GREY	BOOT
BLU	POL5
BLUE	CNF1
	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET [®]



ECU CONNECTOR



WARNING:


on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure

DIRECT CONNECTION - ECU READING:

For the READING procedure use the FLAT cable F34NTF53

	11 25 12 26	
Pin	Colore Colour	
11	Non usato	
57/MH	Not used Non usato	
12	Not used	
13	Non usato Not used	
100 mg/m	Not used Non usato	
14	Not used	
15	Non usato Not used	
16	Non usato	
16	Not used	
17	Non usato Not used	
18	Grigio	
18	Grey	
19	Bianco White	
to gra	Nero	
20	Black	
21	Marrone Brown	
22	Rosso Red	
- Comment	Arancio	
23	Orange	
24	Giallo Yellow	
25	Verde	
	Green	
26	Non usato Not used	

To get access to the communication pads for the reading procedure you must remove part of the silicon that covers the ECU board. After properly removing the silicon and before connecting the wirings please check that the vehicle starts fine and that there are no fault codes or warning lights on the dashboard.

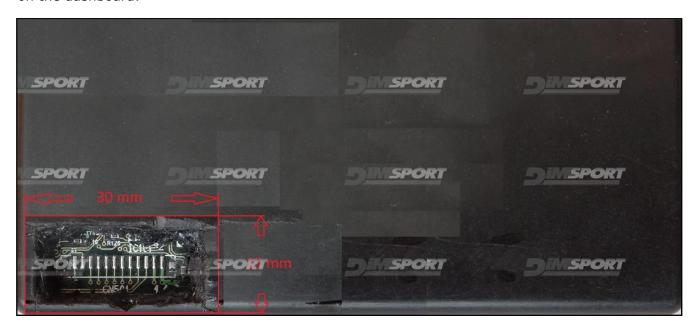



DIRECT CONNECTION - ECU WRITING:

For the WRITING procedure use the cable F34NTA13 directly connected to the ECU. Make sure that the POWER led (red) on Trasdata is ON

COLORE F		DESCRIZIONE DESCRIPTION
MARRONE BROWN		воот
BLU BLUE		CNF
GI	GIALLO YELLOW OR ALLO LLOW	RXD
GRIGIO GREY	VERDE GREEN	TXD
	OSSO RED	POSITIVO DIRETTO POWER BATTERY
NERO BLACK		MASSA GND

