plugin 1600



DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON USE this connection for the ECU READING ONLY

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
	ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
5	NERO BLACK	MASSA GND	
	GIALLO YELLOW	KLINE	
	VERDE GREEN	CAN LOW	
	BIANCO WHITE	CAN HIGH	
	GRIGIO GREY	POL4 BOOT	
	BLU BLUE	POL5 CNF1	
	VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	
	MARRONE BROWN	RESET	



ECU CONNECTOR



WARNING:


on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.

DIRECT CONNECTION - ECU READING:

For the READING procedure use the FLAT cable F34NTF53

Pin Colore Colour 11 Non usato Not used 12 Non usato Not used 13 Non usato Not used 14 Non usato Not used 15 Non usato Not used 16 Blu Blue 17 Viola Violet Violet Grigio Grey 19 White Nero Black Nero Black 21 Marrone Brown Rosso Red Arancio Orange Giallo Yellow 23 Orange Giallo Yellow 24 Yellow		11 25 12 26	
12	Pin	MARKET CONTINUE TO	
12	11		
12	THE COLUMN TO TH		
14	12	AND DOMESTICATED TO THE PROPERTY OF THE PROPER	
14	13	V 9007 CUSC 50 00 CUSC 50 CUSC 50 CUSC	
Not used Non usato Not used			
15	14	***************************************	
16	15	Non usato	
17			
17 Viola Violet 18 Grigio Grey 19 Bianco White 20 Nero Black 21 Marrone Brown Rosso Red Arancio Orange Giallo Yellow Vordo	16	10.5000	
18 Grigio Grey 19 Bianco White 20 Nero Black 21 Marrone Brown Rosso Red Arancio Orange Giallo Yellow Wardo	17		
19 Bianco White 20 Rero Black 21 Marrone Brown Rosso Red Arancio Orange Giallo Yellow Vorde	17_		
19	18		
20 Nero Black 21 Marrone Brown Rosso Red Arancio Orange Giallo Yellow Vorde		Grey Bianco	
21 Marrone Brown Rosso Red Arancio Orange Giallo Yellow Vorde	19		
21 Marrone Brown Rosso Red Arancio Orange Giallo Yellow Vorde	20	SECULA COL	
Brown Rosso Red Arancio Orange Giallo Yellow		Black	
Brown Rosso Red Arancio Orange Giallo Yellow	21	Marrone	
23 Red Arancio Orange Giallo Yellow		Brown	
23 Arancio Orange Giallo Yellow	22	DA 850 M PMD D	
23 Orange Giallo Yellow			
24 Yellow	23	Orange	
Vordo	24		
velue		Verde	
Green Green	25	Green	
Non usato Not used	26		-

To get access to the communication pads For the reading procedure you must remove part of the silicon that covers the ECU board. After properly removing the silicon and before connecting the wirings please check that the vehicle starts fine and that there are no fault codes or warning lights on the dashboard.

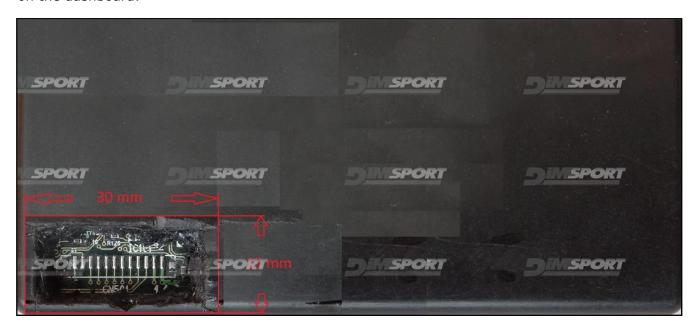



DIRECT CONNECTION - ECU WRITING:

For the WRITING procedure use the cable F34NTA13 directly connected to the ECU. Make sure that the POWER led (red) on Trasdata is ON.

COLORE F		DESCRIZIONE DESCRIPTION
MARRONE BROWN		воот
	BLU LUE	CNF
GI	GIALLO YELLOW OR ALLO LLOW	RXD
GRIGIO GREY	VERDE GREEN	TXD
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	OSSO RED	POSITIVO DIRETTO POWER BATTERY
NERO BLACK		MASSA GND

