
plugin 1616

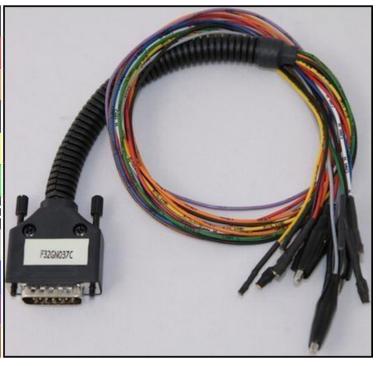

DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON USE this connection for the ECU READING ONLY

COLORE FILO WIRE COLOUR		
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	ICAN HIGH	
GRIGIO GREY	POL4 BOOT	
BLU BLUE	POL5 CNF1	
	TENSIONE PROG. PROG. VOLTAGE	
MARRONE BROWN	RESET	



ECU CONNECTOR



WARNING:


on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.

DIRECT CONNECTION - ECU READING:

For the READING procedure use the FLAT cable F34NTF53

	25 12 26	
Pin	Colore Colour	
11	Non usato Not used	
12	Non usato Not used	
13	Non usato Not used	
14	Non usato Not used	
15	Non usato Not used	
16	Blu Blue	
17	Viola Violet	
18	Grigio Grey	
19	Bianco White	
20	Nero Black	
21	Marrone Brown	
22	Rosso Red	
23	Arancio Orange	
24	Giallo Yellow	
25	Verde Green	
26	Non usato Not used	

To get access to the communication pads For the reading procedure you must remove part of the silicon that covers the ECU board. After properly removing the silicon and before connecting the wirings please check that the vehicle starts fine and that there are no fault codes or warning lights

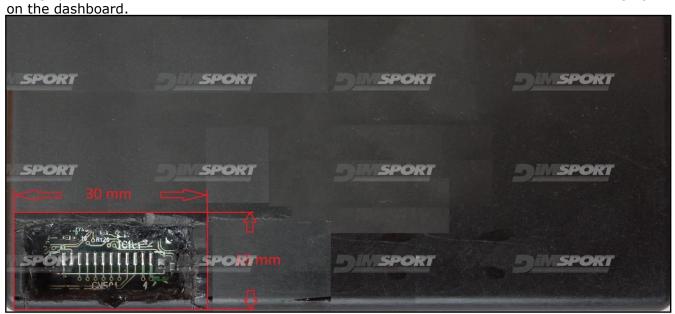



DIRECT CONNECTION - ECU WRITING:

For the WRITING procedure use the cable F34NTA13 directly connected to the ECU. Make sure that the POWER led (red) on Trasdata is ON.

COLORE F WIRE COL		DESCRIZIONE DESCRIPTION
	RRONE ROWN	воот
	BLU LUE	CNF
GI	GIALLO YELLOW OR ALLO LLOW	RXD
GRIGIO GREY	VERDE GREEN	TXD
10000	OSSO RED	POSITIVO DIRETTO POWER BATTERY
	IERO LACK	MASSA GND

