
plugin 1753

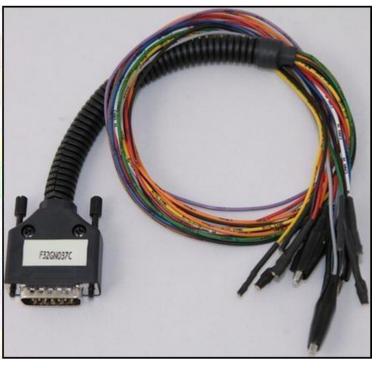


DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON USE this connection for the ECU READING ONLY

COLORE FILO	DESCRIZIONE
WIRE COLOUR	DESCRIPTION
ROSSO	POSITIVO DIRETTO
RED	POWER BATTERY
ARANCIO	POSITIVO SOTTO QUADRO
ORANGE	POWER SWITCH ON
NERO	MASSA
BLACK	GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO	POL4
GREY	BOOT
BLU	POL5
BLUE	CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET*



ECU CONNECTOR

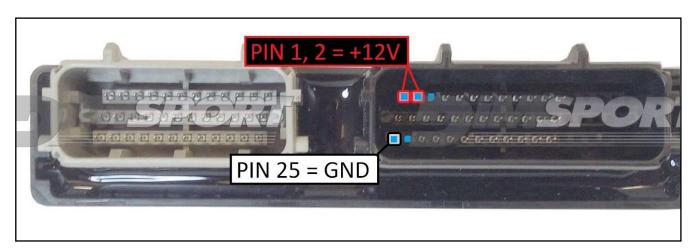

WARNING:

on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure


DIRECT CONNECTION - ECU READING:

For the READING procedure use the FLAT cable F34NTF53

1 1 25 2 12 26		
Pin	Colore	
	Coulor	
11	Non usato	
11	Not used	
12	Non usato	
12	Not used	
13	Non usato	
- 10	Not used Non usato	
14	Not used	
20,000	Non usato	
15	Not used	
4.6	Non usato	
16	Not used	
17	Non usato	
1.1	Not used	
18	Grigio	
	Grey	
19	Bianco White	
Application of the control of the co	Nero	
20	Black	
24	Marrone	
21	Brown	
22	Rosso	
22	Red	
23	Arancio	
	Orange Giallo	
24	Yellow	
25	Verde	
23	Green	
26	Non usato	
555	Not used	

To get access to the communication pads for the reading procedure you must remove part of the silicon that covers the ECU board. After properly removing the silicon and before connecting the wirings please check that the vehicle starts fine and that there are no fault codes or warning lights on the dashboard.



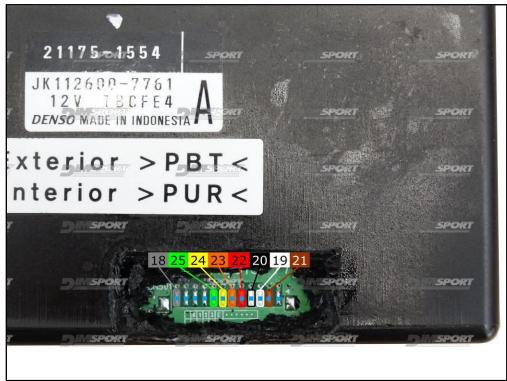

DIRECT CONNECTION - ECU WRITING:

For the WRITING procedure use the cable F34NTA13 directly connected to the ECU. Make sure that the POWER led (red) on Trasdata is ON

COLORE F		DESCRIZIONE DESCRIPTION
MARRONE BROWN		воот
BLU BLUE		CNF
GI	GIALLO YELLOW OR ALLO LLOW	RXD
GRIGIO GREY	VERDE GREEN	TXD
	OSSO RED	POSITIVO DIRETTO POWER BATTERY
NERO BLACK		MASSA GND

