
plugin 822

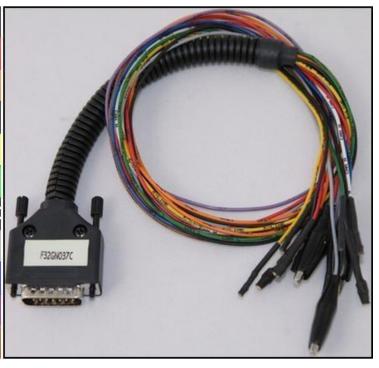


DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON USE this connection for the ECU READING ONLY

COLORE FILO	DESCRIZIONE	
WIRE COLOUR	DESCRIPTION	
ROSSO	POSITIVO DIRETTO	
RED	POWER BATTERY	
ARANCIO	POSITIVO SOTTO QUADRO	
ORANGE	POWER SWITCH ON	
NERO	MASSA	
BLACK	GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	ICAN HIGH	
GRIGIO	POL4	
GREY	BOOT	
BLU	POL5	
BLUE	CNF1	
	TENSIONE PROG. PROG. VOLTAGE	
MARRONE BROWN	RESET	



ECU CONNECTOR

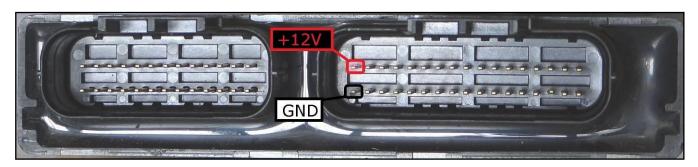

WARNING:

on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.


DIRECT CONNECTION - ECU READING:

For the READING procedure use the FLAT cable F34NTF53

1 11 25 2 12 26		
Pin	Colore Colour	
11	Non usato Not used	
12	Non usato Not used	
13	Non usato Not used	
14	Non usato Not used	
15	Non usato Not used	
16	Blu Blue	
17	Viola Violet	
18	Grigio Grey	
19	Bianco White	
20	Nero Black	
21	Marrone Brown	
22	Rosso Red	
23	Arancio Orange	
24	Giallo Yellow	
25	Verde	
26	Green Non usato Not used	

To get access to the communication pads For the reading procedure you must remove part of the silicon that covers the ECU board. After properly removing the silicon and before connecting the wirings please check that the vehicle starts fine and that there are no fault codes or warning lights on the dashboard.



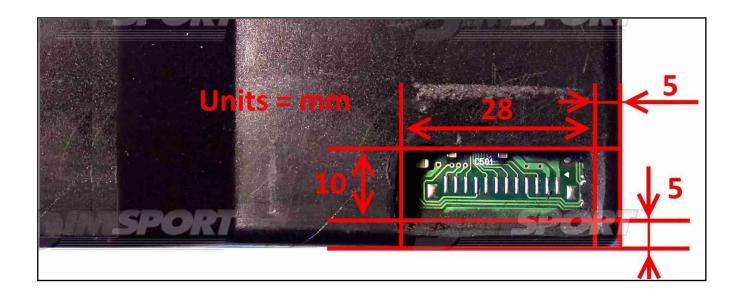



DIRECT CONNECTION - ECU WRITING:

For the WRITING procedure use the cable F34NTA13 directly connected to the ECU. Make sure that the POWER led (red) on Trasdata is ON.

COLORE F		DESCRIZIONE DESCRIPTION	F34NTA13
MARRONE BROWN		воот	SPORT www.dimepot.com
	BLU LUE	CNF	
GI	GIALLO YELLOW OR ALLO LLOW	RXD	
GRIGIO GREY	VERDE GREEN	TXD	
ROSSO RED		POSITIVO DIRETTO POWER BATTERY	
	ERO _ACK	MASSA GND	

