

PLUGIN 322

ECU upper side

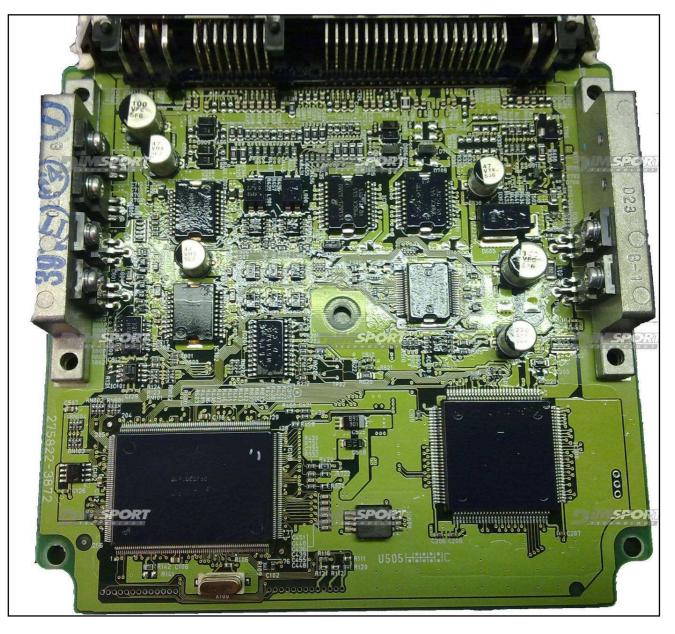

ECU lower side

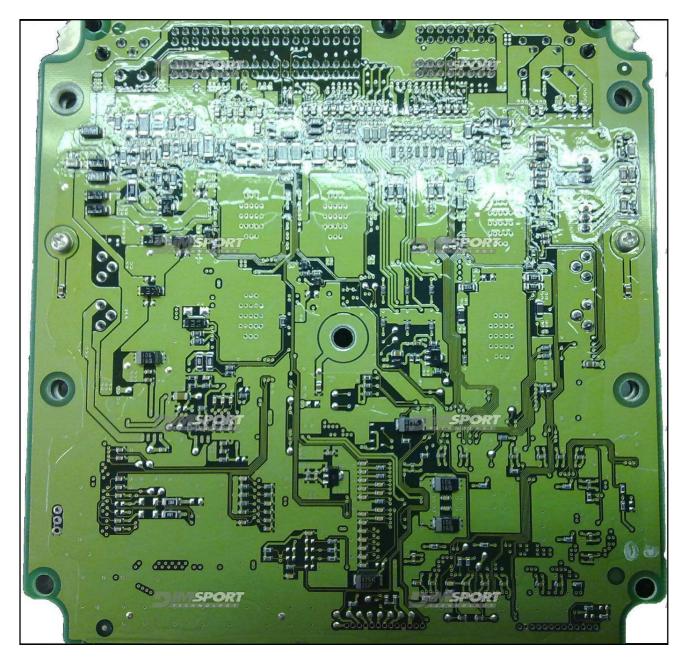

DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	ICAN HIGH	
GRIGIO GREY	POL4 BOOT	132GH037C
BLU BLUE	POL5 CNF1	Personal A
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	- SHALLA
MARRONE BROWN	RESET	

ECU CONNECTOR




WARNING:

on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.

DIRECT CONNECTION – ECU READING:


For the READING procedure use the FLAT cable F34NTF53

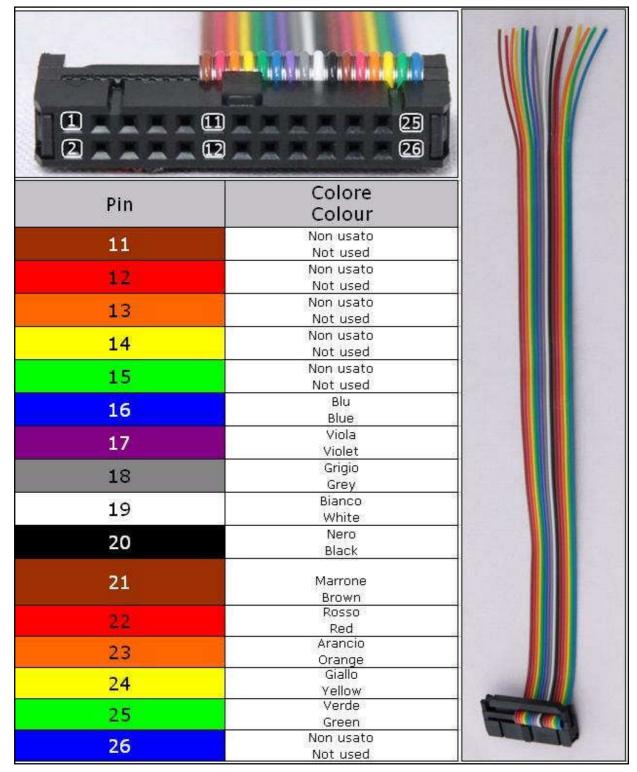

For a correct soldering procedure clean very well the soldering lay by pins from the plastic film. We suggest you to use fine grit glass paper smoothing by gentle pressure the connection lay by pins


For the reading procedure it is required a little short circuit (LINK) as shown in the picture here below. Such bridge is used for the READING ONLY, remove it after the reading procedure.

Lower side

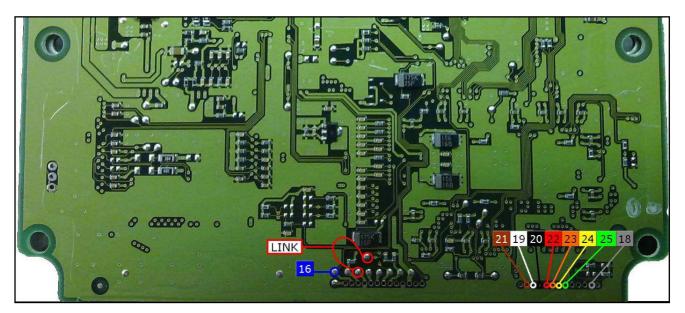

DIRECT CONNECTION – ECU WRITING:

For the WRITING procedure use the FLAT cable F34NTF51

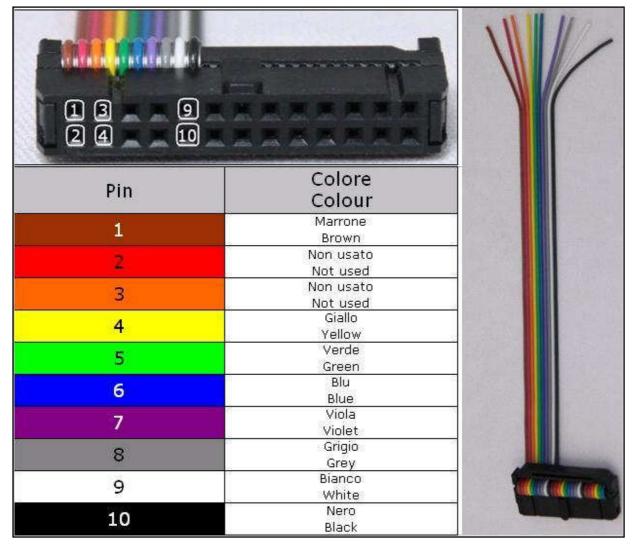

For a correct soldering procedure clean very well the soldering lay by pins from the plastic film. We suggest you to use fine grit glass paper smoothing by gentle pressure the connection lay by pins. The lay by pins are placed on the lower side of the ECU.

