

PLUGIN 321

ECU top side

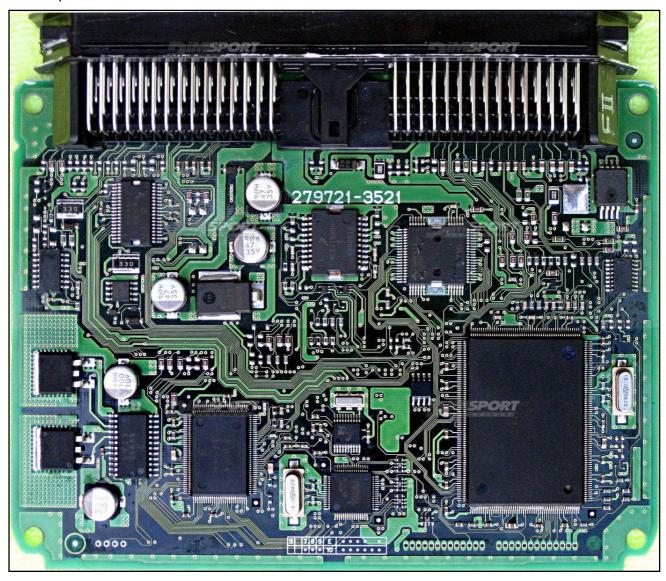


ECU bottom side

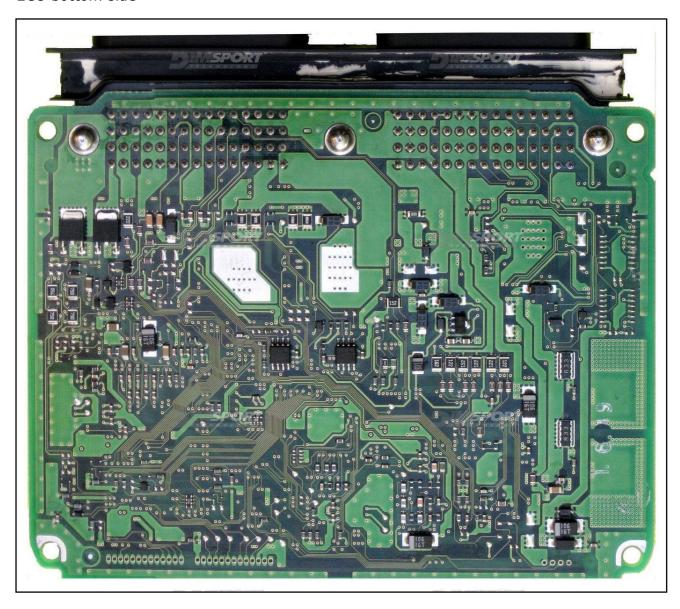


DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO	DESCRIZIONE
WIRE COLOUR	DESCRIPTION
ROSSO	POSITIVO DIRETTO
RED	POWER BATTERY
ARANCIO	POSITIVO SOTTO QUADRO
ORANGE	POWER SWITCH ON
NERO	MASSA
BLACK	GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO	POL4
GREY	BOOT
BLU	POL5
BLUE	CNF1
VIOLA/GRIGIO	TENSIONE PROG.
PURPLE/GREY	PROG. VOLTAGE
MARRONE BROWN	RESET

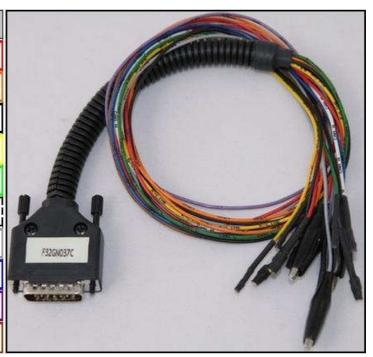

ECU CONNECTOR

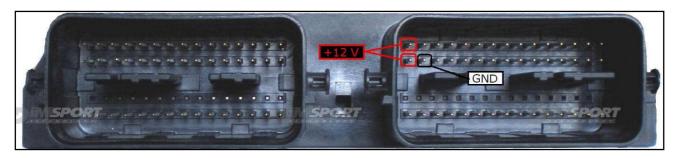


WARNING:

on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.


DIRECT CONNECTION - ECU READING:

For the READING procedure use the FLAT cable F34NTF53

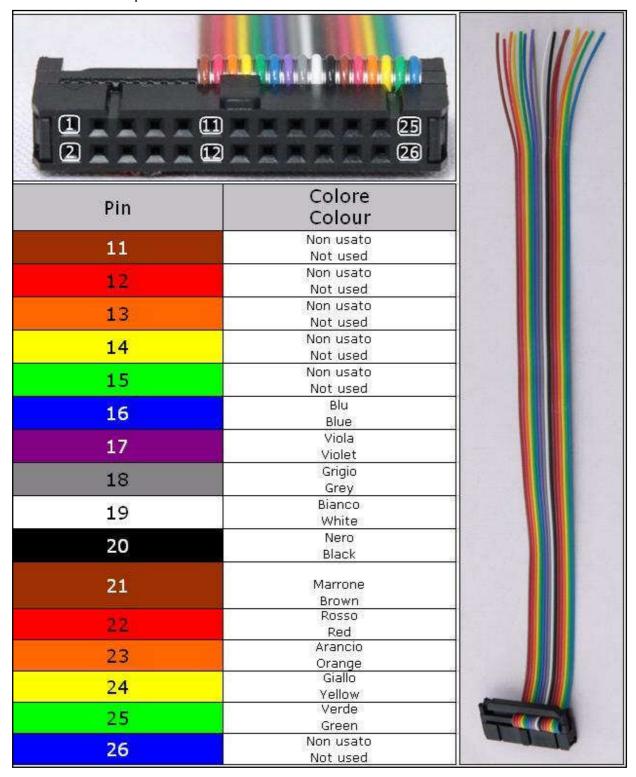


For a correct soldering procedure clean very well the soldering lay-by pins from the plastic film. We suggest you to use a fine grit glass-paper smoothing by gentle pressure the lay by pins connection.

In order to read it is necessary to link the 2 pads (make a little bridge) as shown in the picture here below. At the end of the correct reading remove the bridge.

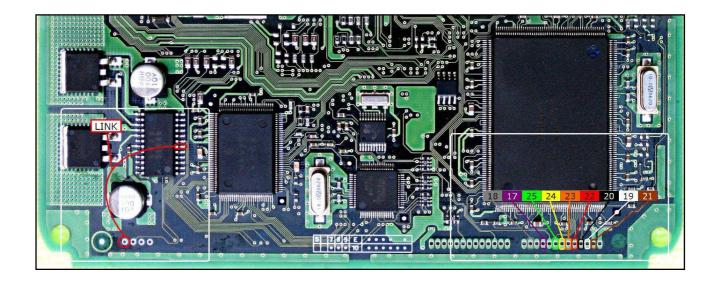


DIRECT CONNECTION - ECU WRITING:

For the WRITING procedure use the FLAT cable F34NTF51

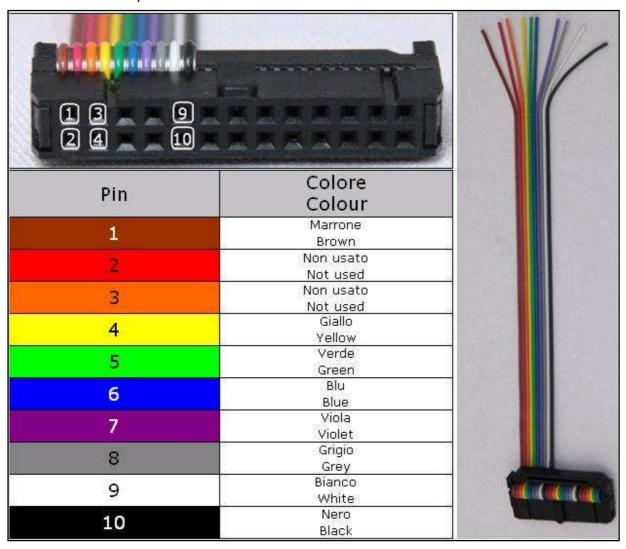



For a correct soldering procedure clean very well the soldering lay-by pins from the plastic film. We suggest you to use a fine grit glass-paper smoothing by gentle pressure the lay by pins connection.

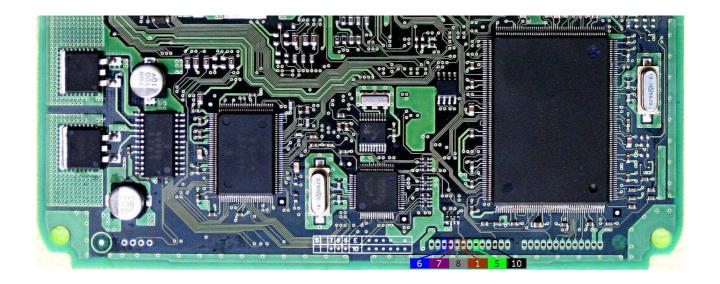



DIMA CONNECTION - ECU READING

Power the ECU with the F32GN037C wiring. Use the DIMA adapter F34DM016. The lay-by pins for the DIMA connection are on the BOTTOM SIDE of the ecu, but in order to read it is necessary to solder the bridge LINK on the TOP SIDE of the ecu (as for the direct connection). Then create the LINK2 by connecting the WDT with a wire to the pad shown in the picture here below

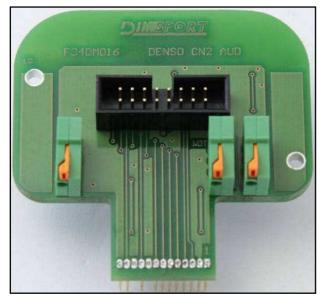

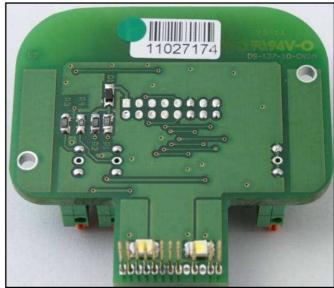

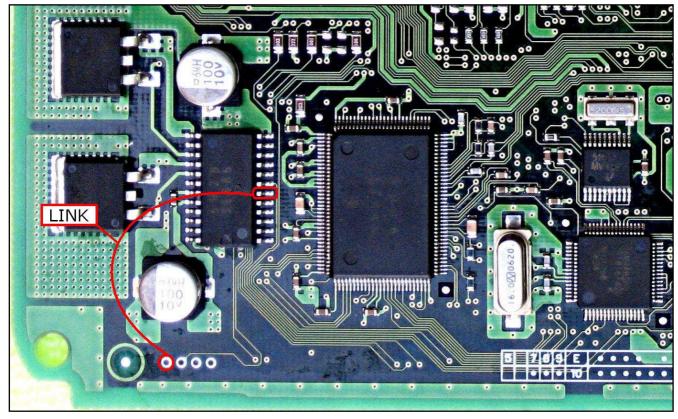

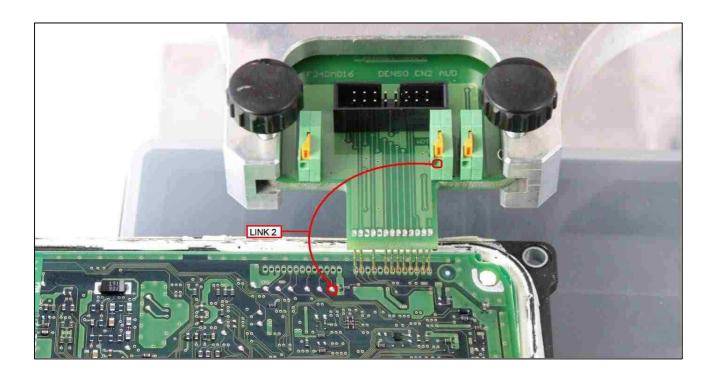

DIMA CONNECTION - ECU WRITING

Power the ECU with the F32GN037C wiring. Use the DIMA adapter F34DM017.

