

plugin **344**

ECU upper side

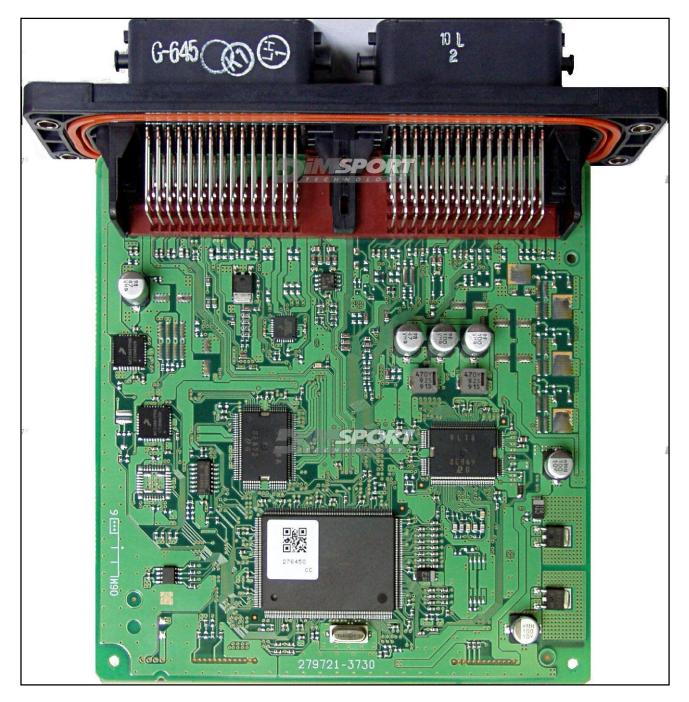

ECU lower side

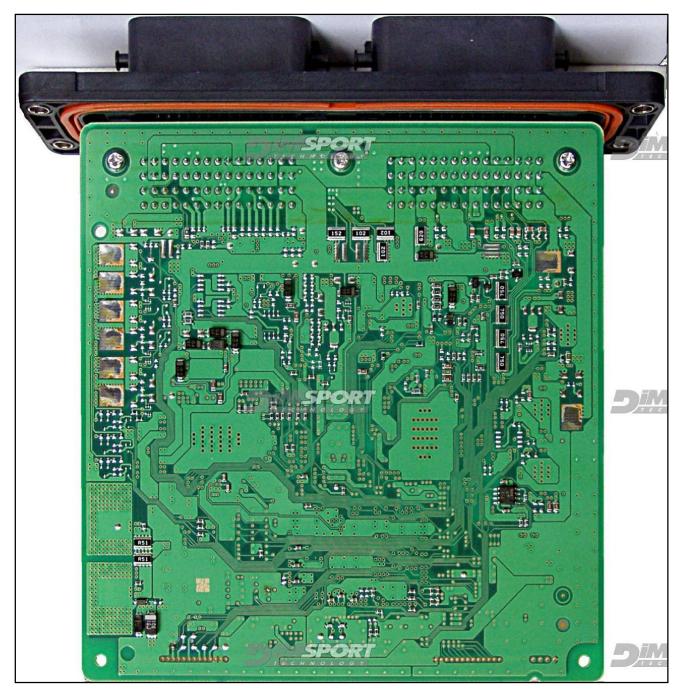

DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON. These connections are required for all the connection approaches: loose wires and/or metal positioning frame adapter.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	ICAN HIGH	
GRIGIO GREY	POL4 BOOT	F32GH037C
BLU BLUE	POL5 CNF1	Bernerell A
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	SHANNS .
MARRONE BROWN	RESET	

ECU CONNECTOR



WARNING:

on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.


DIRECT CONNECTION – ECU READING:

For the READING procedure use the FLAT cable F34NTF53

	11 25 12 26	
Pin	Colore Colour	
11	Non usato Not used	
	Not used Not used	
12	Not used	
13	Non usato	
	Not used Non usato	
14	Not used	
15	Non usato	
	Not used Blu	
16	Blue	
17	Viola	
17	Violet	
18	Grigio Grey	
10	Bianco	
19	White	
20	Nero	
	Black	
21	Marrone	
	Brown	
22	Rosso Red	
	Arancio	
23	Orange Giallo	
24		
	Yellow Verde	
25	Green	
26	Non usato Not used	


For a correct soldering procedure clean very well the soldering lay-by pins from the plastic film. We suggest you to use fine grit glass-paper smoothing by gentle pressure the connection lay by pins


For the reading procedure it is required a little short circuit (LINK) as shown in the picture here below. Such bridge is used for the READING ONLY, remove it after the reading procedure.

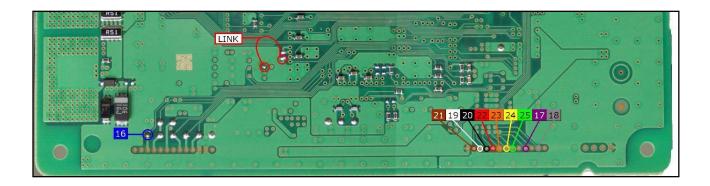

DIRECT CONNECTION – ECU WRITING:


For the WRITING procedure use the FLAT cable F34NTF51

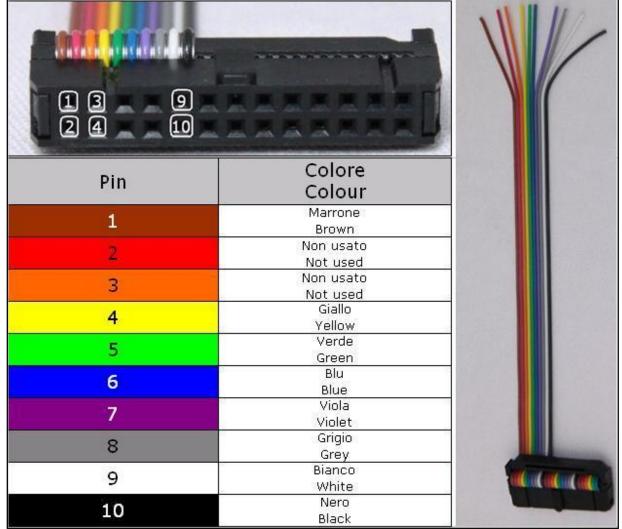


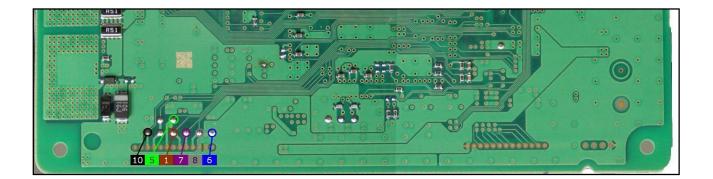

METAL POSITIONING FRAME CONNECTION - ECU READING

For the metal positioning frame connection is required the F34DM016 adapter. For the reading procedure it is necessary to use the lay by pins placed on the lower side of the ECU. It is necessary to create the LINK described in the picture and to connect the pin shown here below to the WDT connector of the ADAPTER.

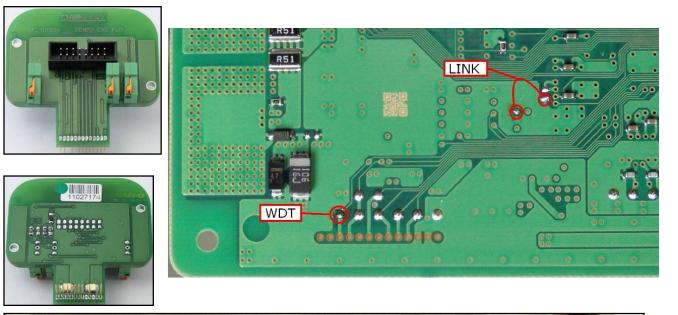

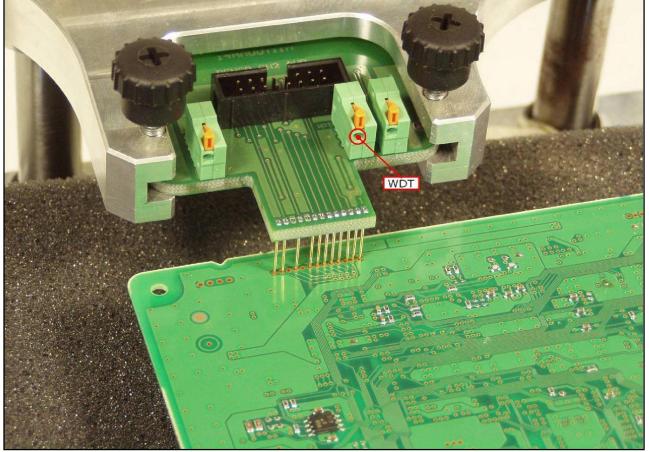

METAL POSITIONING FRAME CONNECTION - ECU WRITING

For the metal positioning frame connection is required the F34DM017 adapter.

