
**plugin 424**Lay-by pins are placed on the lower part of the ECU. It is possible ONLY the free wires connection with the universal adapter F34NTF051.



### **ECU CONNECTOR**

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION
	ROSSO RED	POSITIVO DIRETTO POWER BATTERY
	ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
	NERO BLACK	MASSA GND
	GIALLO YELLOW	KLINE
	VERDE GREEN	CAN LOW
	BIANCO WHITE	ICAN HIGH
	GRIGIO GREY	POL4 BOOT
	BLU BLUE	POL5 CNF1
		TENSIONE PROG. PROG. VOLTAGE
	MARRONE BROWN	RESET

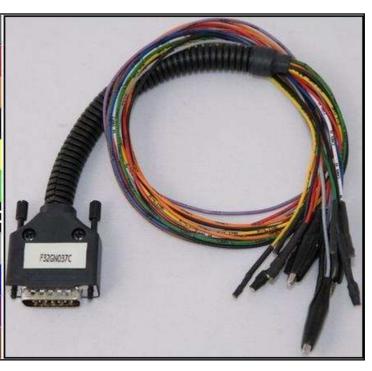



#### **FREE WIRES BDM CONNECTION**

Connect the wire F34NTF051 as shown here below:

