
plugin 661



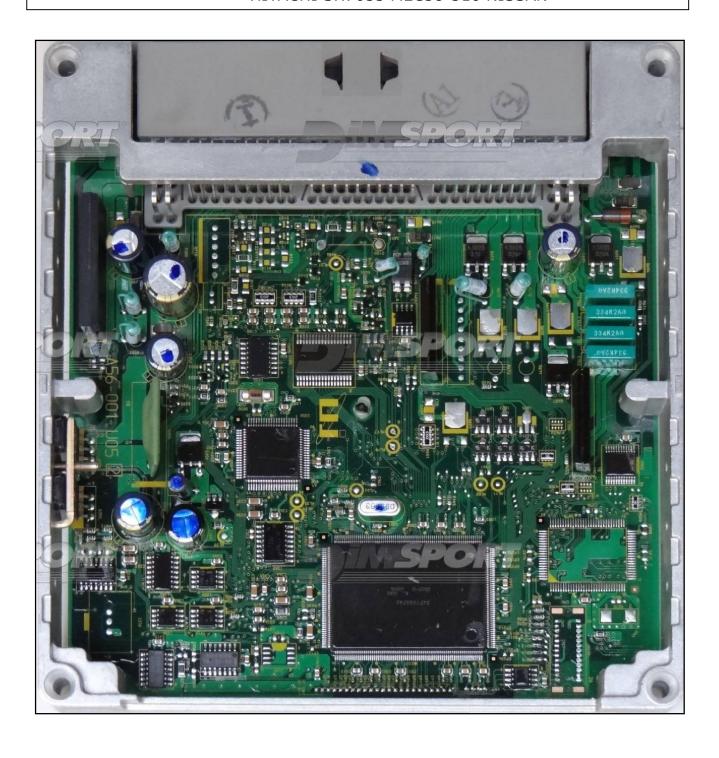


DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO	DESCRIZIONE
WIRE COLOUR	DESCRIPTION
ROSSO	POSITIVO DIRETTO
RED	POWER BATTERY
ARANCIO	POSITIVO SOTTO QUADRO
ORANGE	POWER SWITCH ON
NERO	MASSA
BLACK	GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	ICAN HIGH
GRIGIO	POL4
GREY	BOOT
BLU	POL5
BLUE	CNF1
VIOLA/GRIGIO	TENSIONE PROG.
PURPLE/GREY	PROG. VOLTAGE
MARRONE BROWN	RESET




ECU CONNECTOR

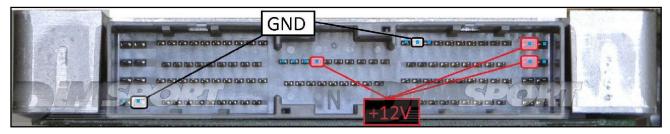

To the power feeding pins +12V you can connect both wires red (VECU) and orange VKEY) of the F32GN037C cable, they both have 12V signal.

ECU DIRECT CONNECTION FOR READING & WRITING:

For the READING and WRITING procedure use the FLAT cable F34NTF51

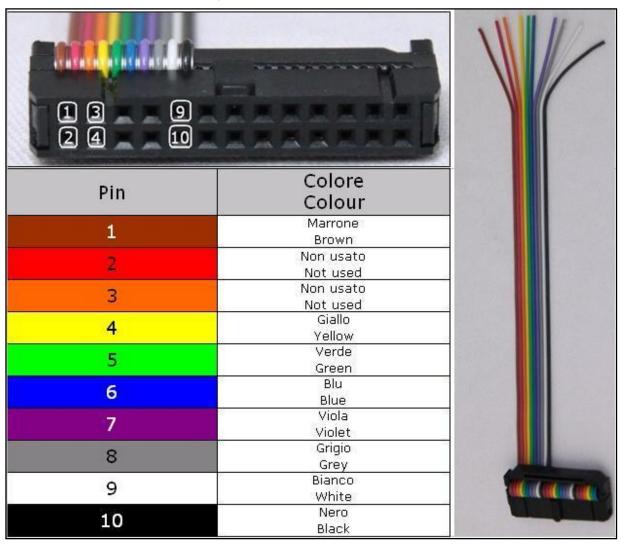

In order to perform properly the reading and writing operations it is necessary to remove the resistor R450 displayed in the picture here below. Set back the resistor before placing back the ECU into the vehicle.



