

plugin **799**

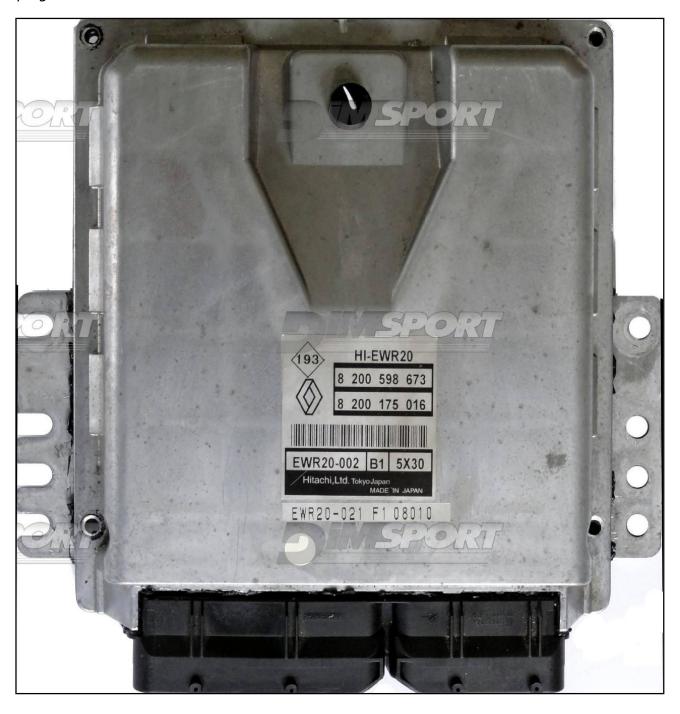

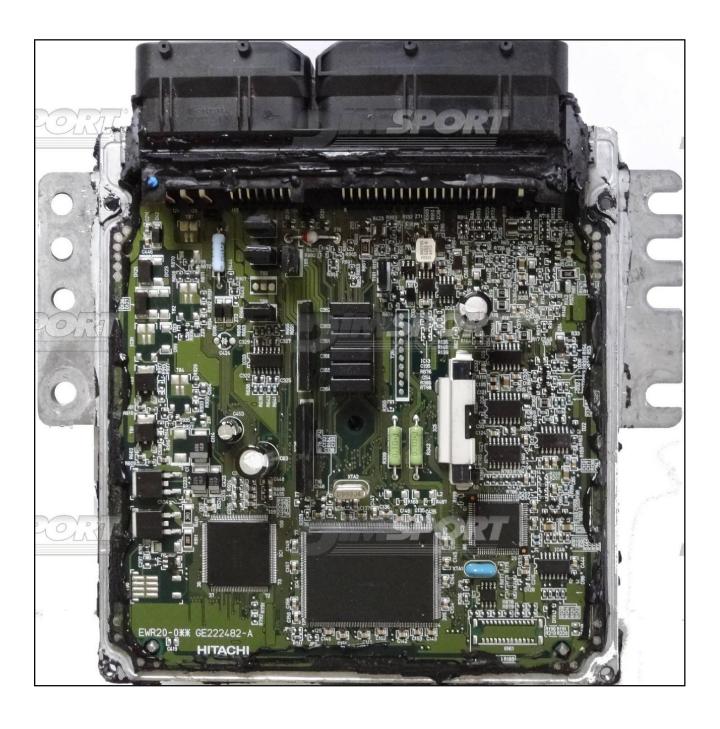




DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON

COLORE FILO	DESCRIZIONE
WIRE COLOUR	DESCRIPTION
ROSSO	POSITIVO DIRETTO
RED	POWER BATTERY
ARANCIO	POSITIVO SOTTO QUADRO
ORANGE	POWER SWITCH ON
NERO	MASSA
BLACK	GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO	POL4
GREY	BOOT
BLU	POL5
BLUE	CNF1
VIOLA/GRIGIO	TENSIONE PROG.
PURPLE/GREY	PROG. VOLTAGE
MARRONE BROWN	RESET

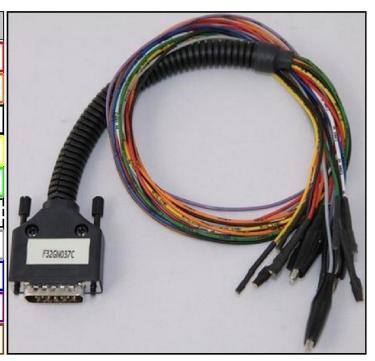


ECU CONNECTOR



DIRECT CONNECTION - ECU READING&WRITING:

For the READING&WRITING procedure use the FLAT cable F34NTF51

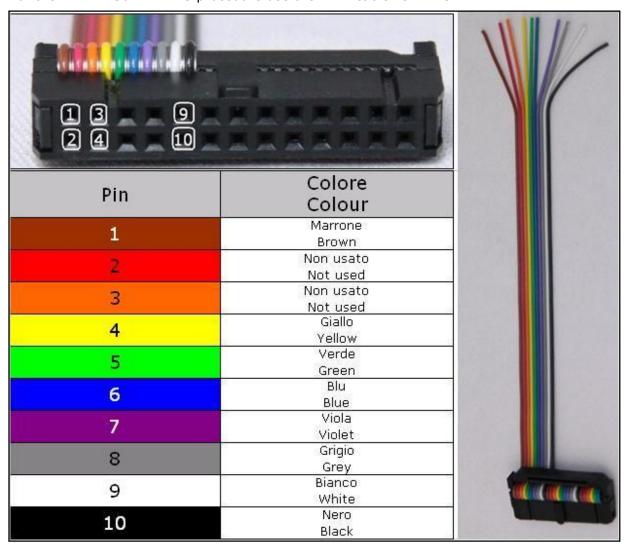

For a correct soldering procedure clean very well the soldering lay-by pins from the plastic film. We suggest you to use a fine grit glass-paper smoothing by gentle pressure the connection of the lay by pins.

