## plugin 494

Warning: there are 2 ECU types TYPE 01 MANUAL TRASMISSION TYPE 02 AUTOMATIC TRASMISSION


## TYPE 01



## TYPE 02



# TYPE 01 & TYPE 02

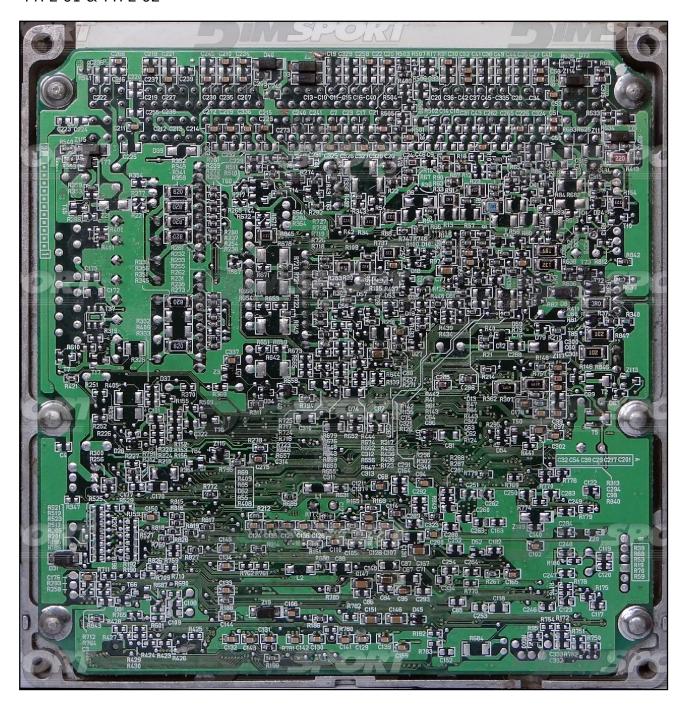

### **DIRECT CONNECTION TYPE 01**

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO	DESCRIZIONE
WIRE COLOUR	DESCRIPTION
ROSSO	POSITIVO DIRETTO
RED	POWER BATTERY
ARANCIO	POSITIVO SOTTO QUADRO
ORANGE	POWER SWITCH ON
NERO	MASSA
BLACK	GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	ICAN HIGH
GRIGIO	POL4
GREY	BOOT
BLU	POL5
BLUE	CNF1
VIOLA/GRIGIO	TENSIONE PROG.
PURPLE/GREY	PROG. VOLTAGE
MARRONE BROWN	RESET



### **ECU CONNECTOR TYPE 01**




## **ATTENZIONE**:


on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.


### **DIRECT CONNECTION - ECU READING TYPE 01:**

For the READING procedure use the FLAT cable F34NTF53

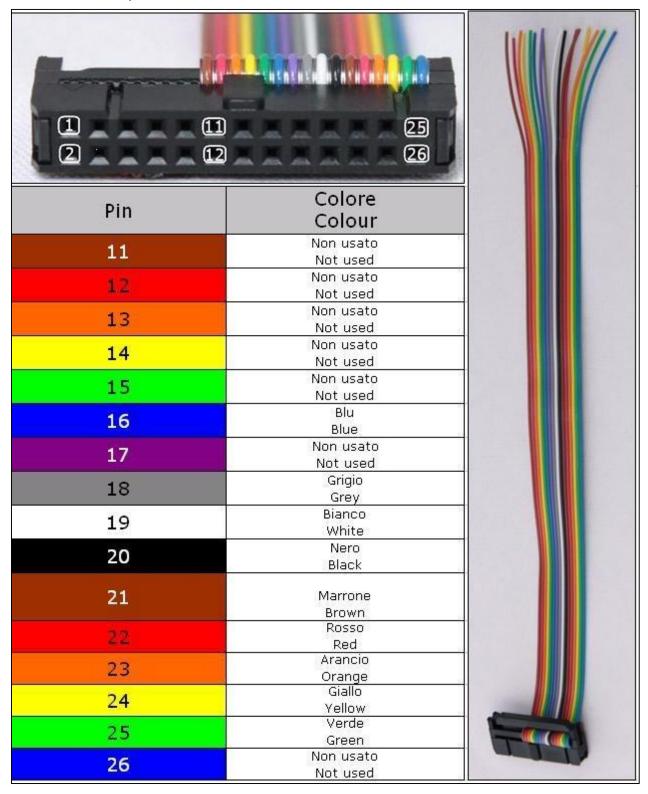

For a correct soldering procedure clean very well the soldering lay-by pins from the plastic film. We suggest you to use a fine grit glass-paper smoothing by gentle pressure the connection of the lay by pins. For the reading procedure it is necessary to perform all the LINK shown in the picture here below. At the end of the reading procedure remove all the LINK.

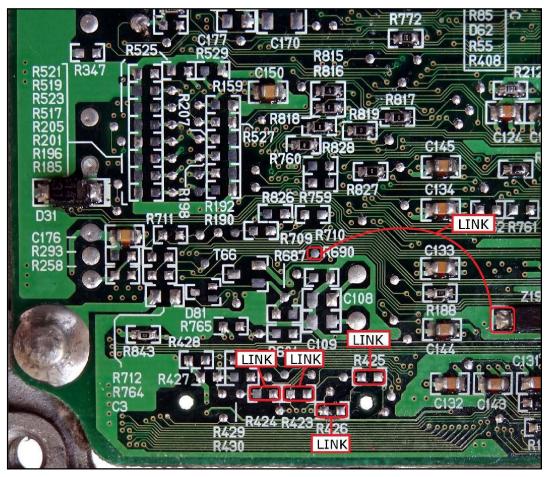

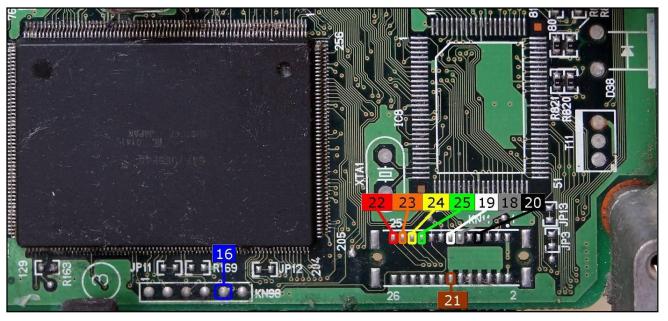


## **DIRECT CONNECTION - ECU WRITING TYPE 01:**


For the WRITING procedure use the FLAT cable F34NTF51

139		
Din	Colore	
Pin	Colour	
1	Marrone	
	Brown	
2	Non usato	
5	Not used	
3	Non usato	
100	Not used	
4	Non usato Not used	
	Not useu Non usato	
5	Not used	
	Blu	
6	Blue	
-7	Viola	
7	Violet	
8	Grigio	
	Grey	
9	Non usato	Mark Market Control
	Not used	and the same of th
10	Nero	
	Black	A STATE OF THE STA

For a correct soldering procedure clean very well the soldering lay-by pins from the plastic film. We suggest you to use a fine grit glass-paper smoothing by gentle pressure the connection of the lay by pins.

For the reading procedure it is necessary to perform the LINK shown in the picture here below. At the end of the reading procedure remove the LINK.

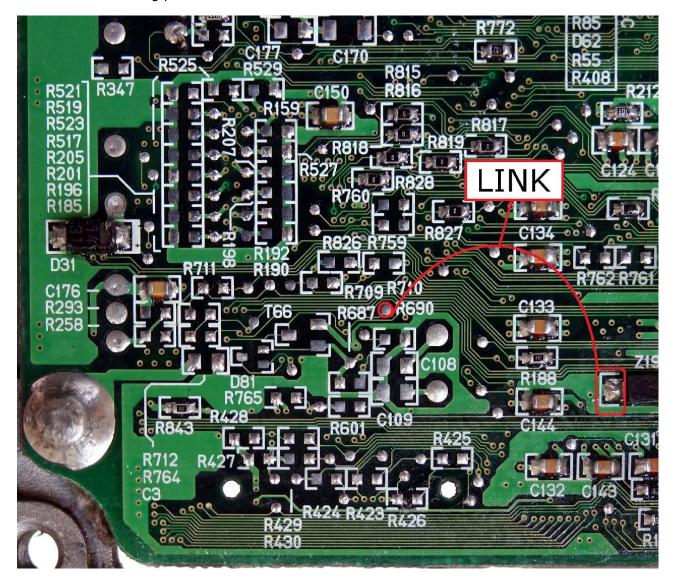


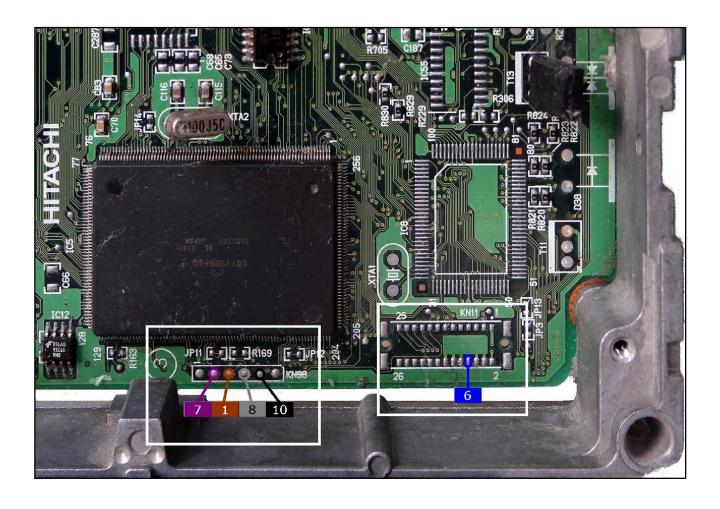

#### **DIRECT CONNECTION ECU TYPE 02**

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.


COLORE FILO	DESCRIZIONE
WIRE COLOUR	DESCRIPTION
ROSSO	POSITIVO DIRETTO
RED	POWER BATTERY
ARANCIO	POSITIVO SOTTO QUADRO
ORANGE	POWER SWITCH ON
NERO	MASSA
BLACK	GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO	POL4
GREY	BOOT
BLU	POL5
BLUE	CNF1
VIOLA/GRIGIO	TENSIONE PROG.
PURPLE/GREY	PROG. VOLTAGE
MARRONE BROWN	RESET

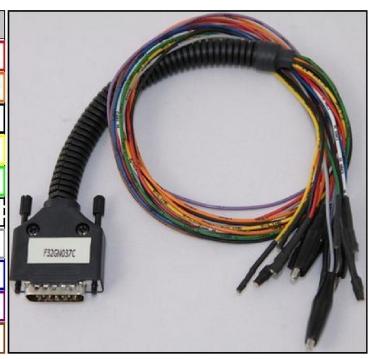

### **ECU CONNECTOR TYPE 02**



Warning: for the automatic transmission version it is necessary to move the resistor R0 shown in the picture here below. It must be desoldered from the position R767 and must be placed on the R766 position. At the end of the job, before connecting the ECU back into the car, set back the resistor R0 in its original position.

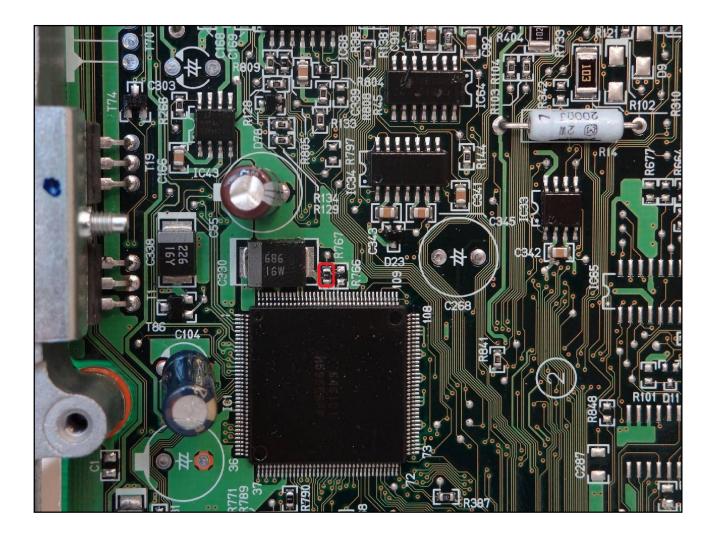

## **DIRECT CONNECTION - ECU READING&WRITING ECU TYPE 02:**

For the READING&WRITING procedure use the FLAT cable F34NTF51

139		
Din	Colore	
Pin	Colour	
1	Marrone	
	Brown	
2	Non usato	
	Not used Non usato	
3	Not used	
4	Non usato	
4	Not used	
5	Non usato	
30	Not used	
6	Blu	
	Blue	
7	Viola Violet	
	Grigio	
8	Grey	
0	Non usato	
9	Not used	
10	Nero Black	

For a correct soldering procedure clean very well the soldering lay-by pins from the plastic film. We suggest you to use a fine grit glass-paper smoothing by gentle pressure the connection of the lay by pins. For the reading procedure it is necessary to perform all the LINK shown in the picture here below. At the end of the reading procedure remove all the LINK.

