

PLUGIN 451

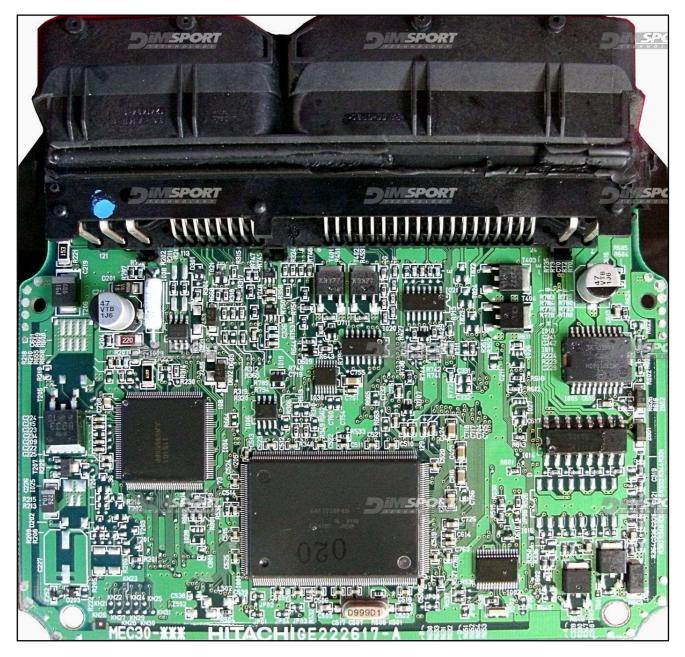

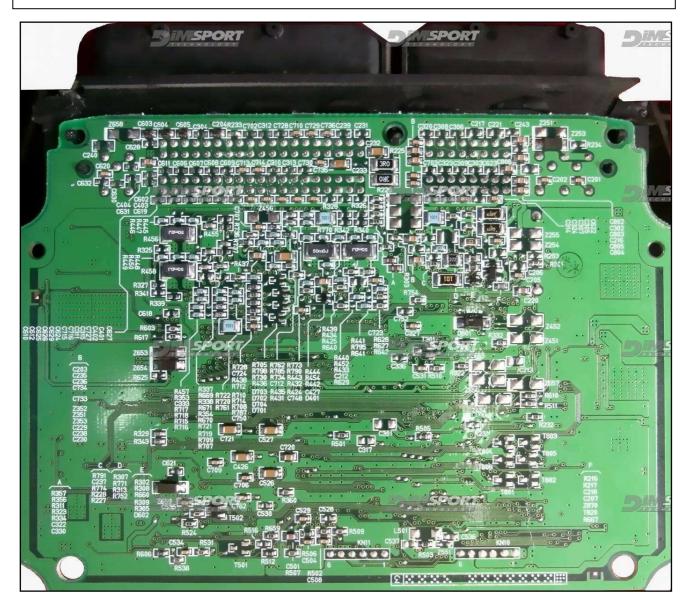

DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	F320097C
BLU BLVE	POLS CNF1	Parament I
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	- WHATHER -
MARRONE BROWN	RESET	

ECU CONNECTOR




WARNING:

on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.

DIRECT CONNECTION – ECU READING:

For the READING procedure use the FLAT cable F34NTF53

	1) 25 12 26	
Pin	Colore Colour	
11	Non usato Not used	
ANNAL	Not used Non usato	
12	Not used	
13	Non usato	
	Not used Non usato	
14	Not used	
15	Non usato Not used	
16	Blu	
16	Blue	
17	Viola Violet	
1.0	Grigio	
18	Grey	
19	Bianco	
(2424-21) 2424-242	White Nero	
20	Black	
21	Marrone Brown	
22	Rosso Red	
	Arancio	
23	Orange	
24	Giallo Yellow	
25	Verde	
184 C.202	Green	
26	Non usato Not used	

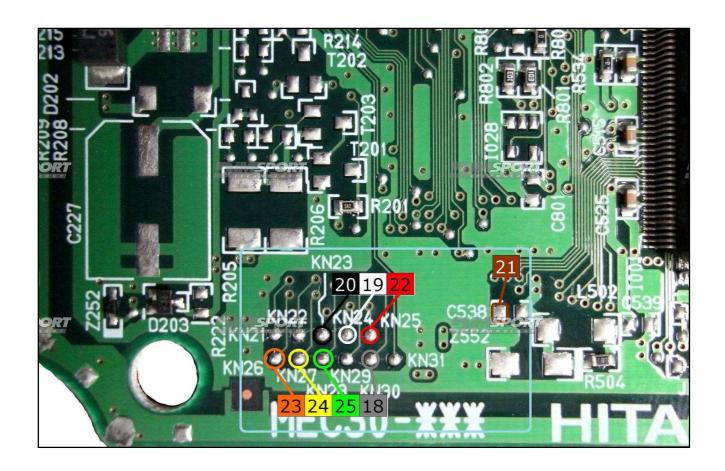

DIRECT CONNECTION – ECU WRITING:

For the WRITING procedure use the FLAT cable F34NTF51

