plugin **694**









DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO	DESCRIZIONE	
WIRE COLOUR	DESCRIPTION	
ROSSO	POSITIVO DIRETTO	
RED	POWER BATTERY	
ARANCIO	POSITIVO SOTTO QUADRO	
ORANGE	POWER SWITCH ON	
NERO	MASSA	
BLACK	GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	ICAN HIGH	
GRIGIO	POL4	
GREY	BOOT	
BLU	POL5	
BLUE	CNF1	
VIOLA/GRIGIO	TENSIONE PROG.	
PURPLE/GREY	PROG. VOLTAGE	
MARRONE BROWN	RESET	



ECU CONNECTOR




To the power feeding pins M3,A4,H1 (\pm 12V) you can connect both wires red (VECU) and orange VKEY) of the F32GN037C cable, they both have 12V signal.

DIRECT CONNECTION - ECU READING:

For the READING procedure use the FLAT cable F34NTF53.

	11 25 12 26	
Pin	Colore Colour	
11	Non usato Not used	
12	Non usato Not used	
13	Non usato	
	Not used Non usato	
14	Not used	
15	Non usato Not used	
16	Blu	
10	Blue	
17	Viola Violet	
10	Grigio	
18	Grey	
19	Bianco	
1.0	White	
20	Nero Black	
21	Marrone Brown	
22	Rosso Red	
5002	Arancio	
23	Orange Giallo	
24	Giallo Yellow	
	Verde	
25	Green	
26	Non usato Not used	-

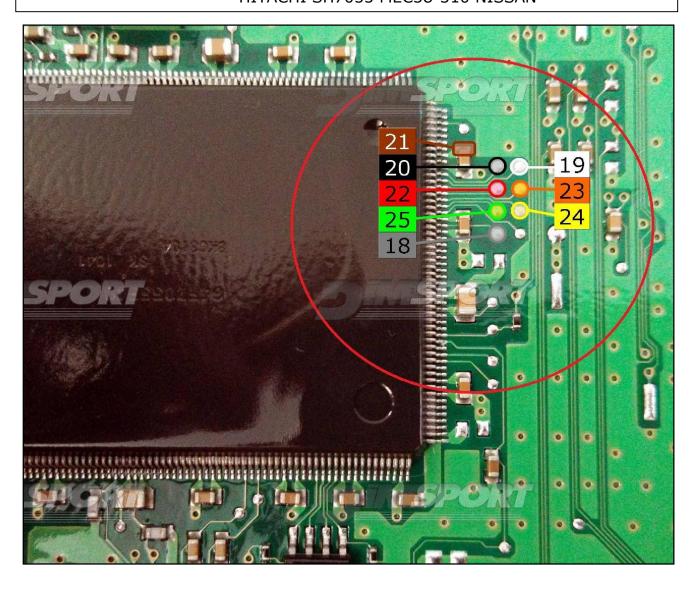

DIRECT CONNECTION - ECU WRITING:

For the WRITING procedure use the FLAT cable F34NTF51

