
plugin  $\bf 298$  The lay-by pins are placed in the lower part of the ECU. Micro SH7055.

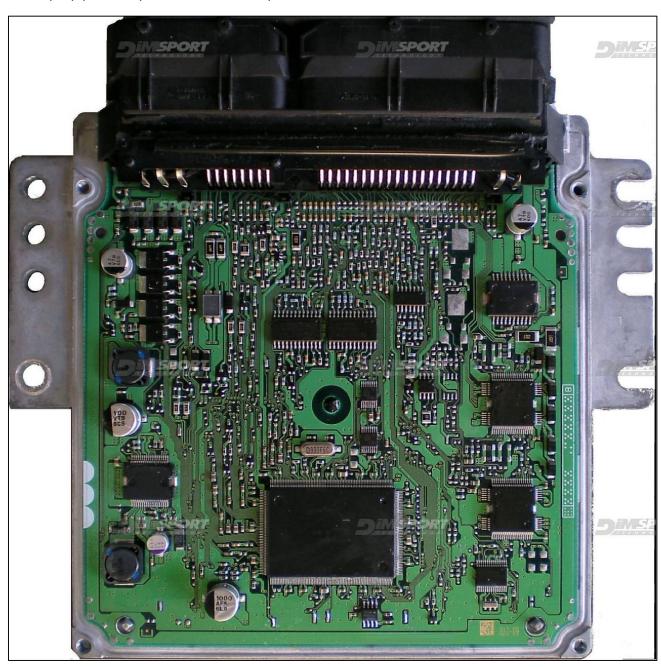

#### **DIRECT CONNECTION**

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCI ORANGI	\$100 PARTY CONTRACTOR STREET, VANDAGE WAS AND STREET	DRO
NERO BLACK	MASSA GND	
GIALLO YELLOV	KLINE	
VERDE GREEN	CAN LOW	
BIANCC WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	F32GN037C
BLU BLUE	POL5 CNF1	Paramill
VIOLA/ PURPLE	GRIGIO TENSIONE PROG. /GREY PROG. VOLTAGE	
MARROI BROWN	NE DECET	

### **ECU CONNECTOR**



### **DIRECT CONNECTION - ECU READING & WRITING:**

For both operations READING&WRITING procedures use the FLAT cable F34NTF51

