
PLUGIN 292

ECU upper side




ECU lower side

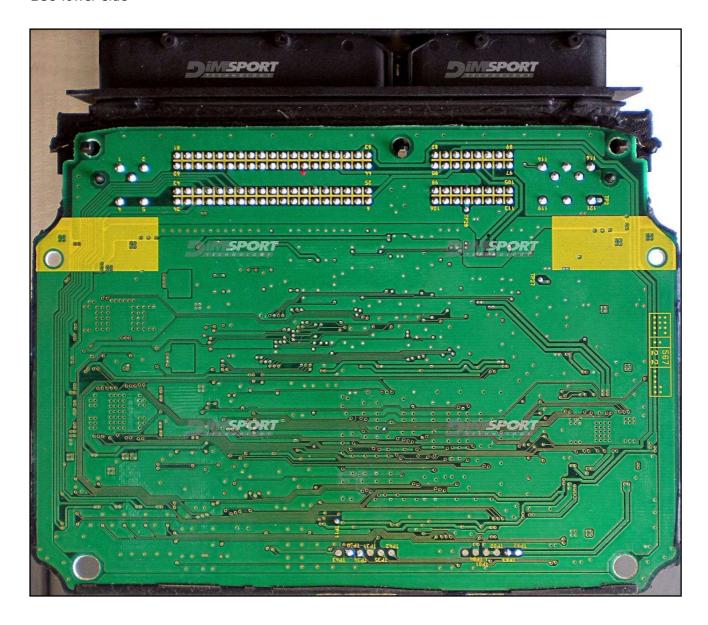


DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GF PURPLE/G	RIGIO TENSIONE PROG. GREY PROG. VOLTAGE
MARRONE BROWN	RESET

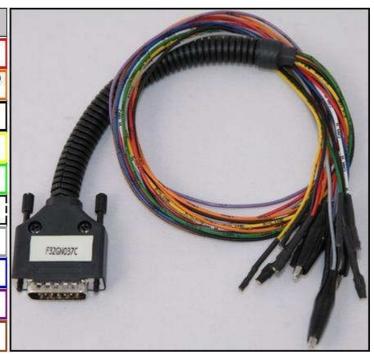

ECU CONNECTOR

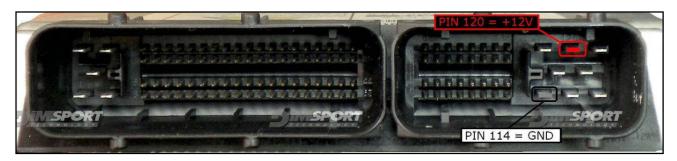


WARNING:


on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.

DIRECT CONNECTION - ECU READING:

For the READING procedure use the FLAT cable F34NTF53

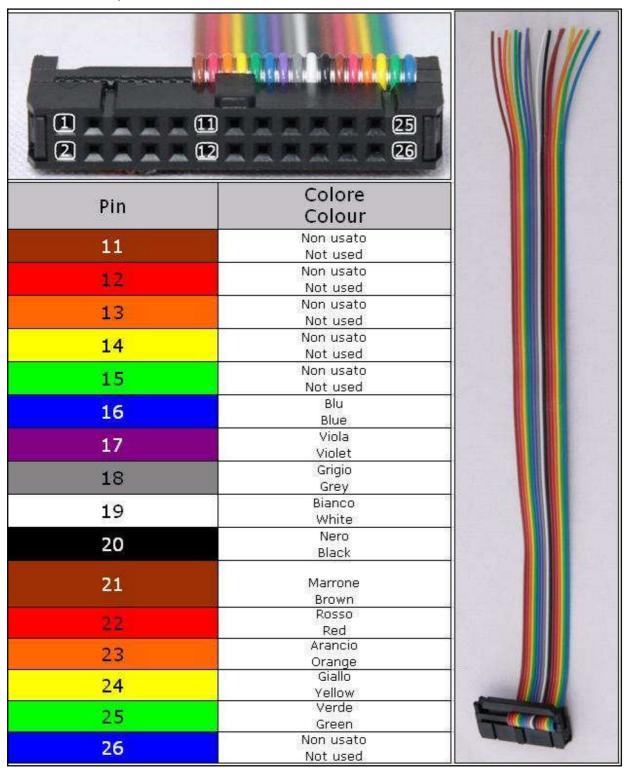

Lay by pins are placed on the upper side.

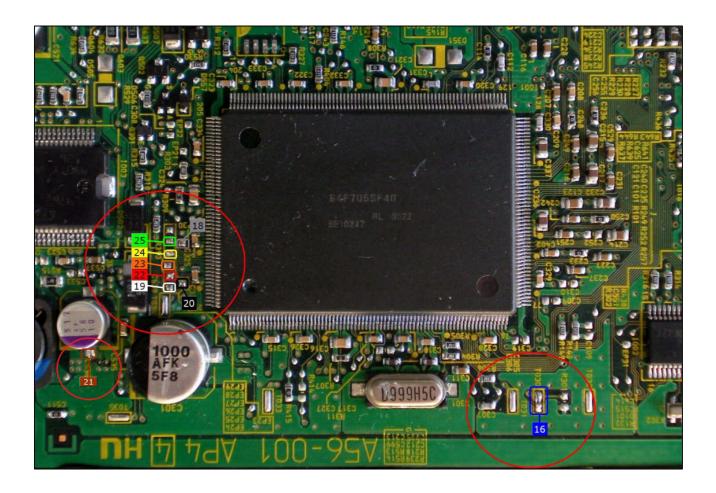

DIRECT CONNECTION - ECU WRITING:

For the WRITING procedure use the FLAT cable F34NTF51 $\,$

139		
Pin	Colore Colour	
1	Marrone Brown	
2.	Non usato Not used	
3	Non usato Not used	
4	Giallo Yellow	
5	Verde Green	
6	Blu Blue	
7	Víola Violet	
8	Grigio Grey	
9	Bianco White	
10	Nero Black	

Lay by pins are placed on the lower side of the ECU.

