# **PLUGIN 450**






#### **DIRECT CONNECTION**

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO	DESCRIZIONE	
WIRE COLOUR	DESCRIPTION	
ROSSO	POSITIVO DIRETTO	
RED	POWER BATTERY	
ARANCIO	POSITIVO SOTTO QUADRO	
ORANGE	POWER SWITCH ON	
NERO	MASSA	
BLACK	GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	ICAN HIGH	
GRIGIO	POL4	
GREY	BOOT	
BLU	POL5	
BLUE	CNF1	
	TENSIONE PROG. PROG. VOLTAGE	
MARRONE BROWN	RESET	

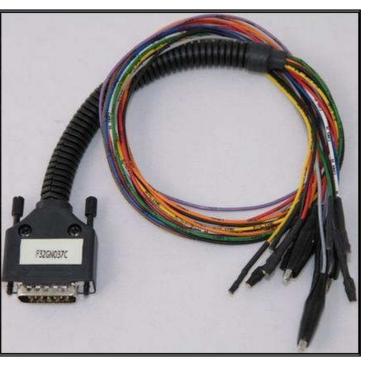

## **ECU CONNECTOR**




#### **WARNING:**

on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.

# **DIRECT CONNECTION - ECU READING:**

For the READING procedure use the FLAT cable F34NTF53

	25 22 26	
Pin	Colore	
	Colour	
11	Non usato	
Manual III	Not used	
12	Non usato Not used	
40	Non usato	
13	Not used	
14	Non usato	
24	Not used	
15	Non usato Not used	
	Blu	
16	Blue	
17	Viola	
	Violet	
18	Grigio Grey	
272	Bianco	
19	White	
20	Nero	
20	Black	
21	Marrone	
	Brown	
22	Rosso	
878	Red Arancio	
23	Orange	
24	Giallo	
6000	Yellow	
25	Verde Green	Will the second
10.000	Non usato	
26	Not used	

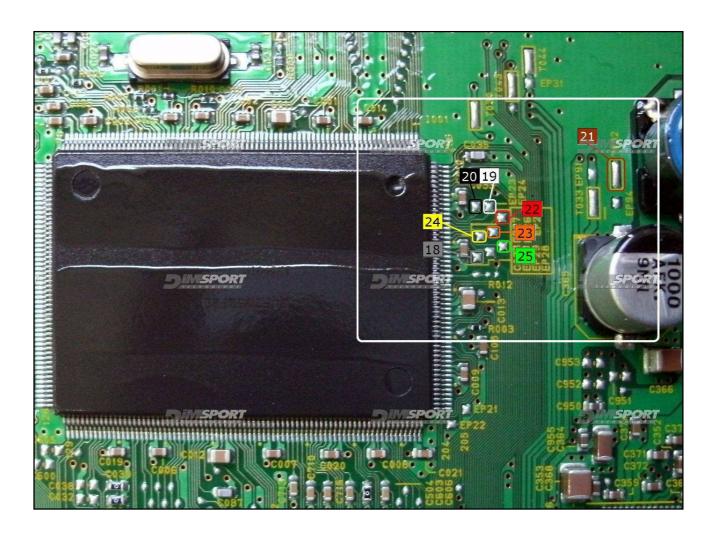

## **DIRECT CONNECTION - ECU WRITING:**

For the WRITING procedure use the FLAT cable F34NTF51

