

plugin $\bf 299$ The lay-by pins are placed in the lower part of the ECU. Micro SH7058.

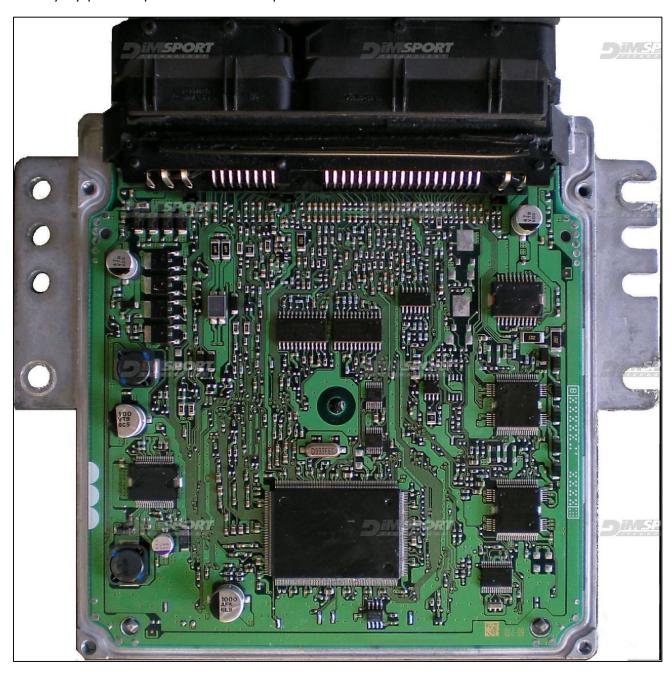

DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

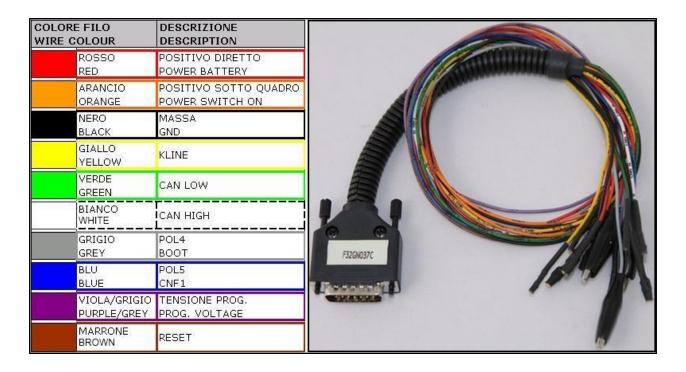

ECU CONNECTOR



WARNING:

on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.

DIRECT CONNECTION – ECU READING:

For the READING procedure use the FLAT cable F34NTF53

	25 22 26	
Pin	Colore	
	Colour	
11	Non usato	
17/A0	Not used Non usato	
12	Not used	
40	Non usato	
13	Not used	
14	Non usato	
27	Not used	
15	Non usato	
	Not used Non usato	
16	Not used	
4-7	Non usato	
17	Not used	
18	Grigio	
10	Grey	
19	Bianco	
8/15/10	White Nero	
20	Black	
21	Marrone Brown	
2.2	Rosso	
The same of the sa	Red Arancio	
23	Orange	
24	Giallo	
24	Yellow	
2.5	Verde Croop	(Contract)
The second secon	Green Non usato	
26	Not used	



DIRECT CONNECTION – ECU WRITING:

For the WRITING procedure use the FLAT cable F34NTF51

1 3 9 2 4 10		
Din	Colore	
Pin	Colour	
1	Marrone	
	Brown	
2	Non usato	
	Not used	
3	Non usato	
	Not used Non usato	
4	Not used	
_	Non usato	
5	Not used	
-	Blu	
6	Blue	
7	Viola	
	Violet	
8	Grigio	
	Grey	A STATE OF THE PARTY OF THE PAR
9	Non usato	All interesting
	Not used	
10	Nero	
	Black	

