### plugin 768





### DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	F32GH037C
BLU BLUE	POL5 CNF1	Bassassell A
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	CHANNS .
MARRONE BROWN	RESET	

### ECU CONNECTOR



#### WARNING :

on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.

### **DIRECT CONNECTION – ECU READING:**

For the READING procedure use the FLAT cable F34NTF53

	a ware rank that they be the set	
Pin	Colore Colour	
11	Non usato Not used	
12	Non usato	
1.4	Not used	
13	Non usato Not used	
	Not used Non usato	
14	Not used	
15	Non usato	
	Not used Blu	
16	Blue	
17	Viola	
	Violet	
18	Grigio Grey	
19	Bianco	
<b>T</b> 2	White	
20	Nero Black	
21	Marrone Brown	
22	Rosso	
	Red Arancio	
23		
24	Orange Giallo	
	Yellow Verde	
25	Green	
26	Non usato Not used	



# **DIRECT CONNECTION – ECU WRITING:**

For the WRITING procedure use the FLAT cable F34NTF51



