


plugin 502 TYPE 01

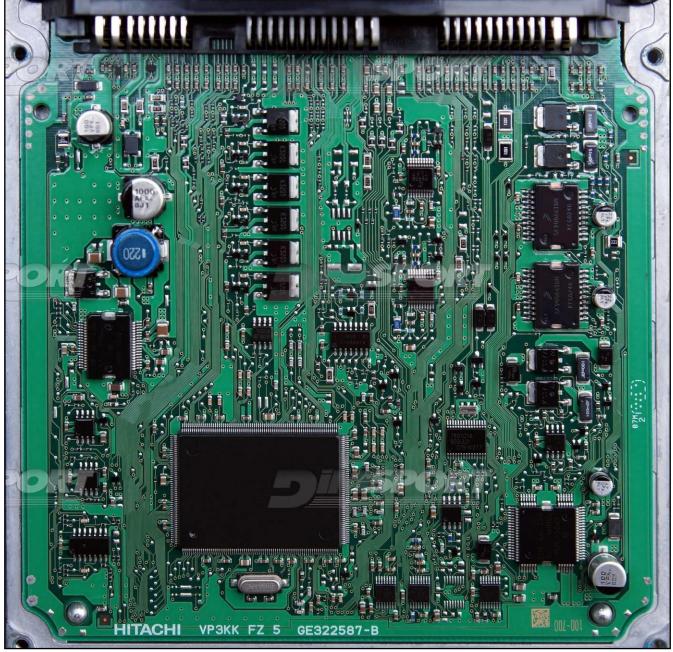


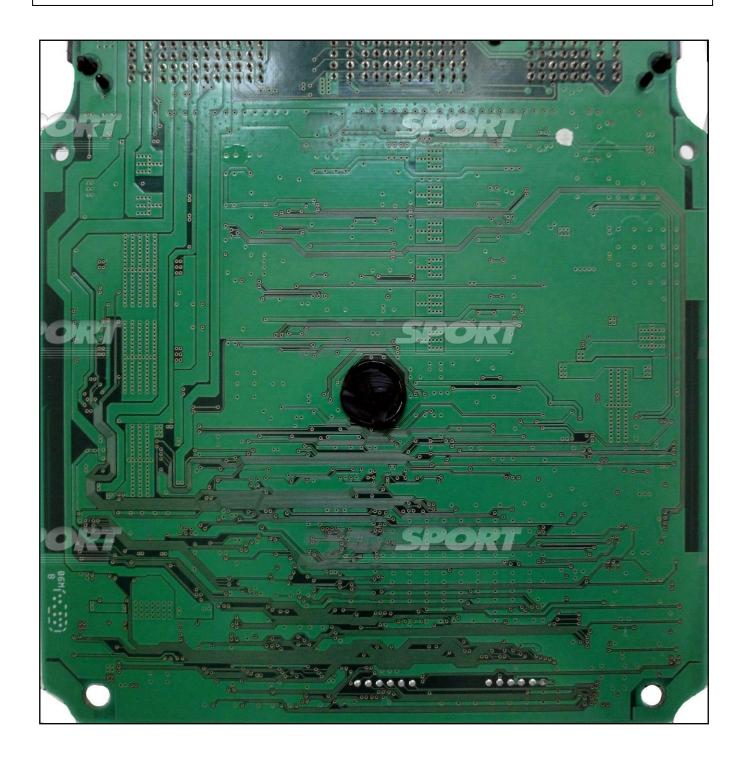



TYPE 02

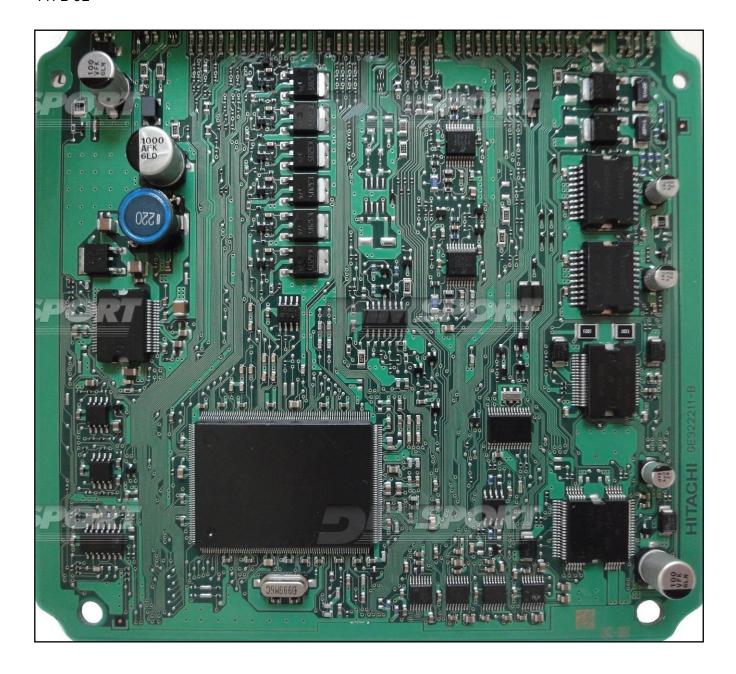


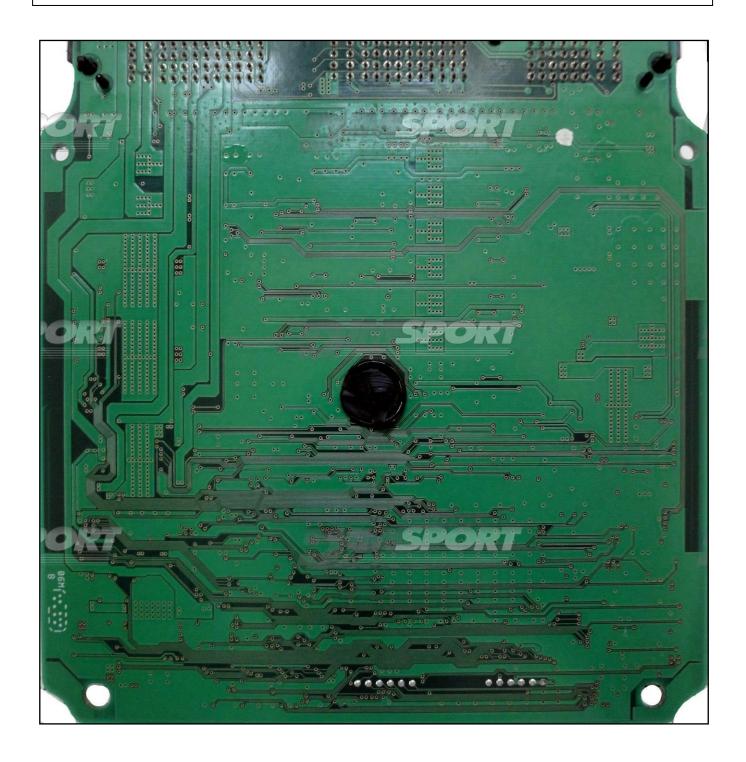


DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON.

| COLORE FILO | DESCRIZIONE | |
|------------------|---------------------------------|--|
| WIRE COLOUR | DESCRIPTION | |
| ROSSO | POSITIVO DIRETTO | |
| RED | POWER BATTERY | |
| ARANCIO | POSITIVO SOTTO QUADRO | |
| ORANGE | POWER SWITCH ON | |
| NERO | MASSA | |
| BLACK | GND | |
| GIALLO YELLOW | KLINE | |
| VERDE GREEN | CAN LOW | |
| BIANCO WHITE | ICAN HIGH | |
| GRIGIO | POL4 | |
| GREY | BOOT | |
| BLU | POL5 | |
| BLUE | CNF1 | |
| | TENSIONE PROG. PROG. VOLTAGE | |
| MARRONE BROWN | RESET* | |

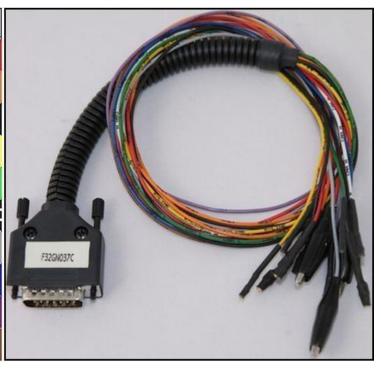

ECU CONNECTOR

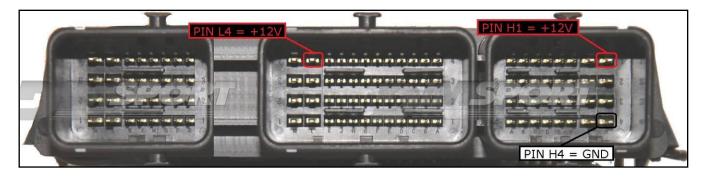

WARNING:

on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure


DIRECT CONNECTION - ECU READING:


For the READING procedure use the FLAT cable F34NTF53

| | 1 25 2 26 | |
|-------|-----------------------|--|
| Pin | Colore | |
| | Coulor Non usato | |
| 11 | Not used | |
| 12 | Non usato | |
| | Not used Non usato | |
| 13 | Not used | |
| 14 | Non usato | |
| | Not used Non usato | |
| 15 | Not used | |
| 16 | Non usato | |
| 10 | Not used | |
| 17 | Non usato Not used | |
| 10 | Grigio | |
| 18 | Grey | |
| 19 | Bianco White | |
| 80703 | Nero | |
| 20 | Black | |
| 21 | Marrone | |
| | Brown Rosso | |
| 22 | Red | |
| 23 | Arancio | |
| | Orange Giallo | |
| 24 | Yellow | |
| 25 | Verde | |
| 2000 | Green Non usato | |
| 26 | Not used | |

TYPE1&TYPE2


Connect the wirings on both sides of the ECU as shown in the following pictures.

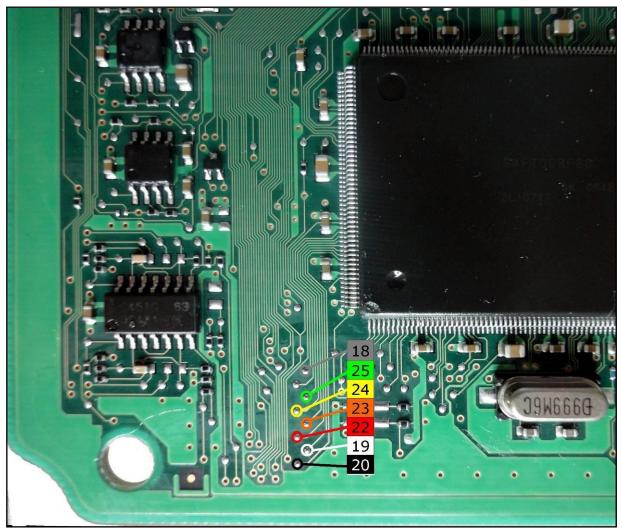

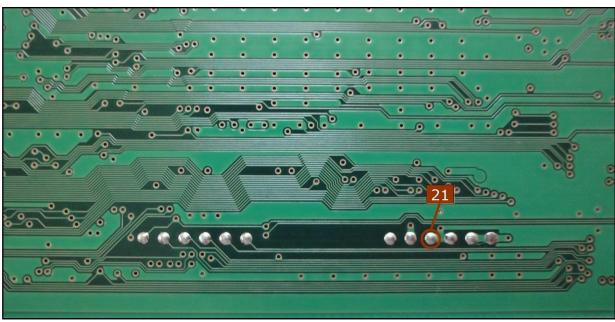

DIRECT CONNECTION - ECU WRITING:

For the WRITING procedure use the FLAT cable F34NTF51

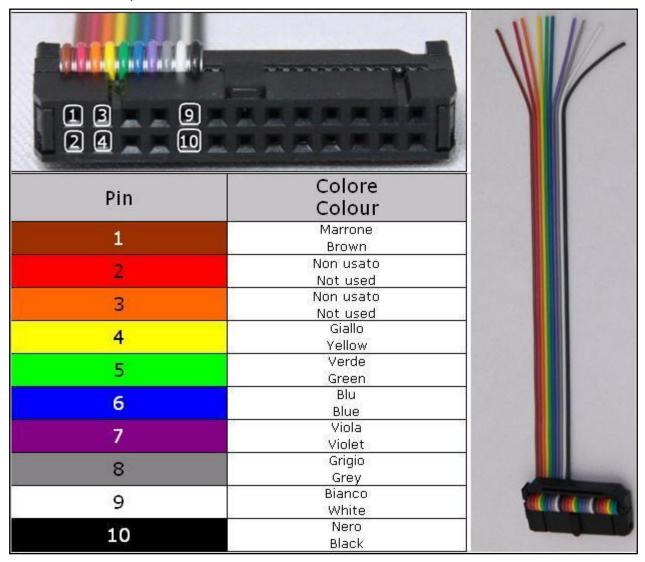

TYPE1&TYPE2

