
#### **PLUGIN 448**

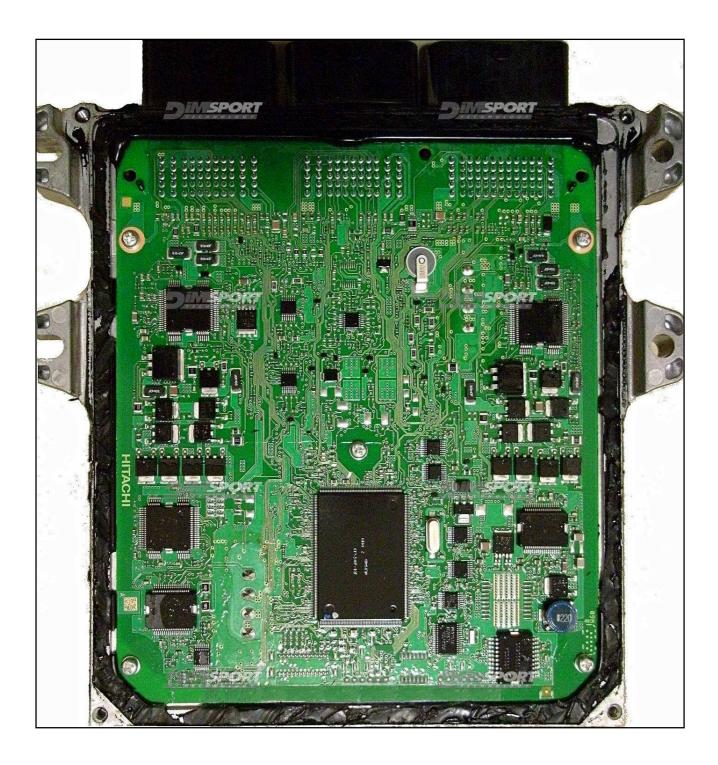



#### **DIRECT CONNECTION**

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	ICAN HIGH	
GRIGIO GREY	POL4 BOOT	F32GH037C
BLU BLUE	POL5 CNF1	Bacconstill A
VIOLA/GRIGI PURPLE/GREY	D TENSIONE PROG. / PROG. VOLTAGE	- SHATTAN -
MARRONE BROWN	RESET	

## **ECU CONNECTOR**



#### WARNING:


on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.

### **DIRECT CONNECTION – ECU READING:**

For the READING procedure use the FLAT cable F34NTF53

	L) 25 12 26	
Pin	Colore Colour	
11	Non usato Not used	
The second s	Not used Not used	
12	Not used	
13	Non usato Not used	
	Non usato	
14	Not used	
15	Non usato Not used	
10	Blu	
16	Blue	
17	Viola Violet	
10	Grigio	
18	Grey	
19	Bianco	
2.4244m) - 10044m	White Nero	
20	Black	
21	Marrone Brown	
22	Rosso	
	Red Arancio	
23	Orange	
24	Giallo Yellow	
	Verde	
25	Green	
26	Non usato Not used	

**WARNING:** to perform the reading it is necessary to make the 4 bridges (LINK) as shown in the following picture:

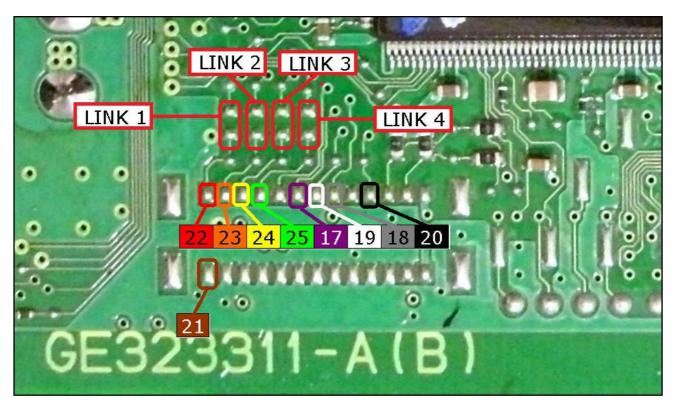

### **DIRECT CONNECTION – ECU WRITING:**

For the WRITING procedure use the FLAT cable F34NTF51

