
plugin **414**The lay-by pins are placed in the lower part of the ECU. ECU side for the reading

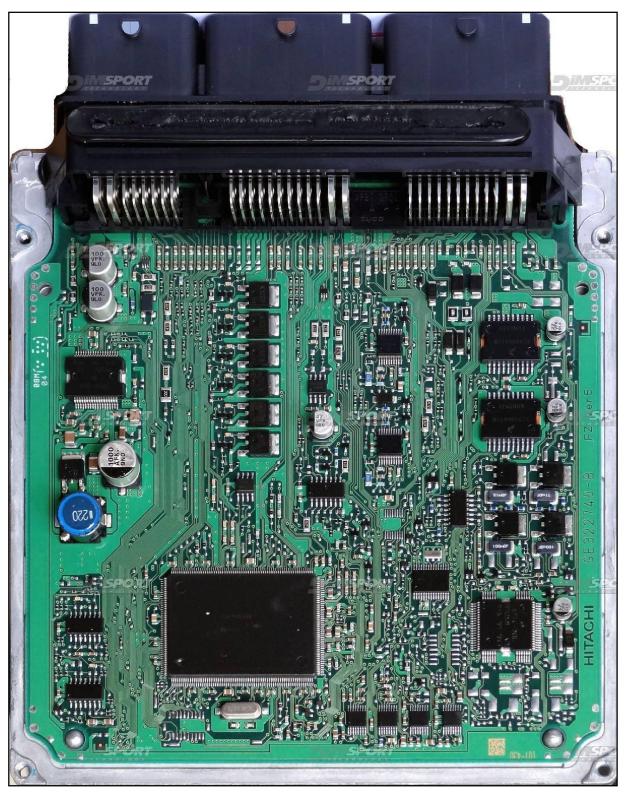

ECU side for the writing



DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSC RED	POSITIVO DIRETTO POWER BATTERY	
ARANC ORANG		DRO
NERO BLACK	MASSA GND	
GIALLO YELLO	KLINE	
VERDE GREEN	C AN L CYA	
BIANC(WHITE	CAN HIGH	
GRIGIC GREY	POL4 BOOT	F32GH037C
BLU BLUE	POL5 CNF1	[5/4]
	GRIGIO TENSIONE PROG. G/GREY PROG. VOLTAGE	- CHANNA
MARRO BROWN	NE DESET	

ECU CONNECTOR



WARNING:


on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.

DIRECT CONNECTION - ECU READING:

For the READING procedure use the FLAT cable F34NTF53

	1 25 2 26	
Pin	Colore	
• • • •	Colour	
11	Non usato	
20.000	Not used Non usato	
1.2	Not used	
10	Non usato	
13	Not used	
14	Non usato	
2.1	Not used	
15	Non usato Not used	
	Blu	
16	Blue	
17	Viola	
17	Violet	
18	Grigio	
	Grey Bianco	
19	White	
20	Nero	
20	Black	
21	Marrone Brown	
22	Rosso	
202	Red Arancio	
23	Orange	
24	Giallo	
	Yellow Verde	
25	verde Green	Marcary 1
26	Non usato	
26	Not used	

Connect the cable as shown here below.

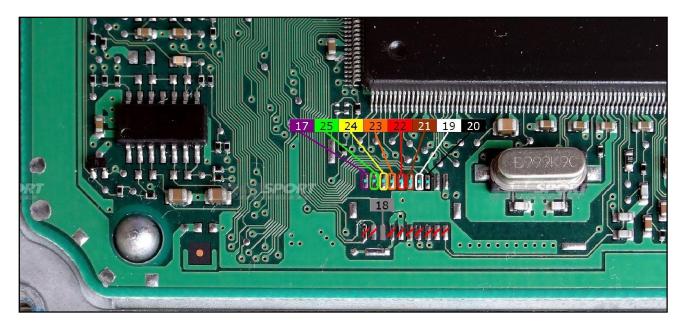

DIRECT CONNECTION - ECU WRITING:

For the WRITING procedure use the FLAT cable F34NTF51

