


plugin **1083**

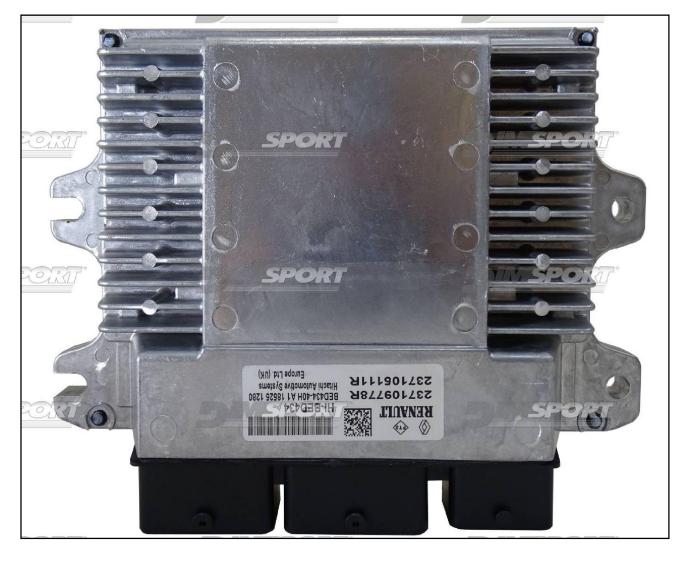

Cover side

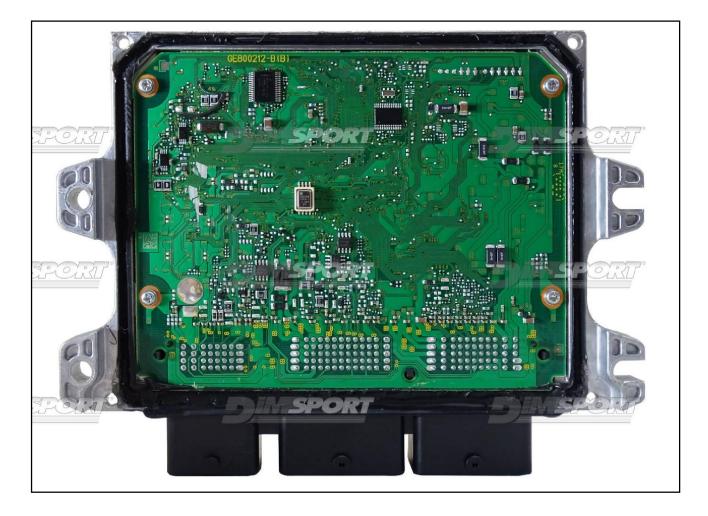

Processor side

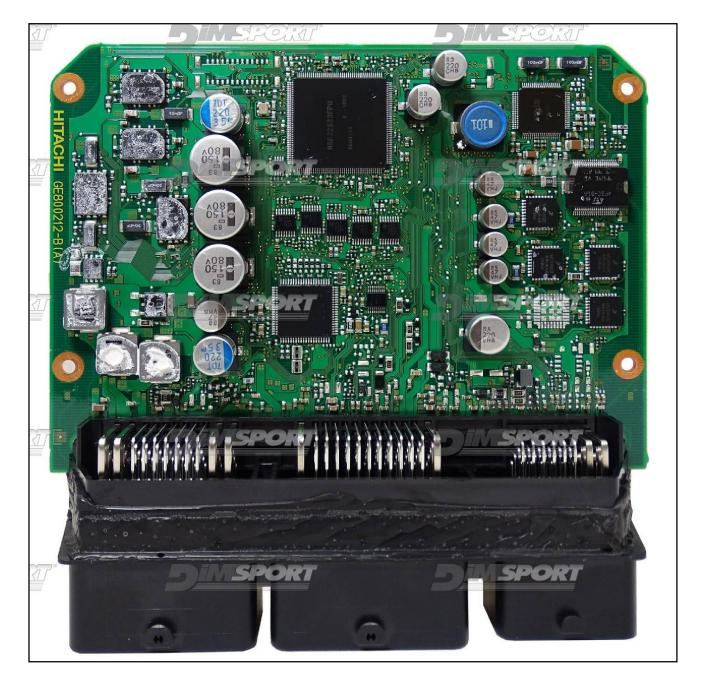

ECU CONNECTOR

For the connection use the cable F32GN037C connected to the ECU. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	F320N097C
BLU	POL5 CNF1	Bernard ()
	TENSIONE PROG. PROG. VOLTAGE	- CHANNED
MARRONE BROWN	RESET	

ECU CONNECTOR



J-TAG LOOSE WIRES CONNECTION

-


.

For the reading & writing procedures use the FLAT cable F34NTF53 Connect the wires on the pads avoiding any short circuits

	which which which which which which we wanted	
Pin	Colore Colour	
11	Non usato Not used	
12	Non usato	
3.4	Not used	
13	Non usato Not used	
	Nor usato	
14	Not used	
15	Non usato Not used	
10	Blu	
16	Blue	
17	Viola Violet	
	Grigio	
18	Grey	
19	Bianco	
	White Nero	
20	Black	
21	Marrone Brown	
2.2	Rosso Red	
	Arancio	
23	Orange	
24	Giallo Yellow	
	Verde	
25	Green	
26	Non usato Not used	

WARNING

In order to read&write properly the ECU it is necessary to perform a LINK1, LINK2, LINK3. The LINK can be left after the procedures.

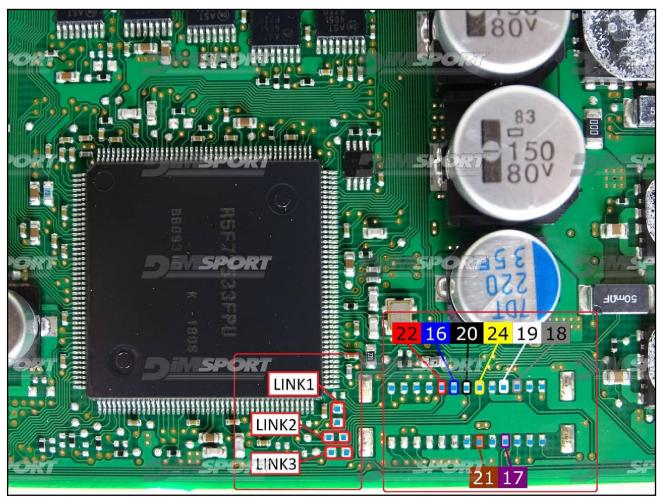

Connect the orange wire as in the following picture.

