plugin 1536



Upper side with Microprocessor




Lower side




DIRECT CONNECTION


In order to connect to the ECU use the cable F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON.

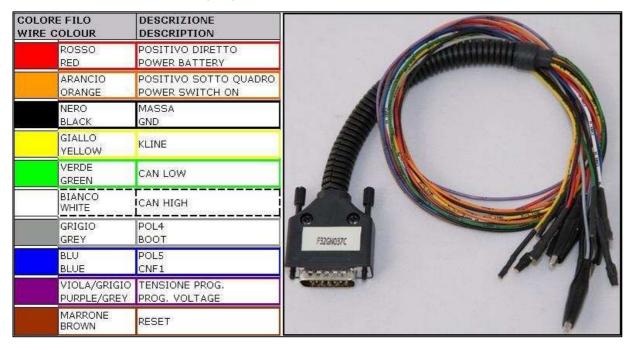

ECU CONNECTOR

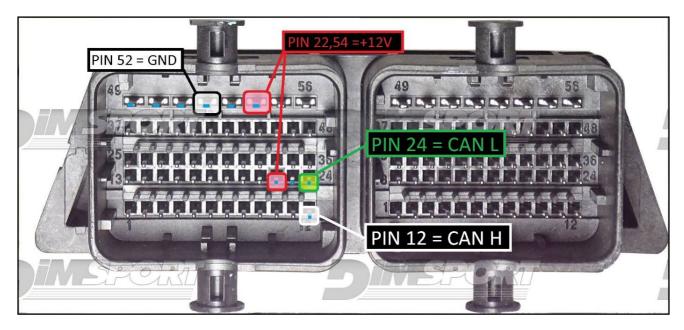

WARNING: in order to read&write properly the ECU it is necessary to perform two LINK, remove them before placing back the ECU into the vehicle.

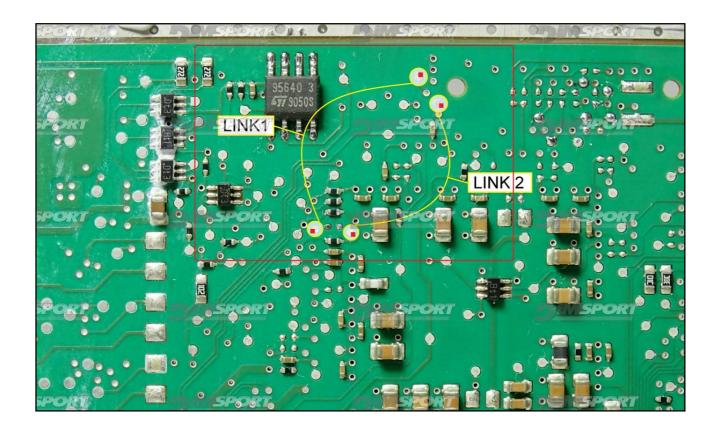

DIRECT CONNECTION CNF1

Connect the BLUE wire of the cable F32GN037C/D as described here below:

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
BLU BLUE	CNF1	

