## plugin 1700



Microprocessor side




Microprocessor's opposite side




#### **DIRECT CONNECTION**

In order to connect to the ECU use the CABLE F32GN037C/D.

Make sure that the POWER led (red) on Trasdata is ON. These connections are required for all the connection approaches: loose wires and metal positioning frame adapter.

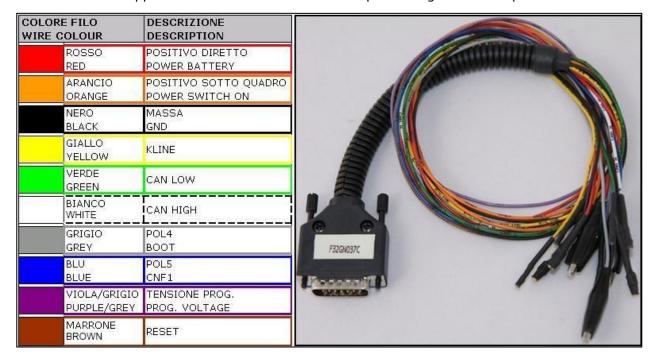

#### **ECU CONNECTOR**

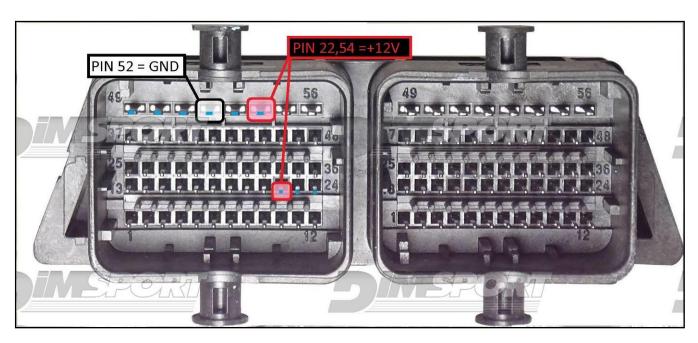

### J-TAG LOOSE WIRES CONNECTION

Connect the cable F34NTF53 as shown here below:

	11 25 12 26	
Pin	Colore	
	Coulor	
11	Non usato	
- 11	Not used	
12	Non usato Not used	
2000	Not used Non usato	
13	Not used	
14	Non usato	
	Not used	
15	Verde / Green	
16	Blu Blue	
17	Non usato	
17	Not used	
18	Grigio	
Name of the second	Grey Bianco	
19	White	
20	Nero	
20	Black	
21	Non usato	
- 20000	Not used Rosso	
22	Red	
23	Non usato	
23	Not used	
24	Giallo	
	Yellow Non usato	
25	Not used	
26	Non usato Not used	

Warning: to enable the J-TAG communication it is necessary to perform the 5 short-circuits LINKS as displayed in the following pictures.

The ECU can be placed back in the vehicle without removing the short-circuits LINK.

