plugin **835**




DIRECT CONNECTION


In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	F32GH037C
BLU BLUE	POL5 CNF1	Bernard II A
	TENSIONE PROG. PROG. VOLTAGE	- MANUS
MARRONE BROWN	RESET	

ECU CONNECTOR

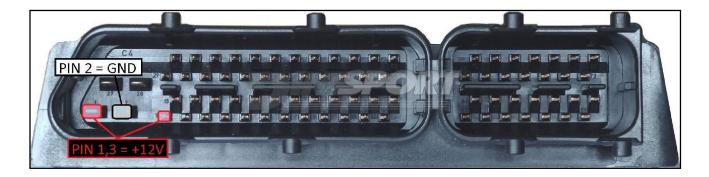



For a proper connection on the ECU it is necessary to remove the internal cover, as displayed in the following pictures you can use a screwdriver to lift the 4 little flaps that block the metal cover.

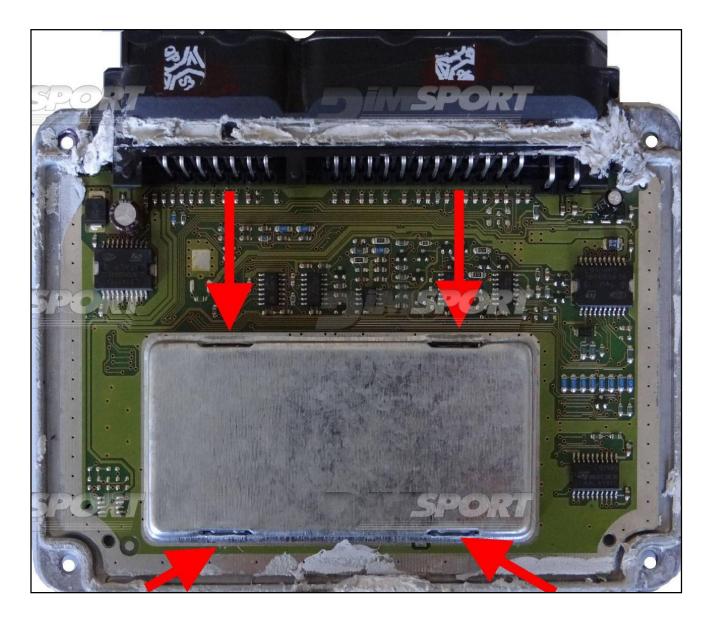

F34NTA11 ADAPTER CONNECTION

For a correct connection you have to solder the guiding strips on the marked pads as shown on the following pictures.

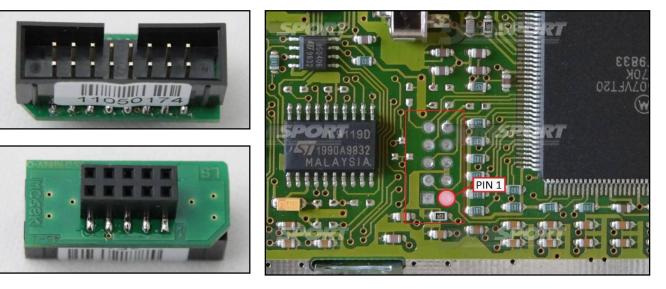

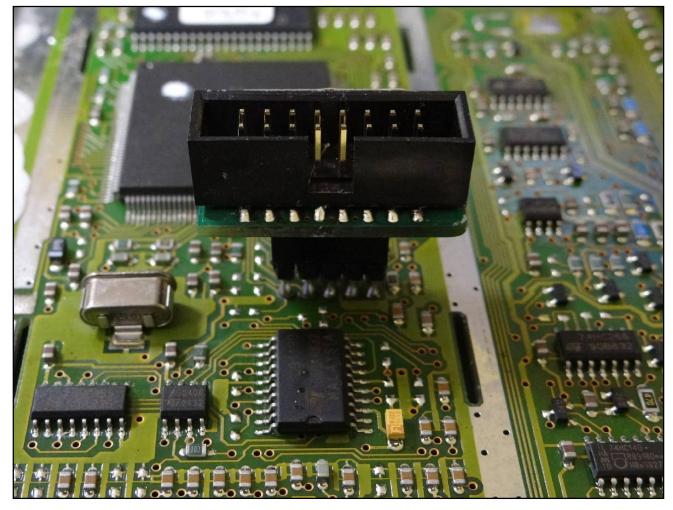

LOOSE WIRES CONNECTION:

Connect the cable F34NTF53 as shown here below:

