

MARELLI 9DF FCA

plugin 888



MARELLI 9DF FCA




MARELLI 9DF FCA

DIRECT CONNECTION


In order to connect to the ECU use the CABLE F32GN037C.

Make sure that the POWER led (red) on Trasdata is ON. These connections are required for all the connection approaches: loose wires and metal positioning frame adapter.

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION
ROSSO RED		POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE		POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK		MASSA GND
GIALLO YELLOW		KLINE
VERDE GREEN		CAN LOW
BIANCO WHITE		CAN HIGH
GRIGIO GREY		POL4 BOOT
BLU BLUE		POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY		TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN		RESET

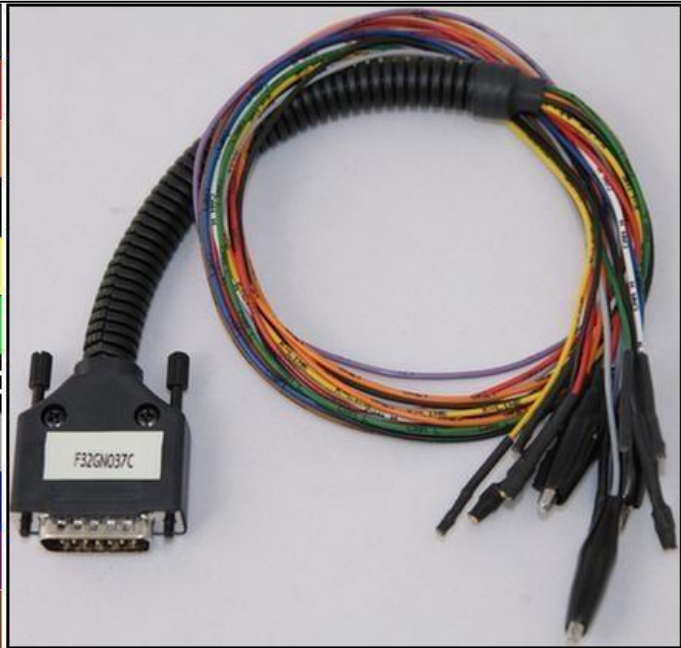

ECU CONNECTOR

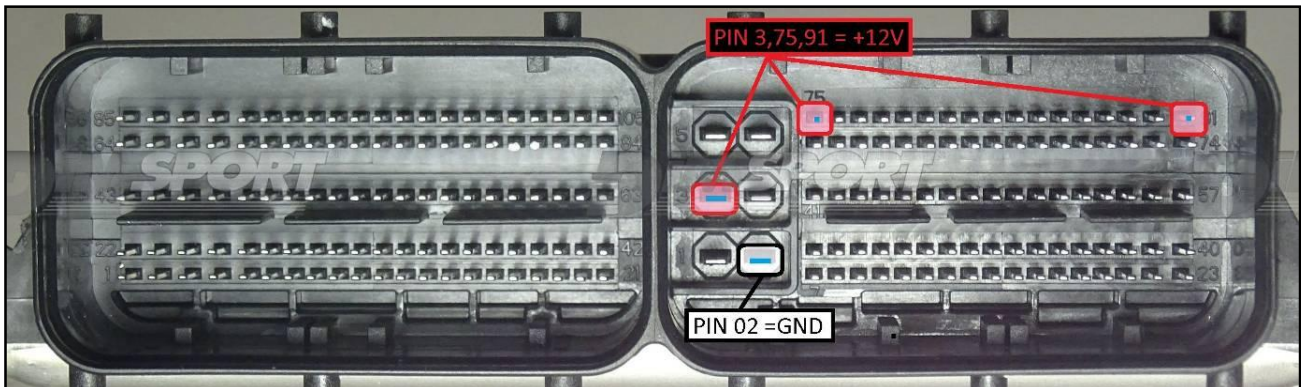

To the power feeding pins 3,75,91 (+12V) you can connect both wires red (VECU) and orange (VKEY) of the F32GN037C cable, they both have 12V signal.

MARELLI 9DF FCA

J-TAG LOOSE WIRES CONNECTION


Connect the cable F34NTF53 as shown here below:

Pin	Colore Color
11	Non usato Not used
12	Non usato Not used
13	Non usato Not used
14	Non usato Not used
15	Verde / Green
16	Blu Blue
17	Non usato Not used
18	Grigio Grey
19	Bianco White
20	Nero Black
21	Non usato Not used
22	Rosso Red
23	Non usato Not used
24	Giallo Yellow
25	Non usato Not used
26	Non usato Not used



MARELLI 9DF FCA



Connect the wires without creating any short-circuits between the pads.

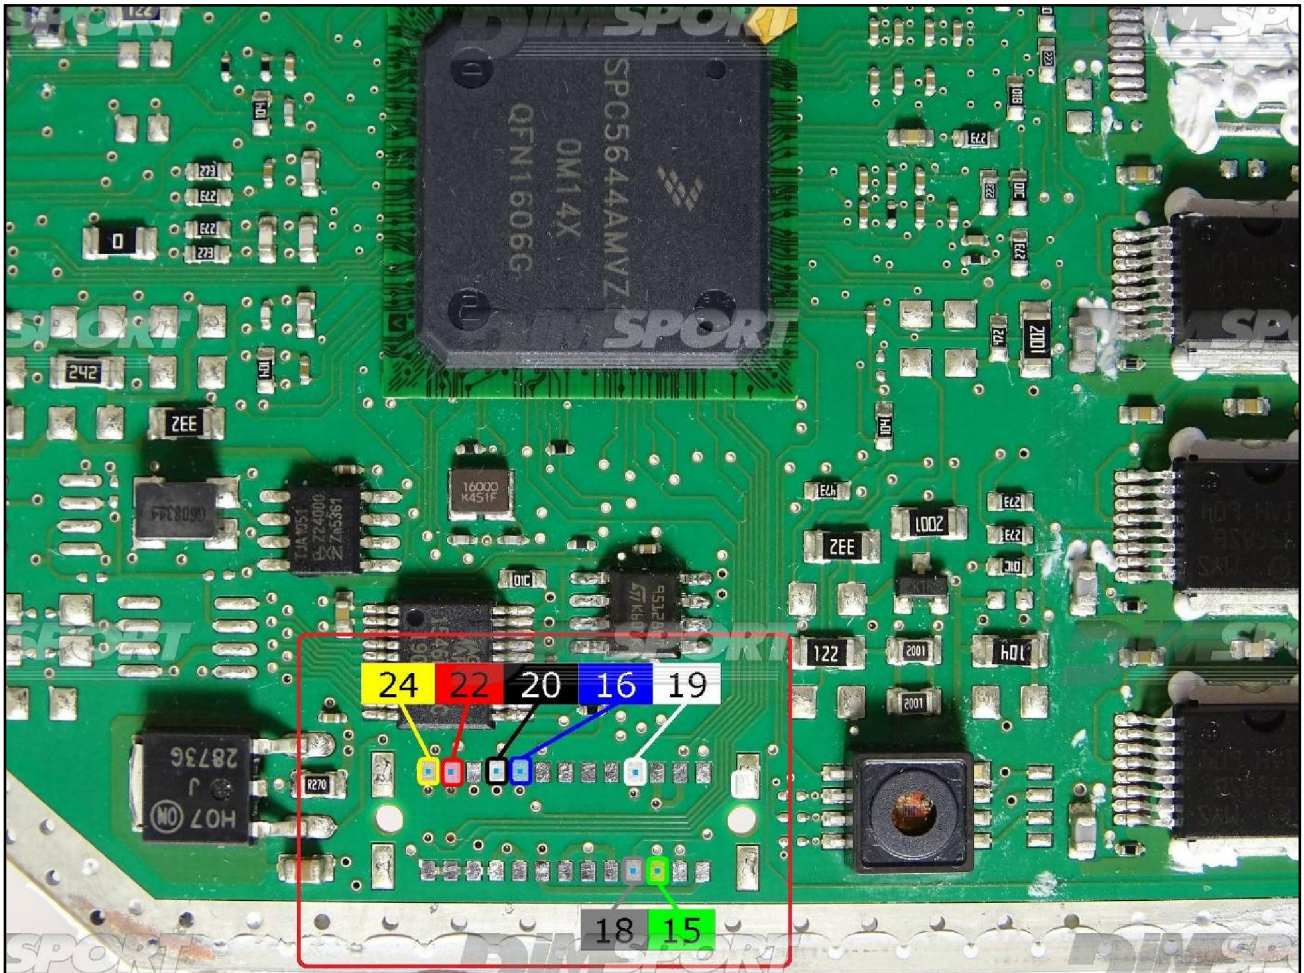


MARELLI 9DF FCA

METAL POSITIONING FRAME CONNECTION

For the metal positioning frame connection is required the F34DM025 adapter.

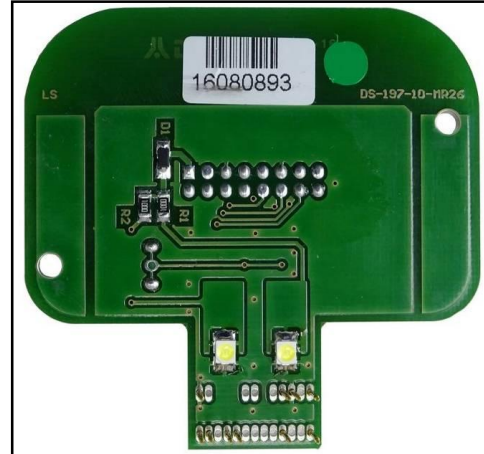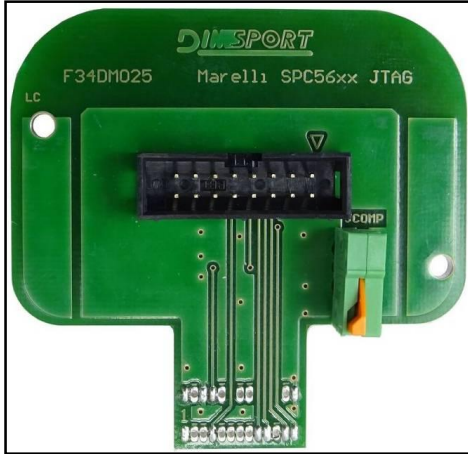


JTAG pads for the communication are placed below the microprocessor, check the PIN 1 position for a correct orientation of the adapter F34DM025.

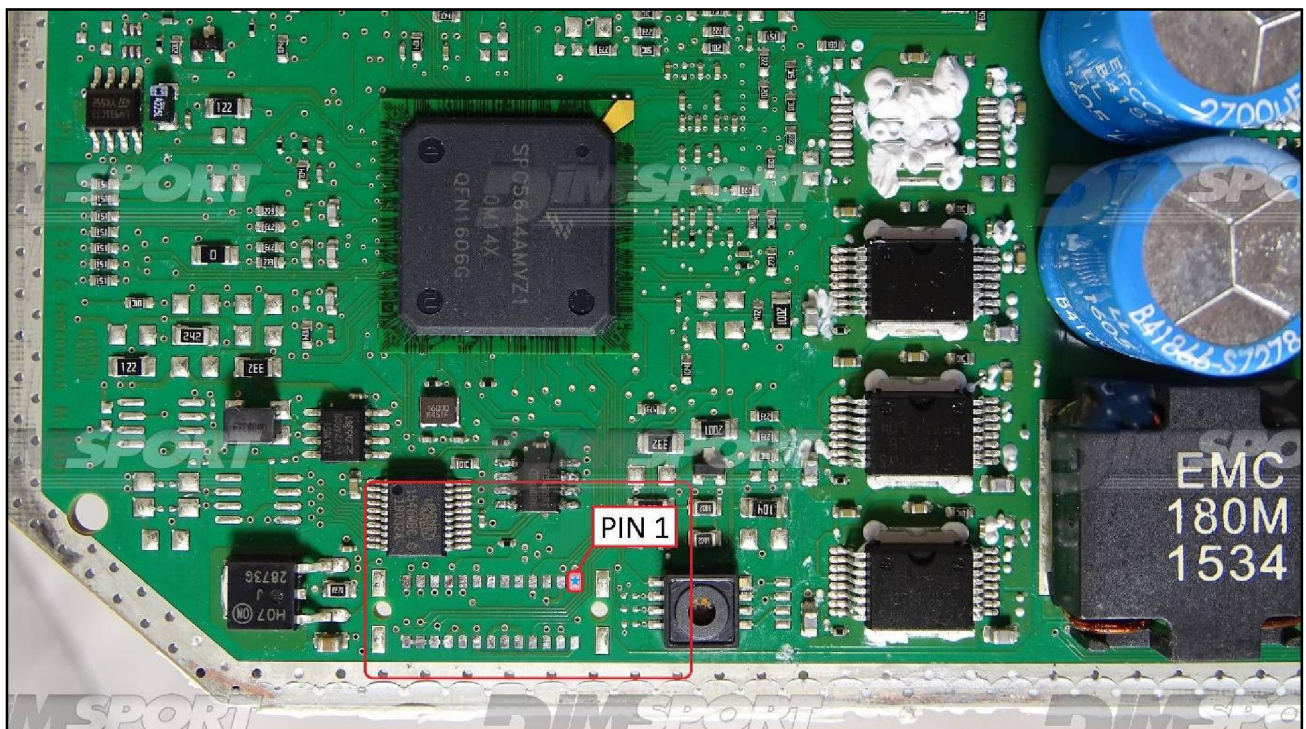

MARELLI 9DF FCA

The following picture is merely indicative.

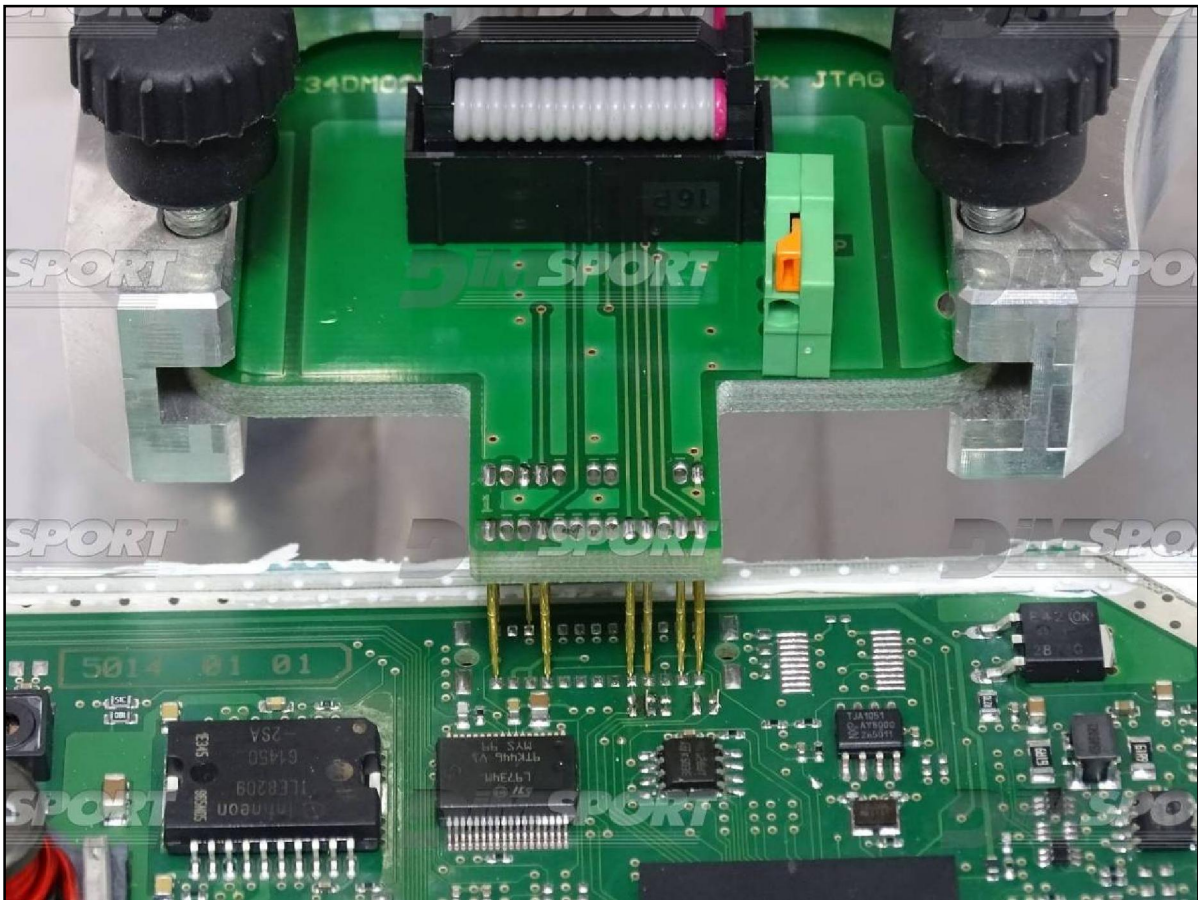

MARELLI 9DF FCA

The following picture is merely indicative.

