
## MITSUBISHI MH8102F 33920-98J60 SUZUKI

## plugin 1658



## DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON

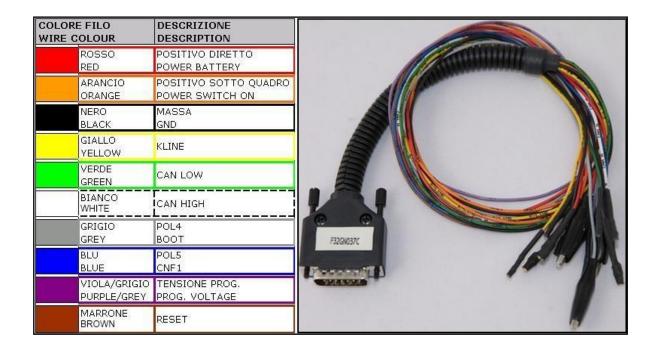

## **ECU CONNECTOR**

