MITSUBISHI MH8102F 33920-98J80 SUZUKI

plugin 1040



MITSUBISHI MH8102F 33920-98J80 SUZUKI

DIRECT LOOSE WIRES CONNECTION

For the connection with LOOSE WIRES use the cable F32GN037C connected to the ECU. Make sure that the POWER led (red) on Trasdata is ON



