
## MITSUBISHI MH8102F E6T38xxx MITSUBISHI


## **PLUGIN 474**

## **DIRECT CONNECTION**

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

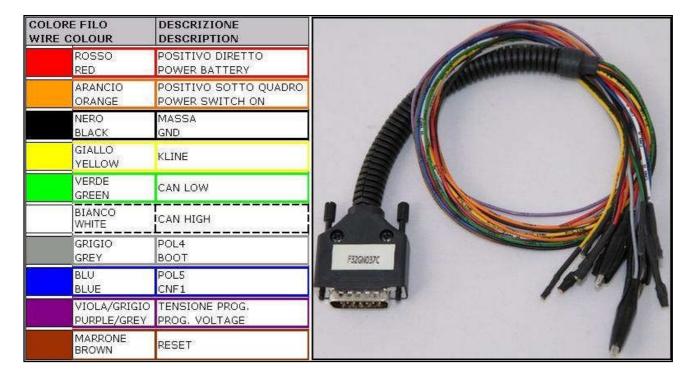

## **ECU CONNECTOR**

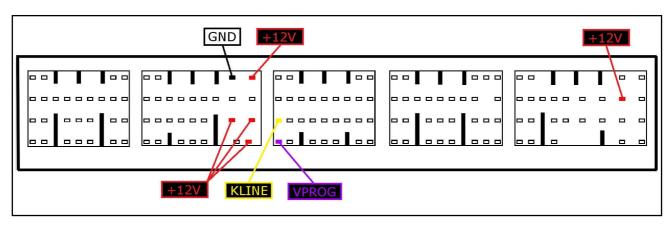

To the 5 power feeding pins you can connect both wires red and orange, they both have 12 Volt signal.