MITSUBISHI MH8102F E6T39xxx MITSUBISHI


plugin 1360



MITSUBISHI MH8102F E6T39xxx MITSUBISHI


DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

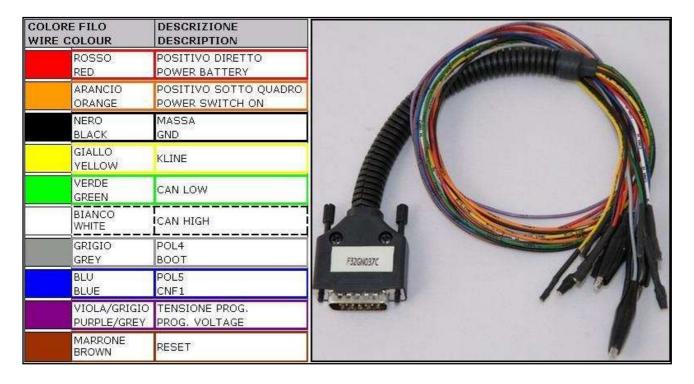

ECU CONNECTOR



 

To the power feeding pins +12V you can connect both wires red (VECU) and orange (VKEY) of the F32GN037C cable, they both have 12V signal.