
## MITSUBISHI MH8304F E6T44xxx MITSUBISHI


## plugin 602

## **DIRECT CONNECTION**

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

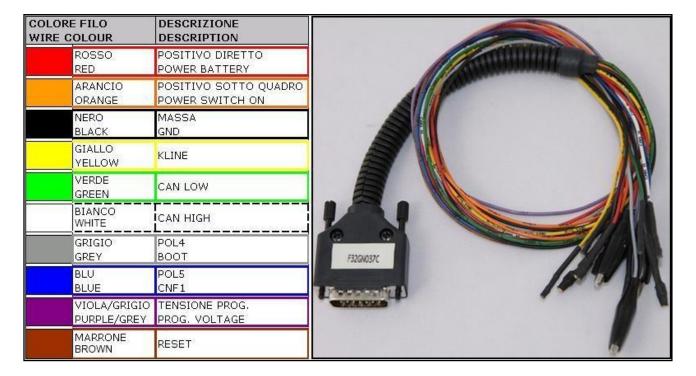

## **ECU CONNECTOR**

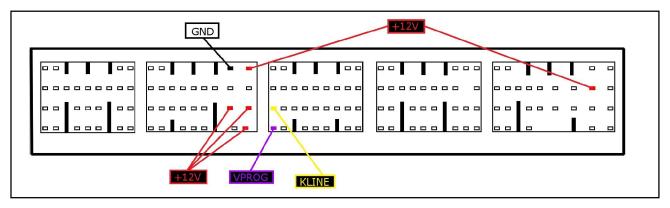

To the 5 power feeding pins you can connect both wires red and orange, they both have 12 Volt signal.

**WARNING:** after placing back the ECU in the vehicle it is possible that the vehicle has lost some self adaptive parameters (e.g. idle RPM). With warm engine temperature is then necessary to rev up to full scale 3 times and check that the car runs fine.