# plugin 595




The side to be opened is the one WITHOUT the connectors :



#### **DIRECT CONNECTION**

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO	DESCRIZIONE	
WIRE COLOUR	DESCRIPTION	
ROSSO	POSITIVO DIRETTO	
RED	POWER BATTERY	
ARANCIO	POSITIVO SOTTO QUADRO	
ORANGE	POWER SWITCH ON	
NERO	MASSA	
BLACK	GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO	POL4	
GREY	BOOT	
BLU	POL5	
BLUE	CNF1	
VIOLA/GRIGIO	TENSIONE PROG.	
PURPLE/GREY	PROG. VOLTAGE	
MARRONE BROWN	RESET <sup>®</sup>	

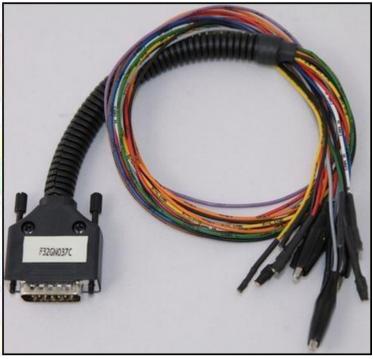



### **ECU CONNECTOR**




#### **CONNECTION** with the F34NTA11 ADPTER



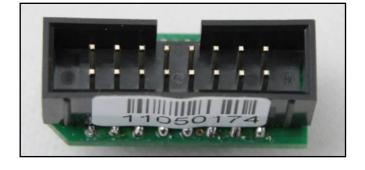


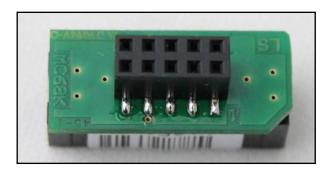

For a correct connection it is necessary to make the one bridge (link) and one other bridge with a resistor of  $100\ \text{Ohm}$ 

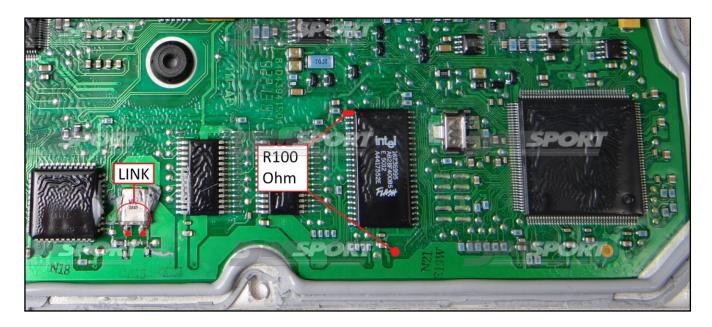

All these connections must be removed before restoring the ECU into the vehicle

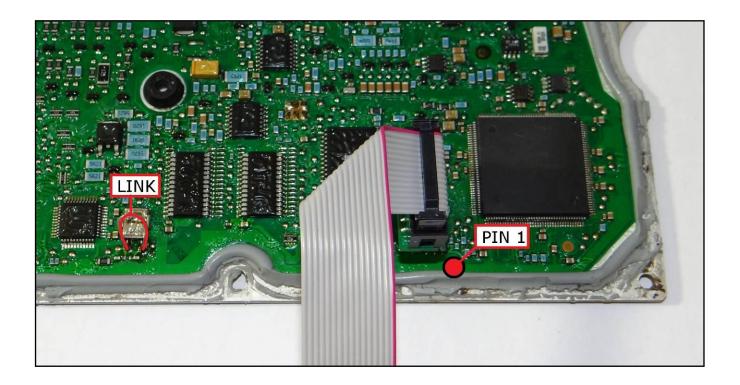

#### **ECU DIRECT CONNECTION WITH LOOSE WIRINGS:**

Connect the FLAT cable F34NTF53 as shown here below

Pin	Colore	
PIII	Coulor	
11	Non usato	
	Not used	
12	Non usato	
Co.	Not used Non usato	
13	Not used	
1.4	Non usato	
14	Not used	
15	Non usato	
13	Not used	
16	Blu Blue	
	Viola	
17	Violet	
10	Non usato	
18	Not used	
19	Bianco	
19	White	
20	Nero Black	
100-10	Marrone	
21	Brown	
2.2	Rosso	
22	Red	
23	Non usato	
	Not used	
24	Non usato Not used	
	Not used Non usato	
25	Not used	
26	Non usato	
20	Not used	

For a correct connection it is necessary to make the one bridge (link) and one other bridge with a resistor of  $100 \; \text{Ohm}$ 



All these connections must be removed before restoring the ECU into the vehicle.