


# MOTOROLA PERKINS

## plugin 161

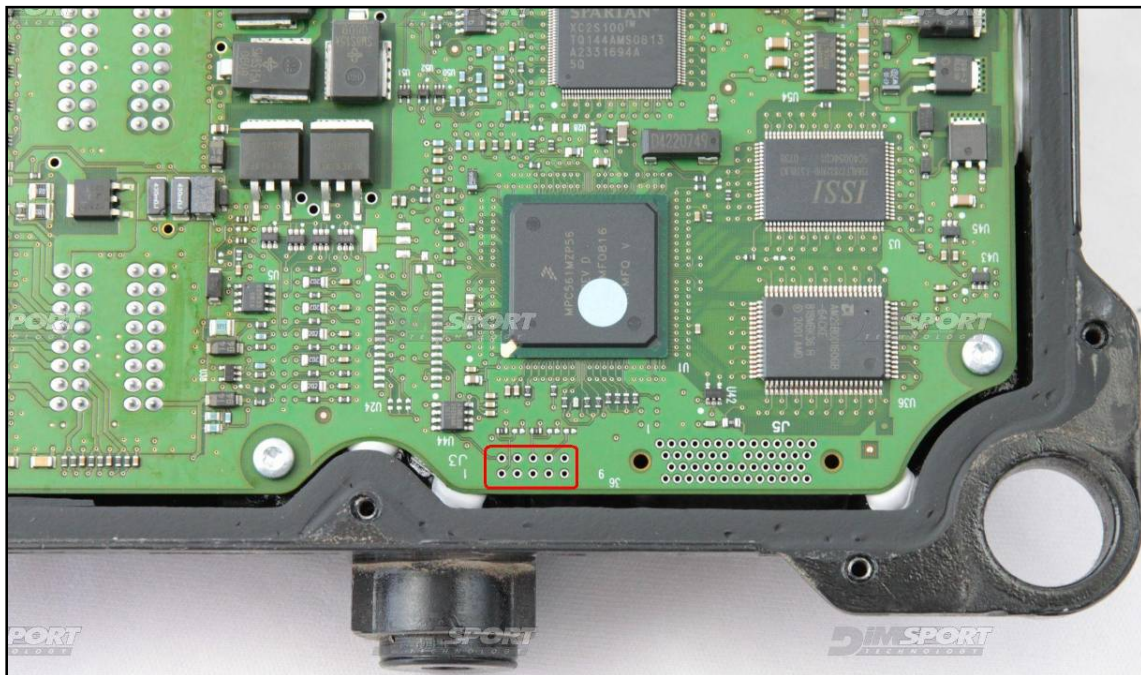


## MOTOROLA PERKINS

### ECU CONNECTOR

In order to connect to the ECU use the CABLE F32GN037C/D.  
Make sure that the POWER led (red) on Trasdata is ON.


COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

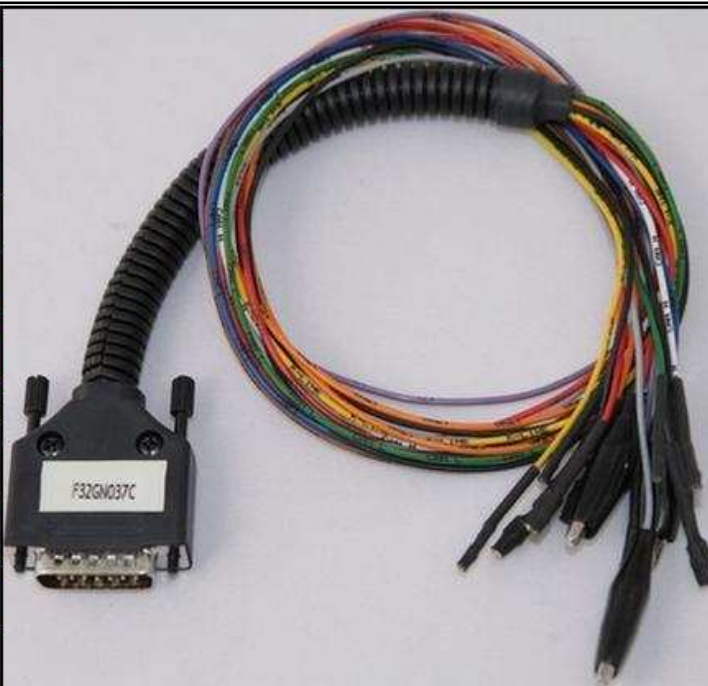

Due to the relevant power absorbed by the ECU at the beginning of the communication procedures it is necessary to feed the ECU with a booster or an additional battery. The ECU must be fed through the Trasdata, connect the F32GN003 power cable to the Trasdata.





MOTOROLA PERKINS

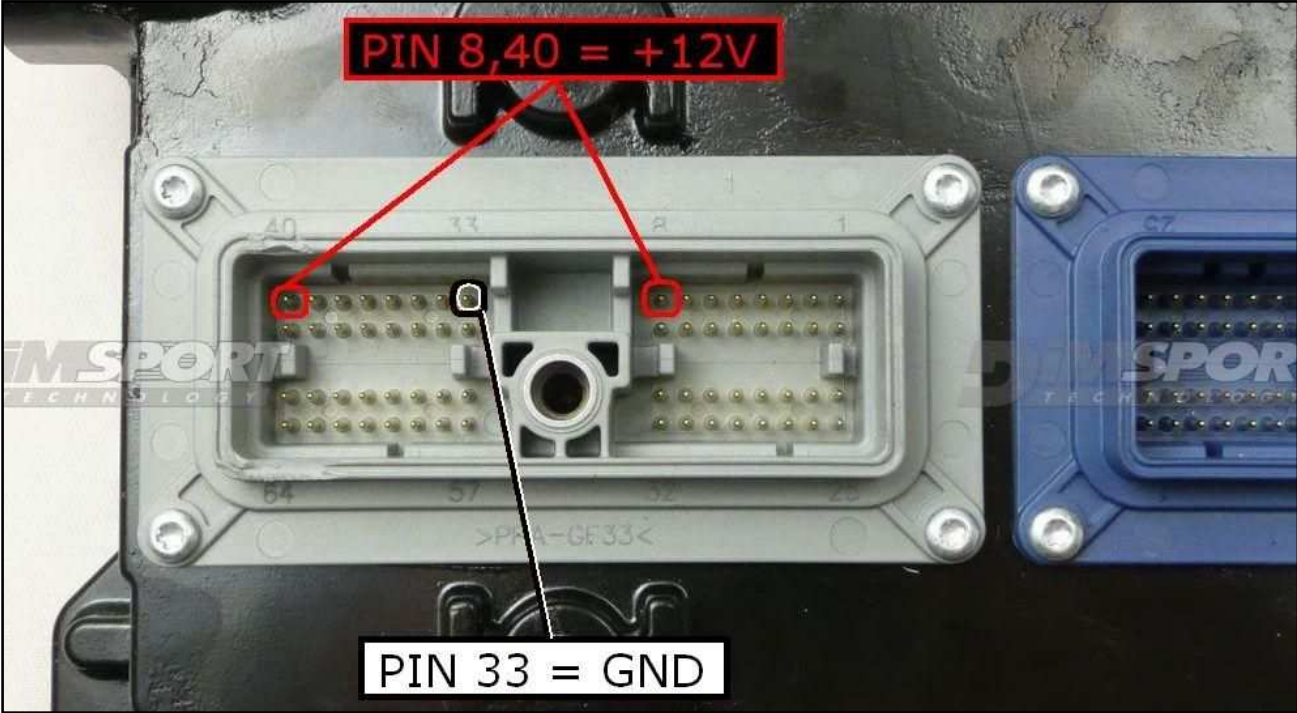

# MOTOROLA PERKINS

## F34NTA03 ADAPTER CONNECTION

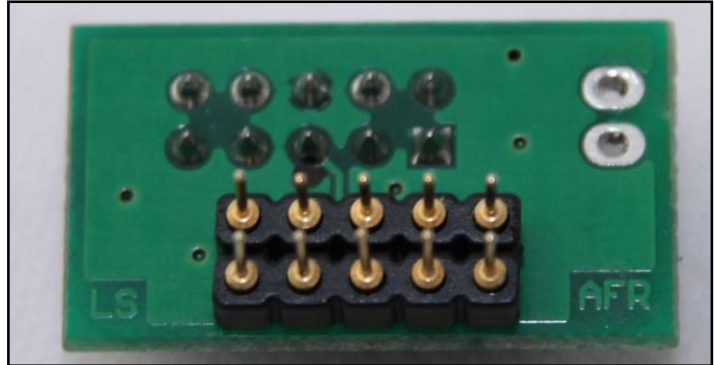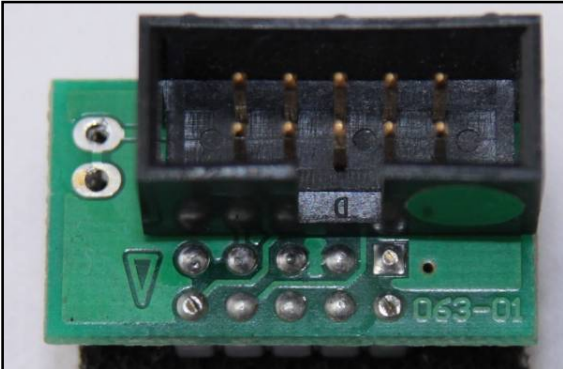

# MOTOROLA PERKINS

## F34DM001 DIMA CONNECTION

