plugin **978**





DIRECT CONNECTION

In order to connect to the ECU use the cable F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.


COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	F3200057C
BLU BLUE	POL5 CNF1	Bernard II
	TENSIONE PROG. PROG. VOLTAGE	- CHANNED
MARRONE BROWN	RESET	


ECU CONNECTOR



DIRECT CONNECTION – ECU READING

For the READING procedure use the FLAT cable F34NTF53

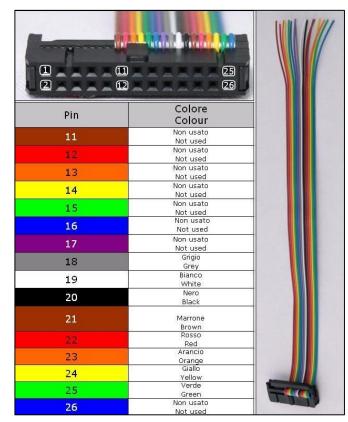

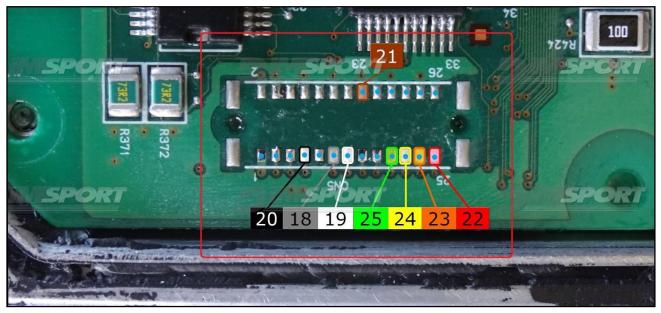

DIRECT CONNECTION – ECU WRITING

For the WRITING procedure use the FLAT cable F34NTF51

