

PHOENIX L16 JOHNDEERE


plugin 236



DIRECT CONNECTION


In order to connect to the ECU use the CABLE F32GN037C/D.
Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

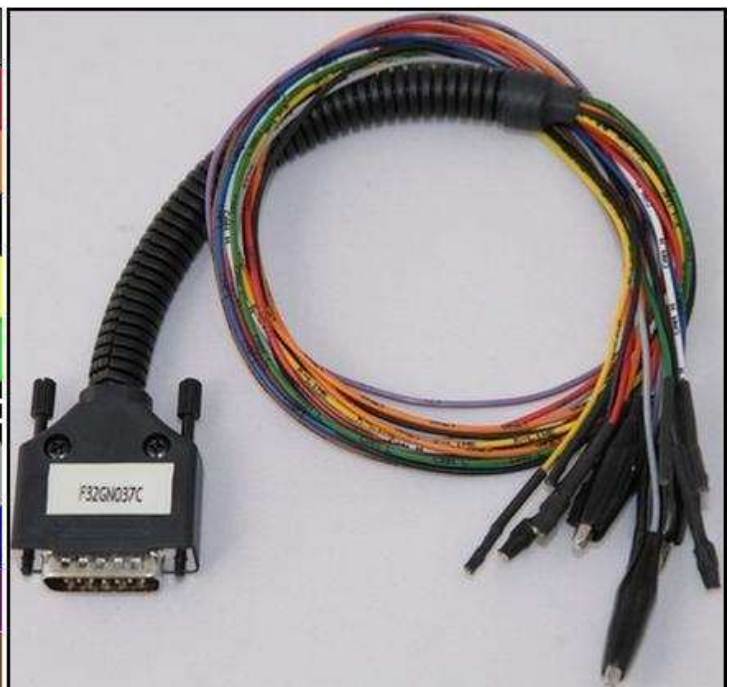

PHOENIX L16 JOHNDEERE

ECU CONNECTOR

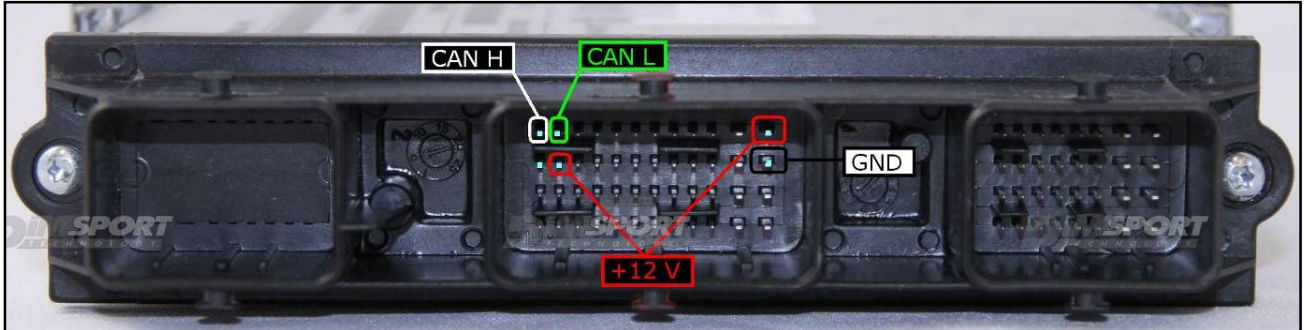

BOOT&CNF1 DIRECT CONNECTION

In order to get access to the BOOT & CNF1 lay-by pins it is necessary to remove the cover on the ECU side shown in the picture here below. For a correct reference place the empty connector (without pins) of the ECU on the right side



PHOENIX L16 JOHNDEERE

Connect the GREY and BLUE wires of the cable F32GN037C/D as described here below :

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1

