


PHOENIX L4 JOHNDEERE

plugin 463



PHOENIX L4 JOHNDEERE

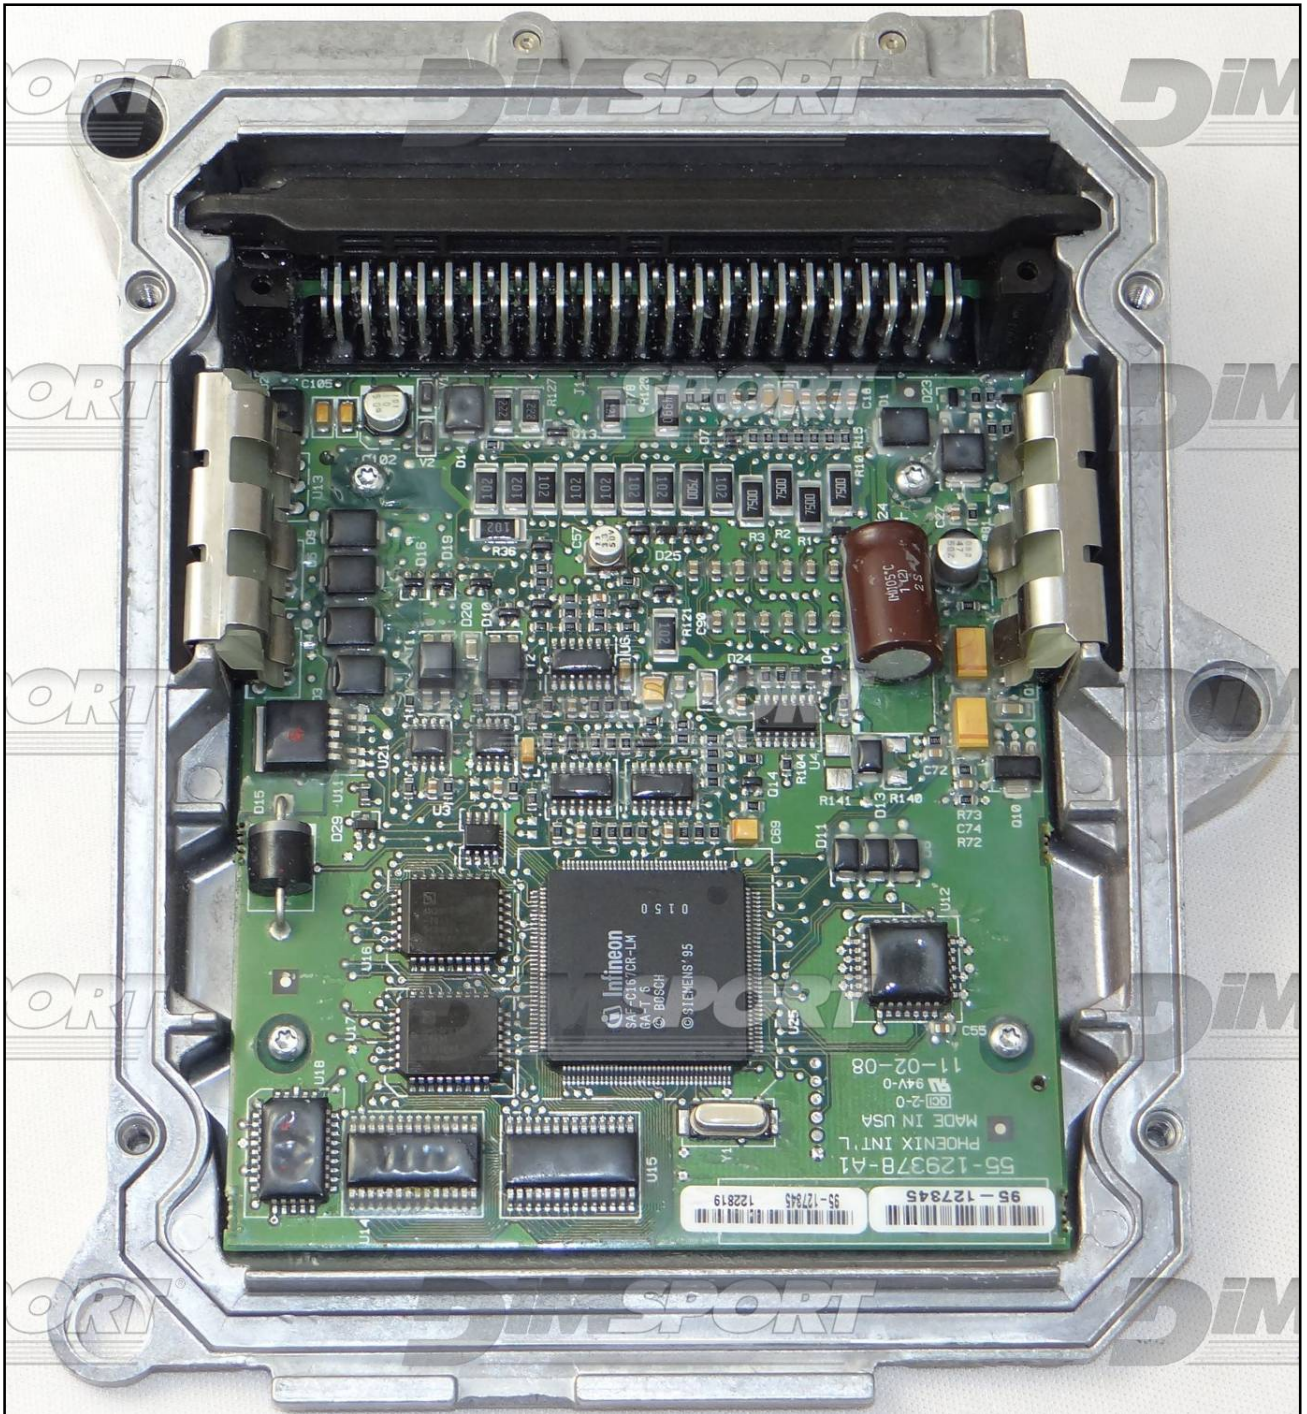


PHOENIX L4 JOHNDEERE


DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C/D.
Make sure that the POWER led (red) on Trasdata is ON

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

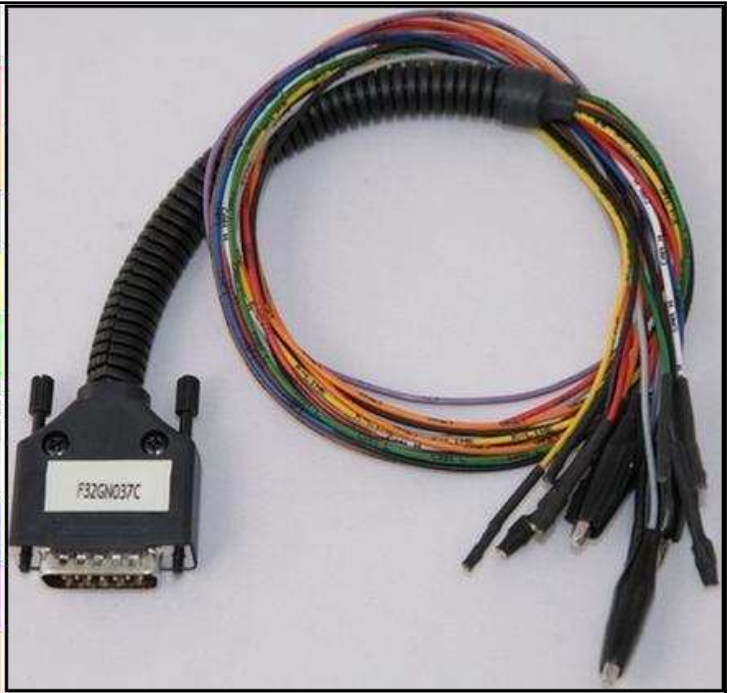


ECU CONNECTOR

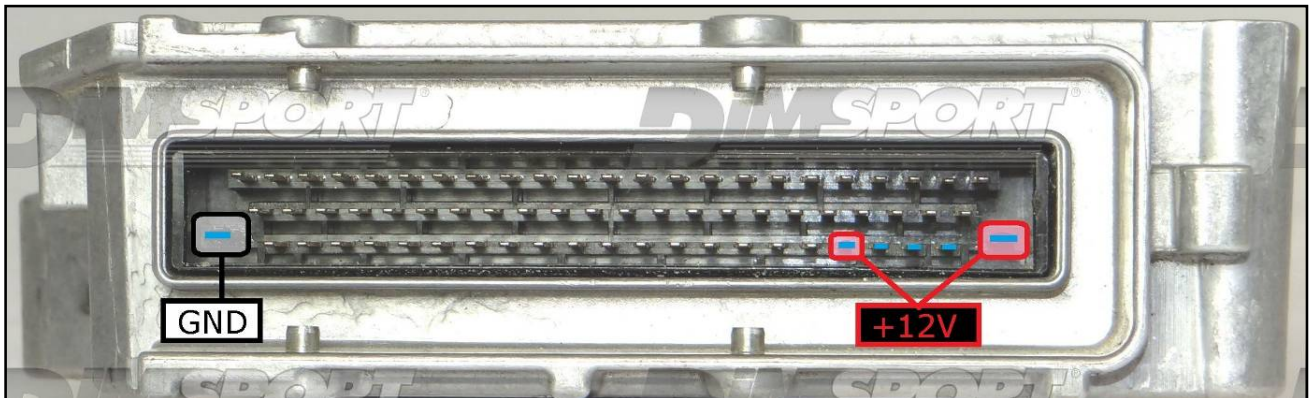

PHOENIX L4 JOHNDDEERE

BOOT/POL4 CONNECTION

To operate on the ECU remove the resistor as shown in the picture.
Put the resistor back in its place at the end of the reading/writing operations

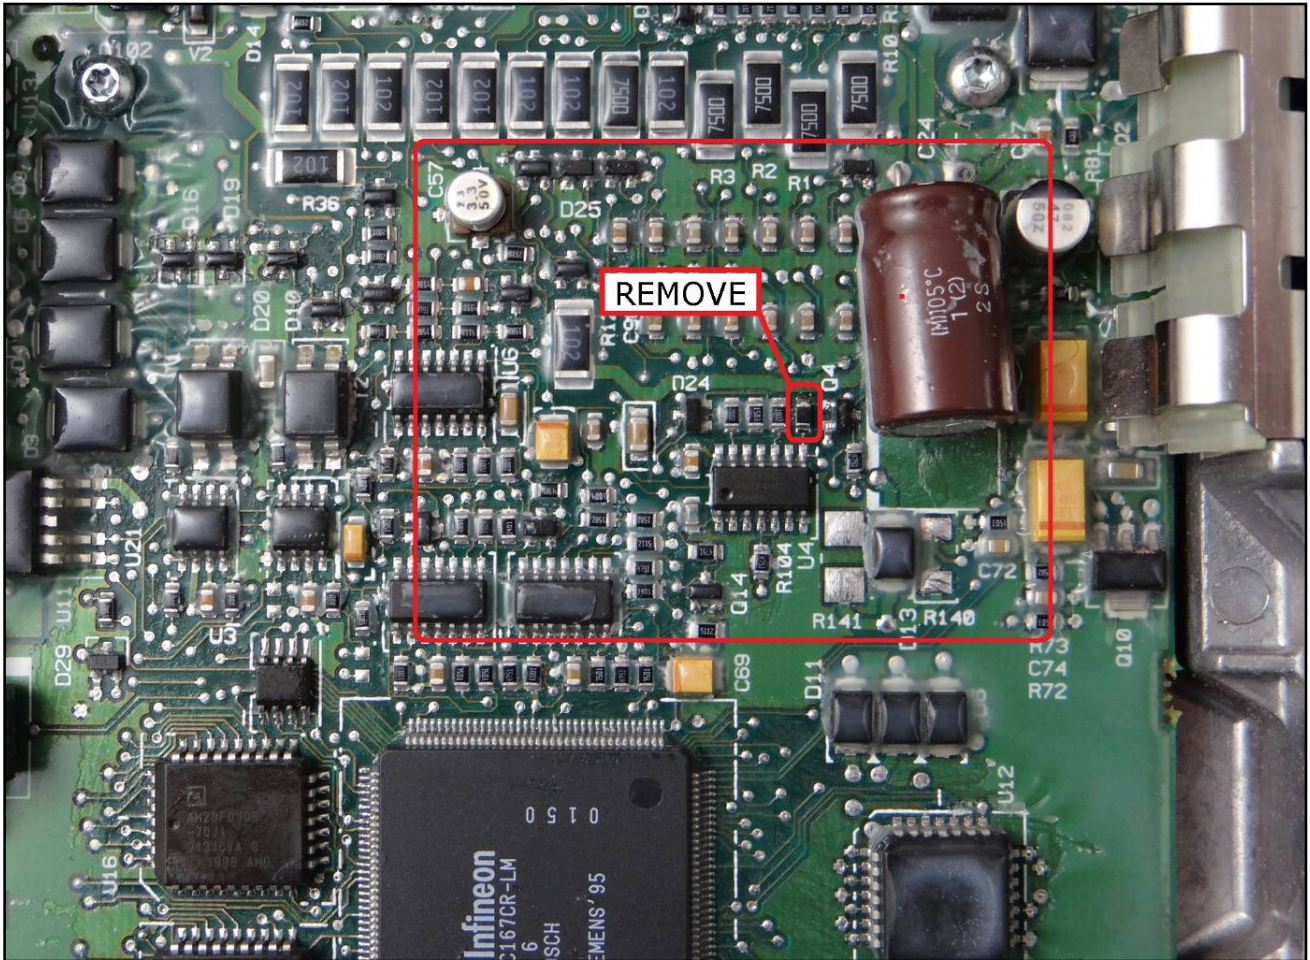

PHOENIX L4 JOHNDEERE

Connect GREY wire of the cable F32GN037C/D as per specifications :


COLORE FILO WIRE COULOR	DESCRIZIONE DESCRIPTION
GRIGIO GREY	POL4 BOOT

RX & TX CONNECTIONS

To connect RX and TX communication lines is necessary to use FLAT F34NTF53.
ATTENTION the black wire n.20 MUST BE soldered directly on the MPC.

Pin	Colore Colour
11	Non usato Not used
12	Non usato Not used
13	Non usato Not used
14	Non usato Not used
15	Non usato Not used
16	Blu Blue
17	Viola Violet
18	Grigio Grey
19	Bianco White
20	Nero Black
21	Marrone Brown
22	Rosso Red
23	Arancio Orange
24	Giallo Yellow
25	Verde Green
26	Non usato Not used

PHOENIX L4 JOHNDDEERE

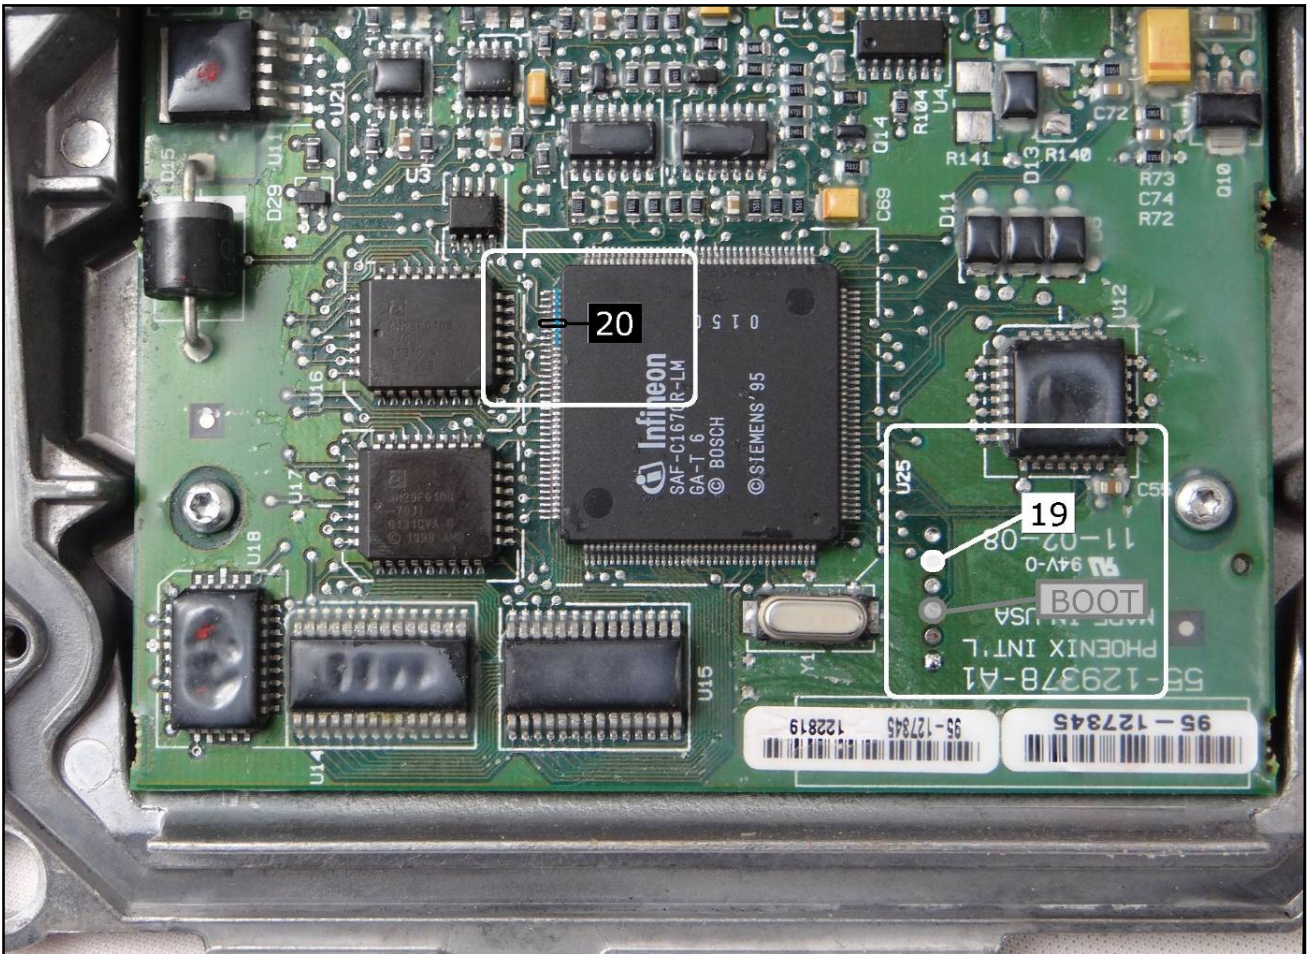

MICRO detail

