
plugin 1094-1743

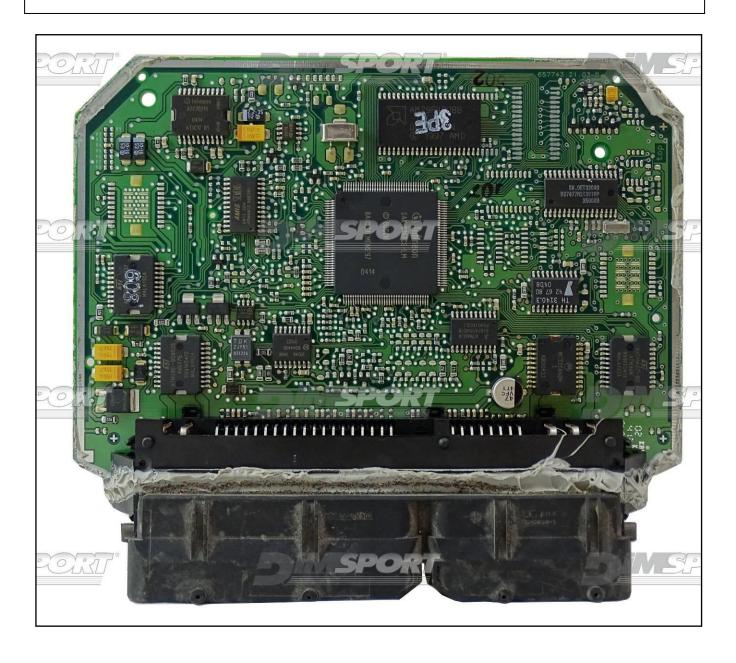




DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO	DESCRIZIONE	
WIRE COLOUR	DESCRIPTION	
ROSSO	POSITIVO DIRETTO	
RED	POWER BATTERY	
ARANCIO	POSITIVO SOTTO QUADRO	
ORANGE	POWER SWITCH ON	
NERO	MASSA	
BLACK	GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO	POL4	
GREY	BOOT	
BLU	POL5	
BLUE	CNF1	
	TENSIONE PROG. PROG. VOLTAGE	
MARRONE BROWN	RESET	



ECU CONNECTOR

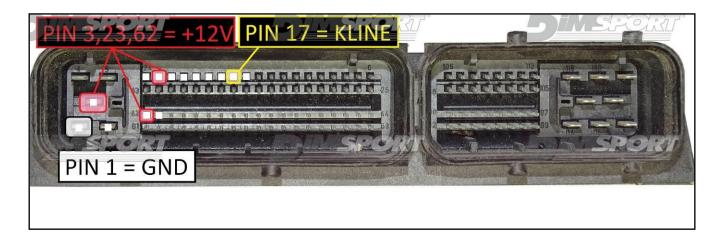

To the power feeding pins 3,23,62 (+12V) you can connect both wires red (VECU) and orange (VKEY) of the F32GN037C/D cable, they both have 12V signal.

BOOT CONNECTION

Connect the GREY wire of the cable F32GN037C/D as described here below :

RE FILO COULOR	DESCRIZIONE DESCRIPTION	
GRIGIO GREY	POL4 BOOT	

