plugin 1579



DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COULOR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHYTE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	F32GN037C
BLU BLUE	POL5 CNF1	Formatil 1
	TENSIONE PROG. PROG. VOLTAGE	- CHANGE
MARRONE GREY	RESET*	

WARNING:

Due to the relevant power absorbed by the ECU at the beginning of the communication it is necessary to feed the ECU with an external power supply or a car battery. Connect the power cable F32GN003 to the Trasdata and then to the power source.

The ECU must be powered through the Trasdata using the F32GN037C/D cable.



CONTINENTAL MSD87.x XROM TC1796 SSM BENCH BMW

ECU CONNECTOR

