## plugin 110


The lay-by pins are placed in the lower side of the ECU as shown in the picture below.



#### **ECU CONNECTOR**


In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.


COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	F32CH037C
BLU BLUE	POLS CNF1	December 1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	
MARRONE BROWN	RESET	

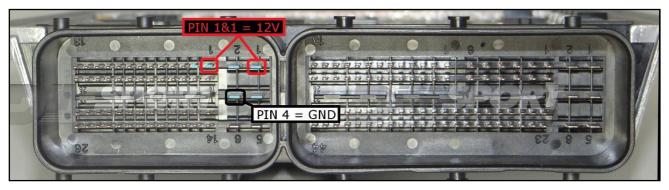

To the power feeding 1&1 pins (+12V) you can connect both wires red (VECU) and orange (VKEY), they both have 12 Volt signal.

# **DIRECT CONNECTION with the adapter F34NTA06**Connect the adapter F34NTA06 as shown in the picture.

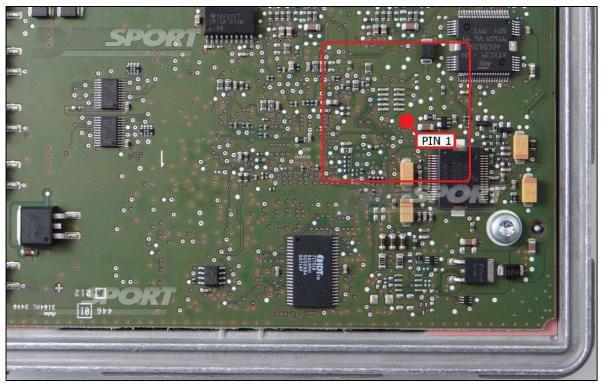

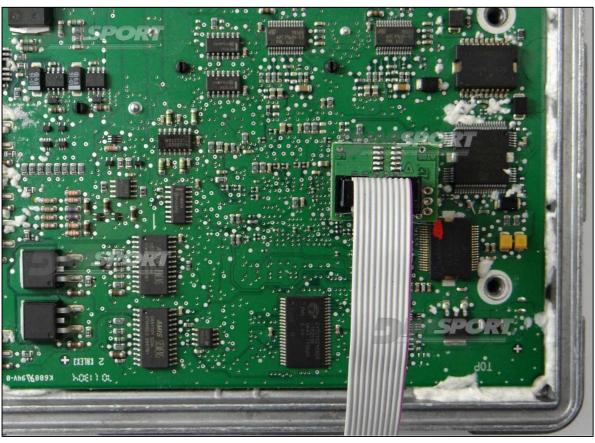

#### **METAL POSITIONING FRAME CONNECTION**

For the metal positioning frame connection is required the adapter F34DM003+F34DM004, please verify the correct position of PIN 1.

