

## SID 206 FORD

### plugin 082

The lay-by pins are placed in the lower side of the ECU as shown in the picture below.





## SID 206 FORD

### ECU CONNECTOR

In order to connect to the ECU use the CABLE F32GN037C.  
Make sure that the POWER led (red) on Trasdata is ON.


COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

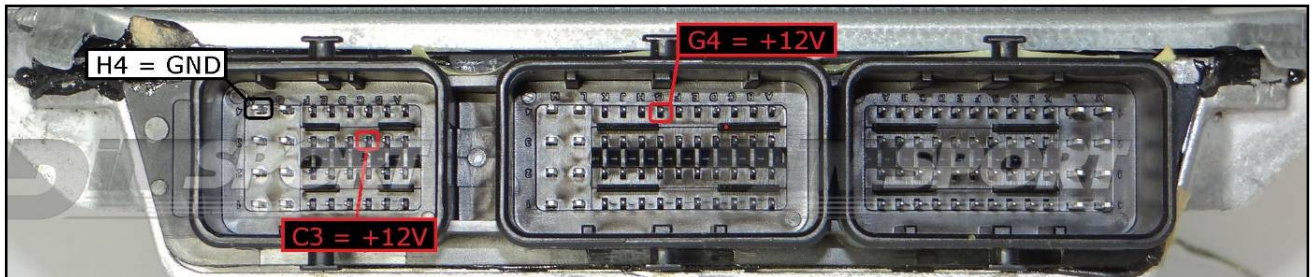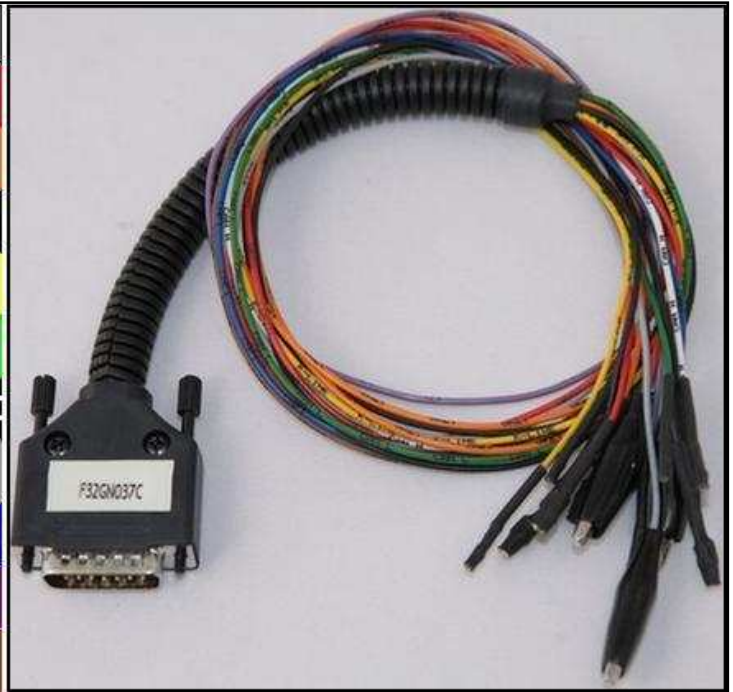

## SID 206 FORD

### **DIRECT CONNECTION with adapter SIEMENS F34NTA006**

Connect the F34NTA006 adapter as shown in the picture here below.

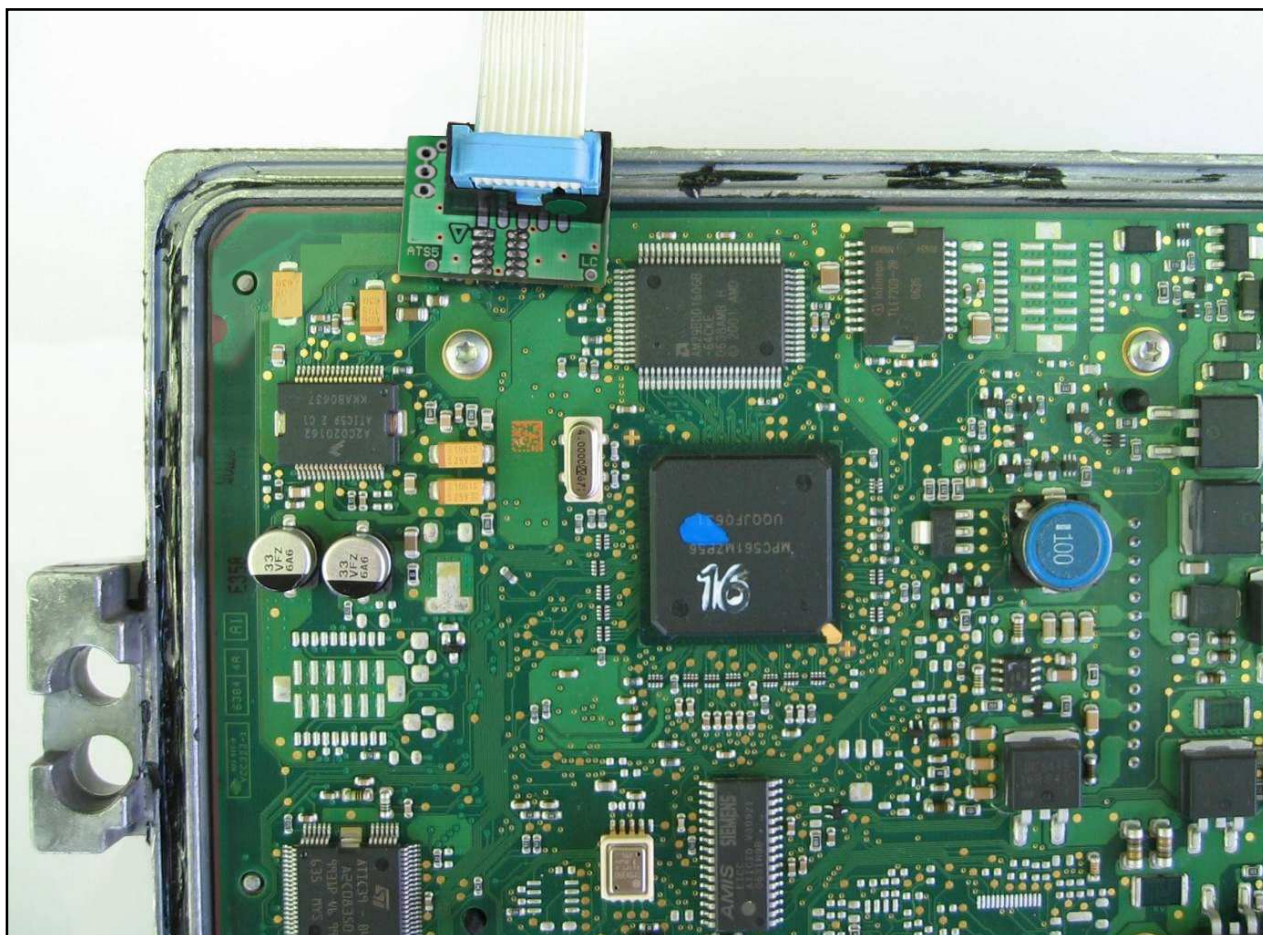

## SID 206 FORD

### DIMA CONNECTION

It is necessary to connect the adapter F34DM003 on the F34DM004, be careful to the correct position of PIN 1.

