plugin 081

The lay-by pins are placed in the lower side of the ECU as shown in the picture below.



ECU CONNECTOR


In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	ICAN HIGH	
GRIGIO GREY	POL4 BOOT	F32GN037C
BLU BLUE	POL5 CNF1	December 1
	TENSIONE PROG. PROG. VOLTAGE	THE STATE OF THE S
MARRONE BROWN	RESET	



DIRECT CONNECTION with adapter SIEMENS F34NTA06

Connect the F34NTA06 adapter as shown in the picture here below.

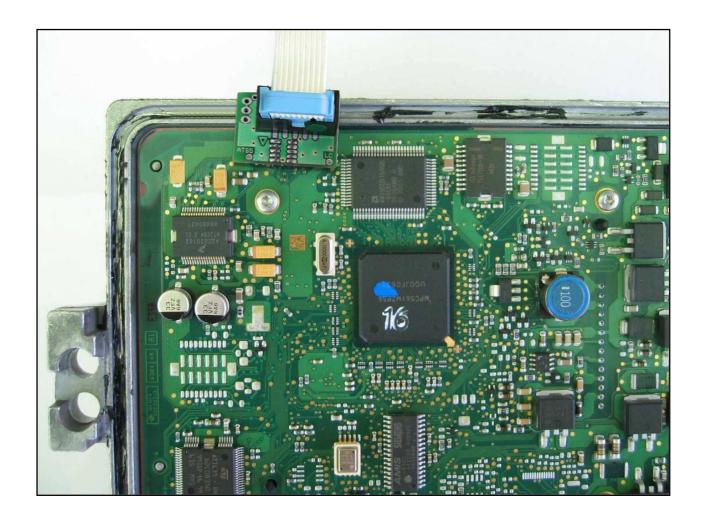

DIMA CONNECTION

It is necessary to connect the adapter F34DM003 on the F34DM004, be careful to the correct position of PIN 1.

