
plugin **1126**





ECU CONNECTOR

In order to connect to the ECU use the cable F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

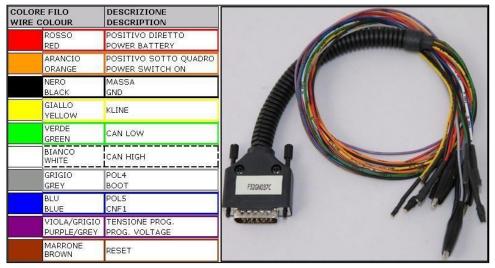

Due to the relevant power absorbed by the ECU at the beginning of the communication it is necessary to feed the ECU with an external power supply or a car battery. Connect the power cable F32GN003 to the Trasdata and then to the power source.

The ECU must be powered through the Trasdata using the F32GN0037C cable.





To the power feeding pins 83,97,98 (+24V) you can connect both wires red (VECU) and orange (VKEY) of the F32GN037C cable.

BOOT&CNF1 CONNECTION

In order to read & write properly the ECU it is necessary to perform a LINK, remove it before placing back the ECU into the vehicle.

Connect the GREY&BLUE wires of the cable F32GN037C as described here below:

| COLORE FILO WIRE COLOUR | | DESCRIZIONE DESCRIPTION | |
|----------------------------|----------------|----------------------------|--|
| | GRIGIO GREY | POL4 BOOT | |
| | BLU BLUE | POL5 CNF1 | |

