
# plugin 457

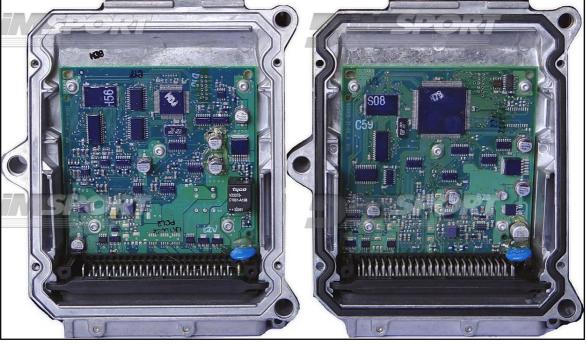






#### **ECU CONNECTOR**

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
	ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
	NERO BLACK	MASSA GND	
	GIALLO YELLOW	KLINE	
	VERDE GREEN	CAN LOW	
	BIANCO WHITE	ICAN HIGH	
	GRIGIO GREY	POL4 BOOT	
	BLU BLUE	POL5 CNF1	
		TENSIONE PROG. PROG. VOLTAGE	
	MARRONE BROWN	RESET	

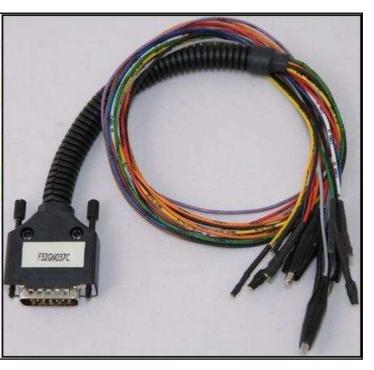



#### **CNF1 CONNECTION**

Connect the BLUE wire of the F32GN037C/D cable as shown here below:

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	BLUE	POL5 CNF1	

## **RX, TX, GND CONNECTION**

To connect the RX ,TX & GND communication lines use the F34NTF53 FLAT wiring

