

plugin **852**

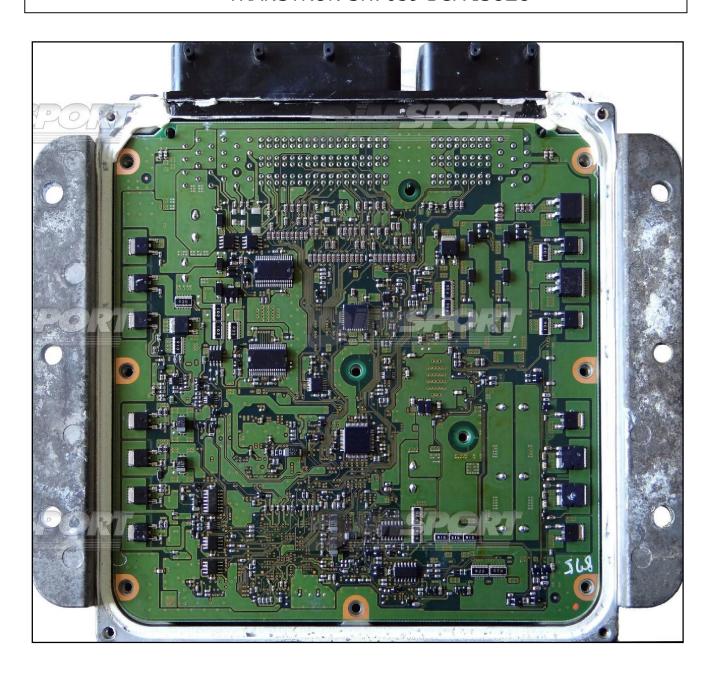

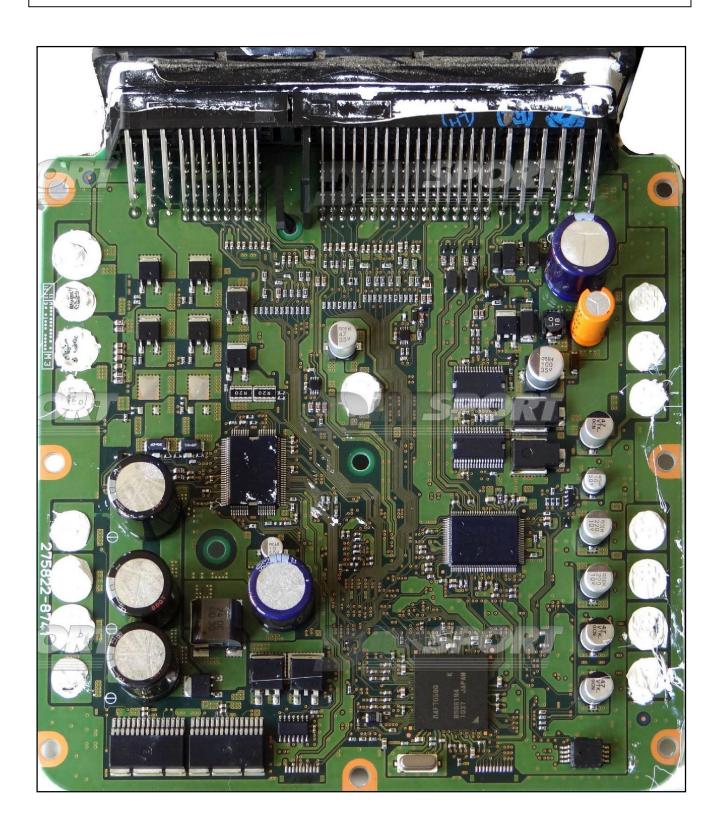





DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
	GIO TENSIONE PROG. REY PROG. VOLTAGE
MARRONE BROWN	RESET

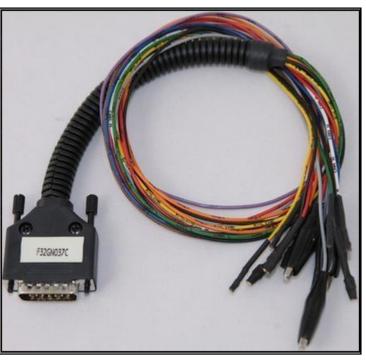

ECU CONNECTOR

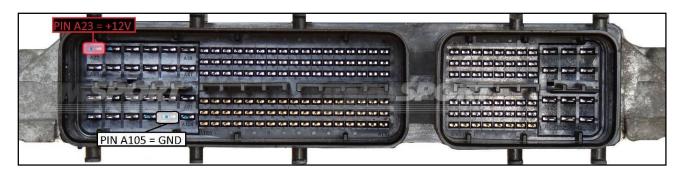



WARNING:

on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.

DIRECT CONNECTION – ECU READING:

For the READING procedure use the FLAT cable F34NTF53

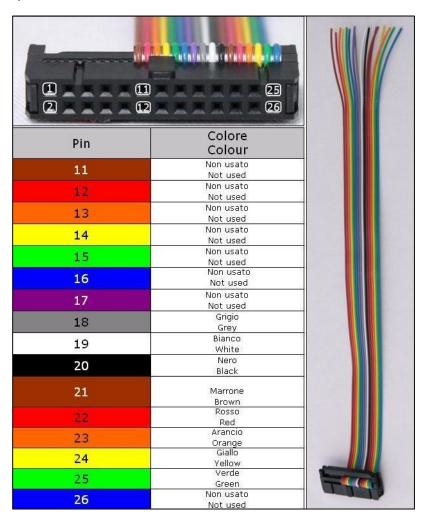

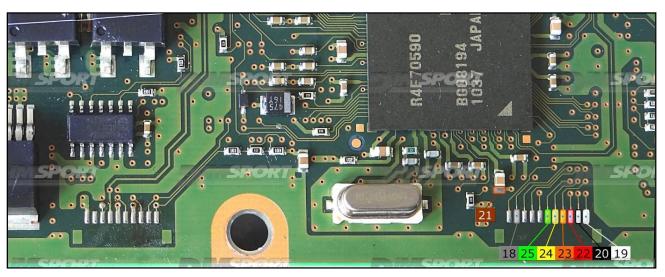


DIRECT CONNECTION – ECU WRITING:

For the WRITING procedure use the FLAT cable F34NTF51

139		
Din	Colore	
Pin	Colour	
1	Marrone	
	Brown	
2	Non usato	
	Not used	
3	Non usato	
	Not used Non usato	
4	Not used	
F	Verde	
5	Green	
6	Blu	
0	Blue	
7	Viola	
(Table 1)	Violet	
8	Grigio	
	Grey Non usato	
9	Not used	
	Nero Nero	
10	Black	

For the writing procedure it is necessary to perform the connections on both the ECU sides, remove the LINK after the writing operation.

Upper side:

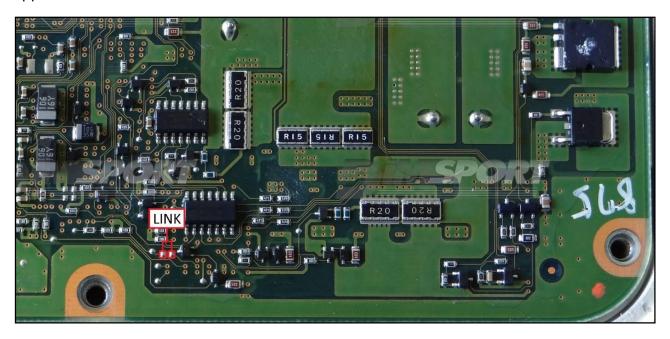

Lower side:

