

plugin 964

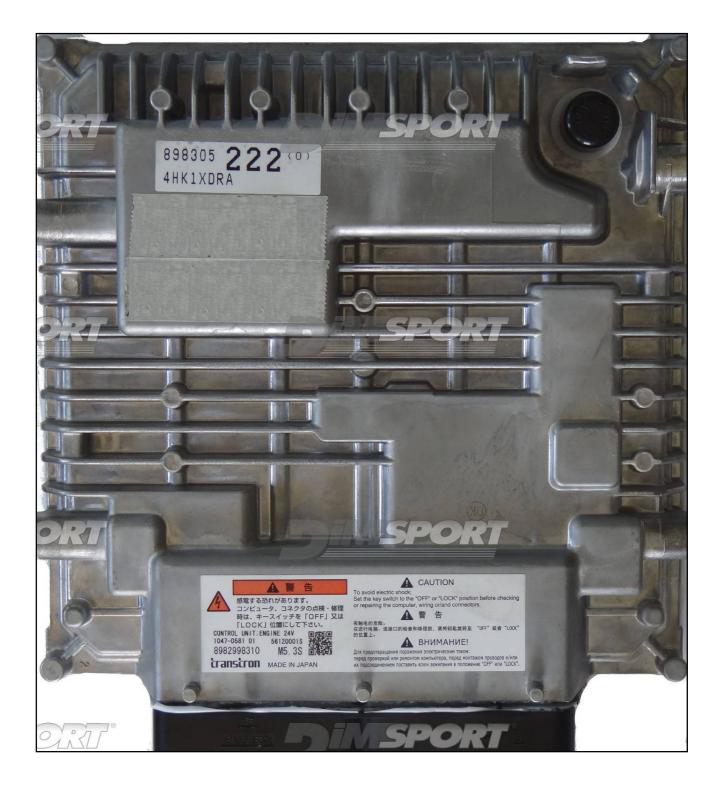

Side of the ecu for the reading & writing

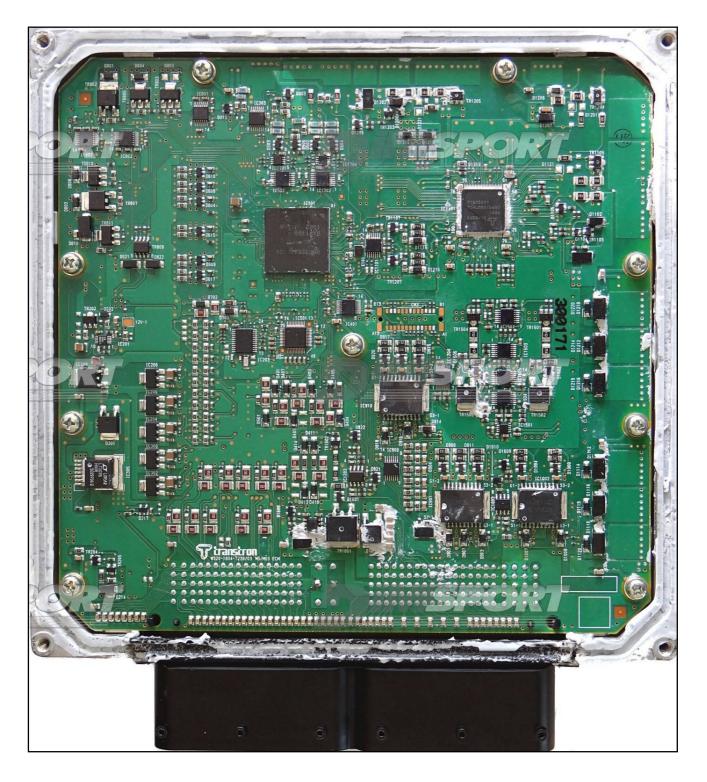

Side of the ecu for the writing




DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	ICAN HIGH	
GRIGIO GREY	POL4 BOOT	F3200057C
BLU BLUE	POL5 CNF1	Paramental A
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	- WHATHER -
MARRONE BROWN	RESET	

ECU CONNECTOR

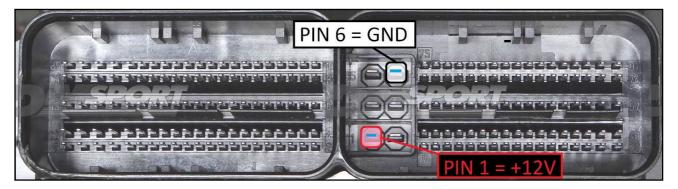



WARNING :

on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.

DIRECT CONNECTION – ECU READING:


For the READING procedure use the FLAT cable F34NTF53

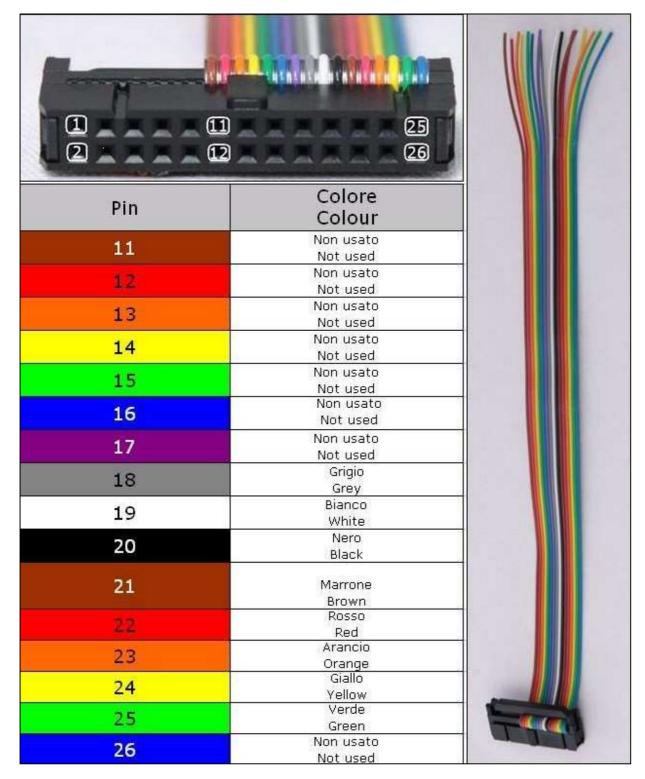

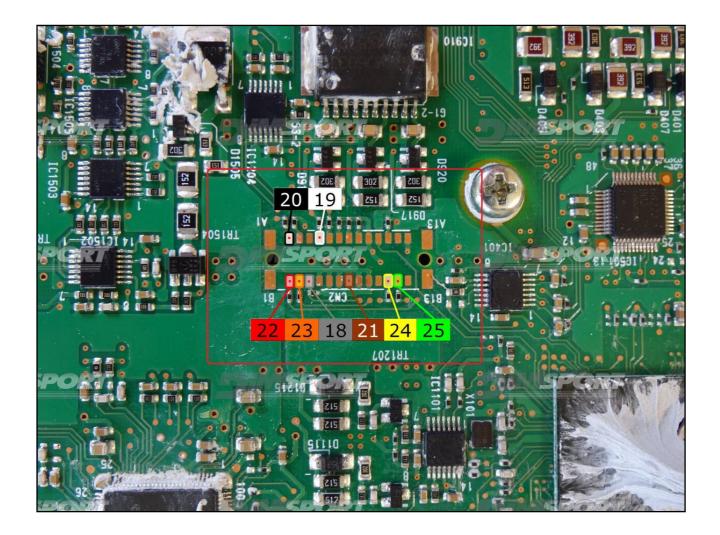

DIRECT CONNECTION – ECU WRITING:

For the WRITING procedure use the FLAT cable F34NTF51

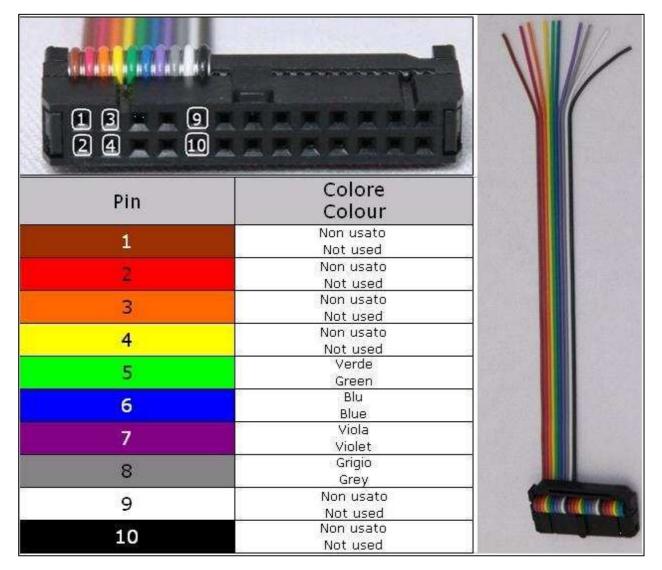

The pin 5 (green) and pin 6 (blue) are placed on the upper side of the ECU, the pin 7 (violet) and 8 (grey) are placed on the lower side of the ECU.

