


CONTINENTAL ACM MPC5534 BAM VOLVO TRUCK

plugin 1651,1652,1653

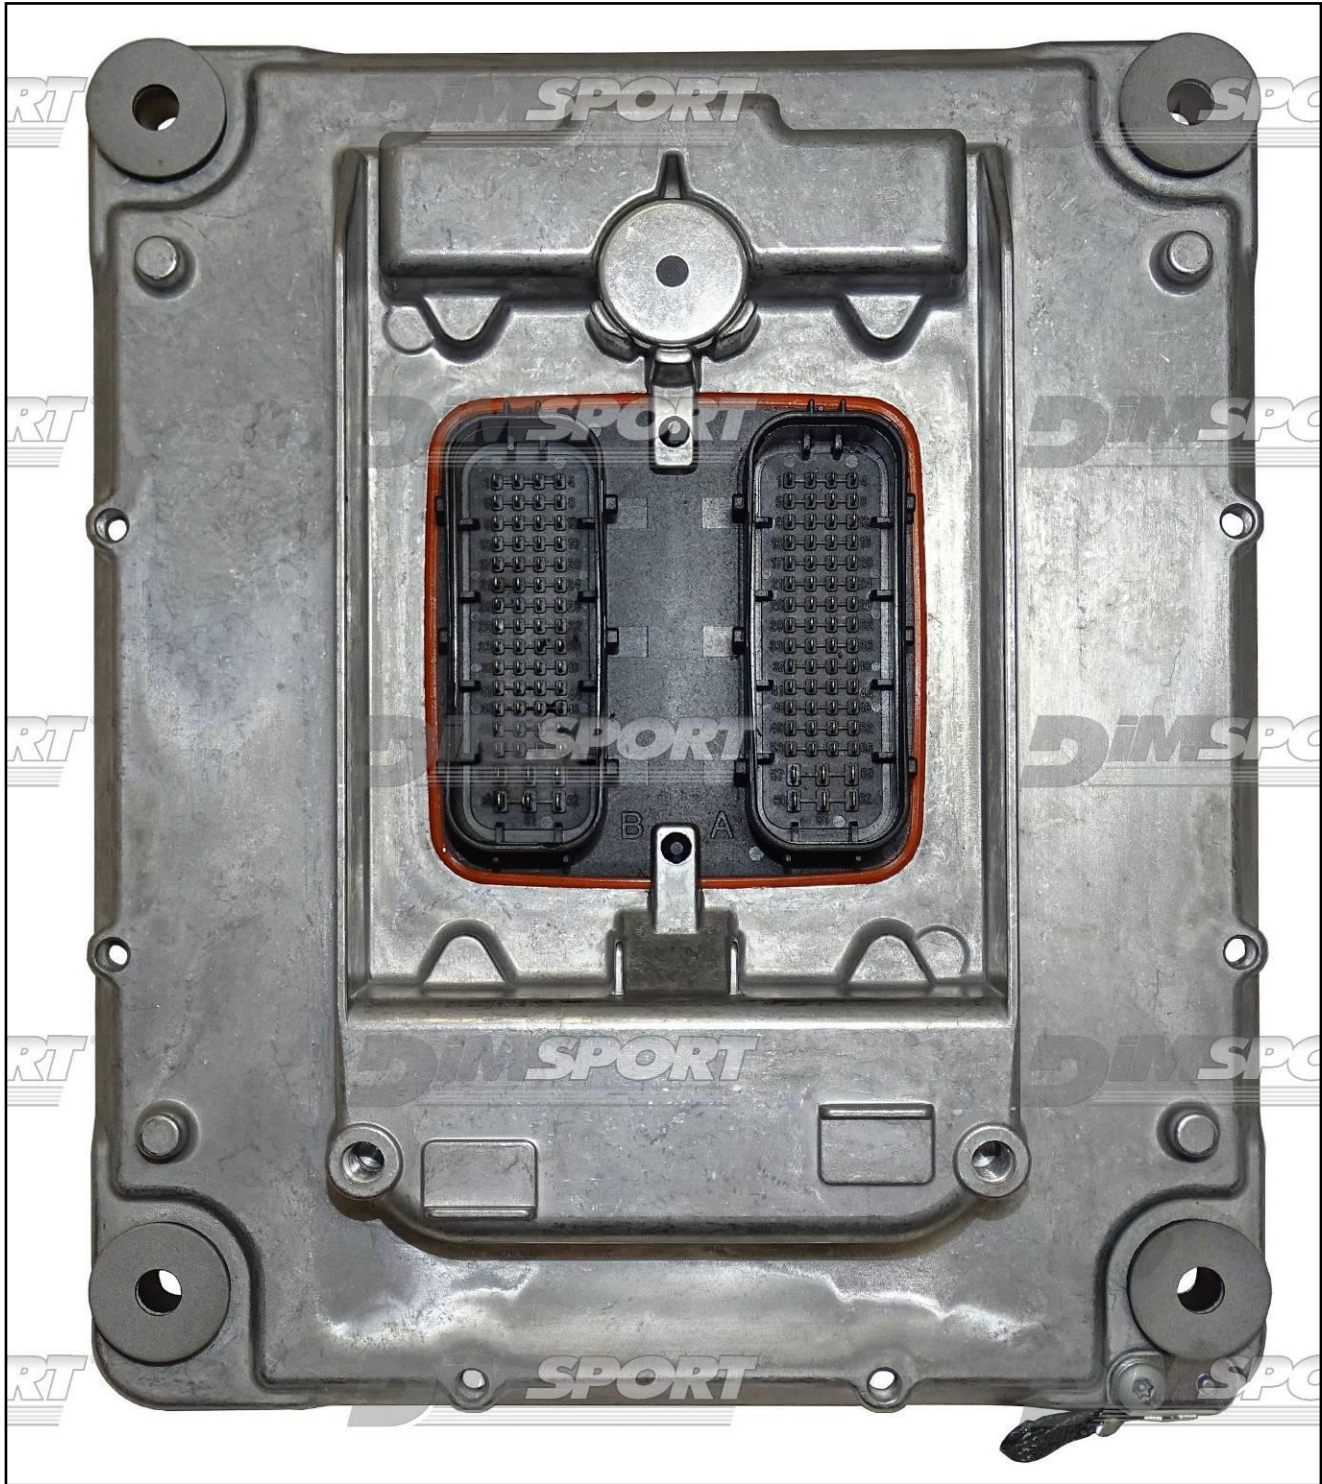

CONTINENTAL ACM MPC5534 BAM VOLVO TRUCK




CONTINENTAL ACM MPC5534 BAM VOLVO TRUCK

DIRECT CONNECTION

In order to connect to the ECU use the cable F32GN037C/D.
 Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

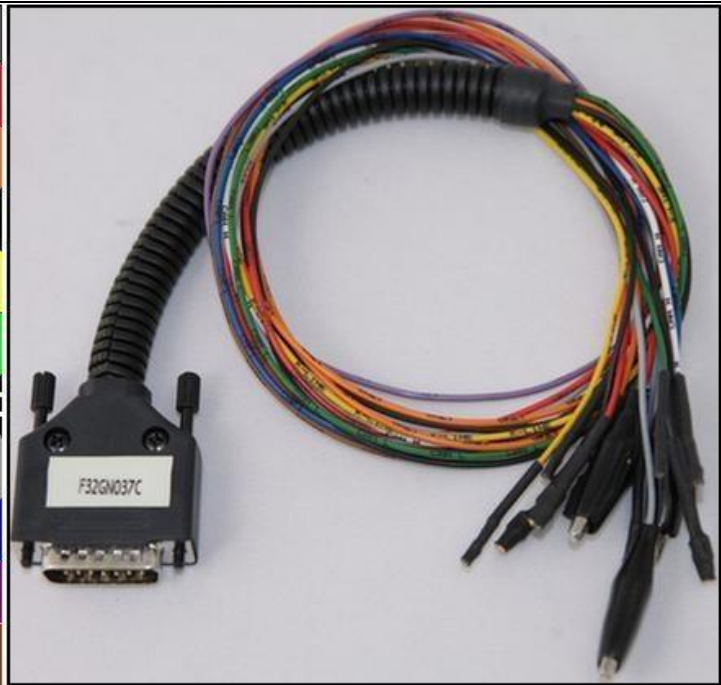


Due to the relevant power absorbed by the ECU at the beginning of the communication it is necessary to feed the ECU with an external power supply or a car battery. Connect the power cable F32GN003 to the Trasdata and then to the power source.

The ECU must be powered through the Trasdata using the F32GN037C/D cable. Use this connection also with the metal positioning frame kit. It is also possible to use a stabilized power supply to power Trasdata with 12Volt or 24Volt (it works in both cases)



CONTINENTAL ACM MPC5534 BAM VOLVO TRUCK

ECU CONNECTOR

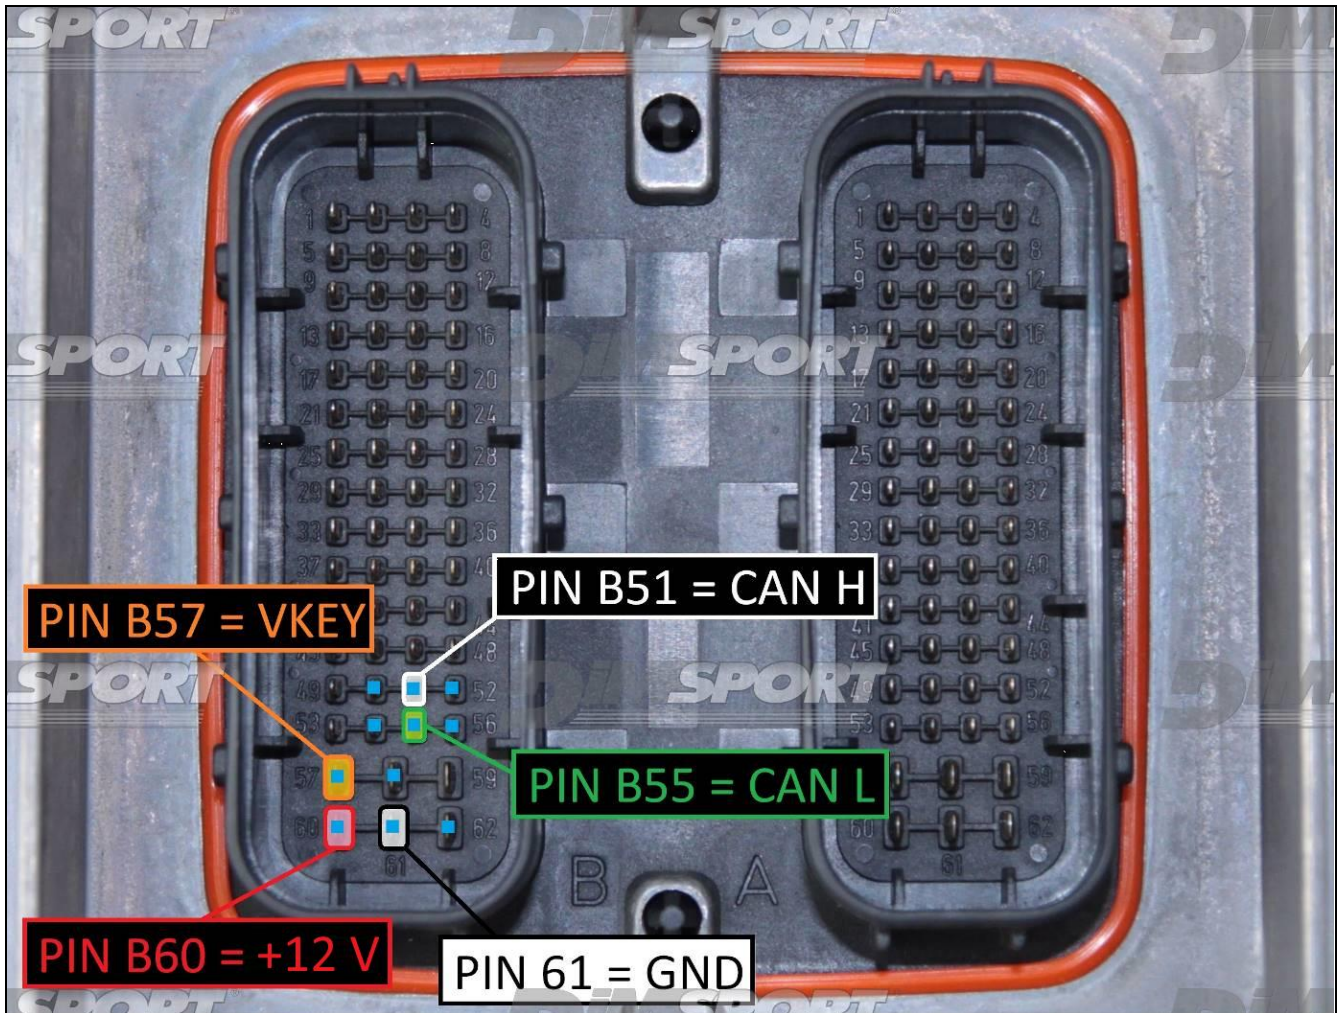

CONTINENTAL ACM MPC5534 BAM VOLVO TRUCK

DIRECT CNF1 CONNECTION

Connect the BLUE wire of the cable F32GN037C/D as described here below.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
BLU BLUE	CNF1

