


VALEO JOHNSON J34P PSA

plugin 122,211,491

The lay-by pins are located in the middle/right side of the ECU. In order to get access to them you must remove the silicon wax that covers the lay-by pin area.


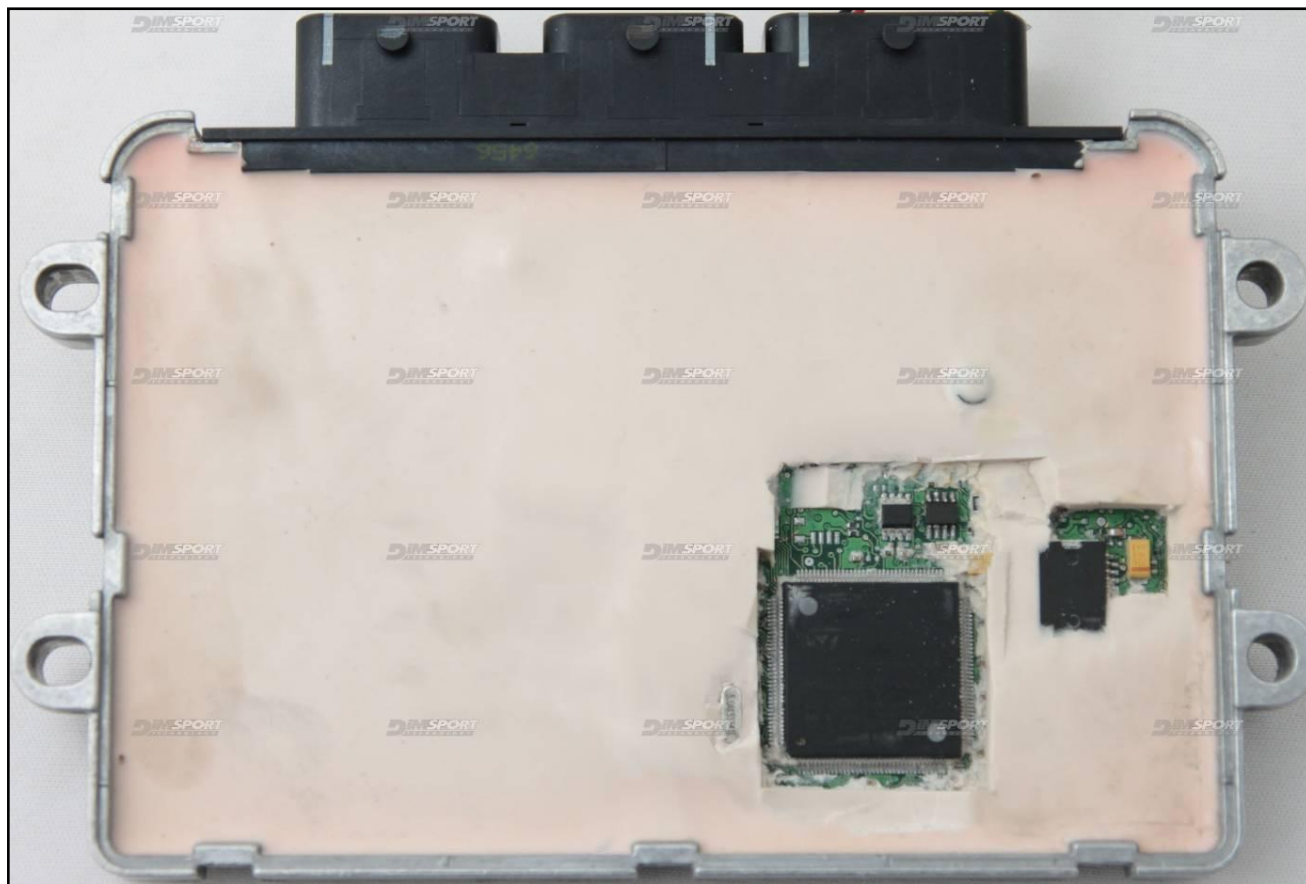


VALEO JOHNSON J34P PSA

DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C/D.
Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

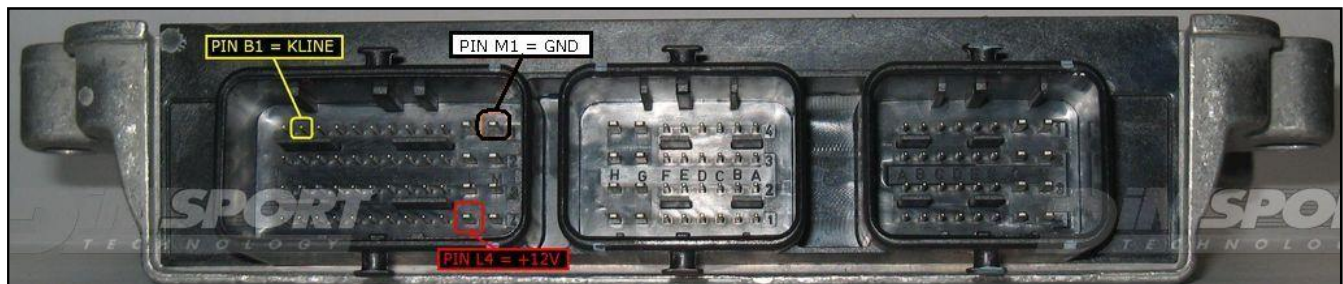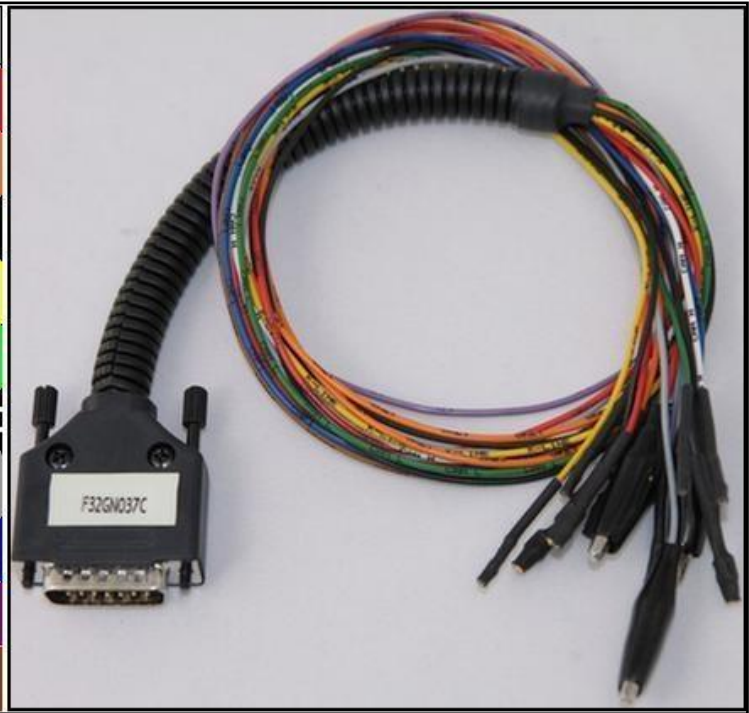

VALEO JOHNSON J34P PSA

BOOT&RESET CONNECTION

Connect the GREY and BROWN wires of the F32GN037C/D cable as shown here below.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
GRIGIO GREY	POL4 BOOT
MARRONE BROWN	RESET

